

G3 Ferrari G1015900

G3 Ferrari Café del Mar Coffee Maker User Manual

Model: G1015900

INTRODUCTION

Thank you for choosing the G3 Ferrari Café del Mar American Coffee Maker. This appliance is designed to provide you with delicious coffee quickly and conveniently. With a 0.6-liter capacity, it can brew up to 6 cups of coffee, and its drip-stop feature allows for brewing tea and herbal infusions as well. Please read this manual carefully before using the appliance to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your G3 Ferrari Café del Mar Coffee Maker:

- **Water Reservoir:** For filling with water. Features a water level indicator.
- **Filter Basket:** Holds the reusable nylon filter.
- **Reusable Nylon Filter:** For holding ground coffee.
- **Glass Carafe:** Collects the brewed coffee. Capacity up to 6 cups.
- **Heating Plate:** Keeps the carafe warm after brewing.
- **Power Button:** To turn the coffee maker on/off.
- **Lid:** Covers the water reservoir and filter basket area.



Image: The G3 Ferrari Café del Mar coffee maker, showing its compact black design with the glass carafe in place and coffee brewing.



Image: Close-up of the water level indicator on the side of the coffee maker, showing markings for up to 6 cups.

SETUP

1. **Unpack:** Carefully remove all packaging materials and dispose of them properly.
2. **Clean:** Before first use, wash the glass carafe, reusable filter, and filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **First Brew Cycle (Cleaning):**
 - Fill the water reservoir with clean water up to the MAX level (6 cups).
 - Place the empty reusable filter and filter basket into their designated positions.
 - Place the empty glass carafe on the heating plate.
 - Plug the coffee maker into a suitable electrical outlet.
 - Press the power button to start a brewing cycle without coffee.
 - Allow the cycle to complete. Discard the hot water from the carafe.
 - Repeat this cleaning cycle 2-3 times to ensure the appliance is thoroughly cleaned and free of any manufacturing residues.

OPERATING INSTRUCTIONS

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water. Use the water level indicator on the side to measure the desired number of cups (up to 6). Do not exceed the MAX fill line.
2. **Add Coffee Grounds:** Place the reusable nylon filter into the filter basket. Add the desired amount of ground coffee to the filter. A general guideline is one level tablespoon of coffee grounds per cup, but adjust to your taste. Close the lid securely.



Image: A close-up view of the reusable filter basket with ground coffee and a measuring spoon inside.

3. **Position Carafe:** Place the empty glass carafe with its lid on the heating plate, ensuring it is centered to activate the drip-stop mechanism.



Image: The empty glass carafe with its black lid and handle, ready to be placed on the coffee maker's heating plate.

4. **Start Brewing:** Plug the power cord into a standard electrical outlet. Press the power button. The indicator light will illuminate, signaling that the brewing process has begun.
5. **Brewing Complete:** The coffee maker will automatically stop brewing once the water reservoir is empty. The heating plate will keep the coffee warm.
6. **Serve:** Carefully remove the carafe from the heating plate and pour your freshly brewed coffee. The drip-stop feature will prevent coffee from dripping when the carafe is removed.
7. **Turn Off:** After serving, press the power button again to turn off the coffee maker and the heating plate. Unplug the appliance when not in use.

MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

1. **Daily Cleaning:**
 - Always unplug the coffee maker and allow it to cool completely before cleaning.
 - Remove the glass carafe, reusable filter, and filter basket. Discard used coffee grounds.
 - Wash the carafe, filter, and filter basket in warm, soapy water. Rinse thoroughly and dry. These parts are generally dishwasher safe (top rack only), but hand washing is recommended for

longevity.



Image: The reusable nylon filter, shown detached from the coffee maker, ready for cleaning.

- Wipe the exterior of the coffee maker and the heating plate with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit of the coffee maker in water or any other liquid.

2. Descaling (Monthly or Bi-Monthly):

Mineral deposits from water can build up over time and affect performance. Descale your coffee maker regularly.

- Mix a solution of white vinegar and water (1:2 ratio, e.g., 1 cup vinegar to 2 cups water).
- Pour the solution into the water reservoir.
- Place the empty carafe on the heating plate.
- Run a brewing cycle. Turn off the coffee maker halfway through the cycle and let it sit for 15-20 minutes to allow the solution to work.
- Resume the brewing cycle until complete.
- Discard the solution and run 2-3 cycles with fresh, clean water to rinse out any vinegar residue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in; power button not pressed; water reservoir empty.	Ensure unit is plugged in and power button is on. Fill water reservoir.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; coffee too finely/coarsely ground.	Adjust coffee amount. Use medium-ground coffee for drip machines.
Water overflows from filter basket.	Too much coffee grounds; filter clogged; carafe not properly placed.	Reduce coffee amount. Clean filter. Ensure carafe is fully seated on heating plate.
Coffee maker makes unusual noises.	Mineral buildup (needs descaling).	Perform a descaling cycle as described in the Maintenance section.

SPECIFICATIONS

- **Brand:** G3 Ferrari
- **Model Number:** G1015900
- **Color:** Black
- **Dimensions (L x W x H):** 14.5 x 16.5 x 26 cm (5.7 x 6.5 x 10.2 inches)
- **Weight:** 880 grams (1.94 lbs)
- **Capacity:** 600 Milliliters (approx. 6 cups)
- **Power:** 550 Watts
- **Voltage:** 240 Volts
- **Material:** Glass (carafe)
- **Special Feature:** Timer
- **Filter Type:** Reusable Nylon Filter
- **Manufacturer:** Trevidea S.R.L.
- **Country of Origin:** Italy

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official G3 Ferrari website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact G3 Ferrari customer service through their official channels. Please have your model number (G1015900) and purchase date ready when contacting support.

