

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LUXRILIX](#) /

› [Instruction Manual for W10810403 Washer Lid Lock](#)

**LUXRILIX w10810403 w10787836**

# Instruction Manual for W10810403 Washer Lid Lock

Model: w10810403 w10787836 | Brand: LUXRILIX

## PRODUCT OVERVIEW

The LUXRILIX W10810403 Washer Lid Lock is a replacement part designed to ensure the proper and safe operation of your washing machine. This component is crucial for the washer's lid to lock securely during wash and spin cycles, preventing water leaks and ensuring safety. It replaces several part numbers including W10787836, W10861642, and W10637463, offering a reliable solution for common washer malfunctions.



Image: The W10810403 Washer Lid Lock assembly, showing its main components and wiring.

## SPECIFICATIONS

Feature	Detail
Manufacturer	yl super products
Part Number	W10810403

Item Weight	8.3 ounces
Package Dimensions	11.26 x 3.62 x 2.24 inches
Item Model Number	w10810403 w10787836
Color	WHIITE
Material	Premium PBT material, pure copper wire, TPE layer
Included Components	W10810403 Washer Lid Lock Replacement



**Toughness durable  
water-proof PVC  
material**

**6-color copper wire  
Double row metal  
buckle**

**Fixed the wires  
of lock**

## VISIBLE DETAILS

**W10810403 lid lock is made of durable PBT material**

**Meets & Exceed OEM standards**



Image: Detailed view of the lid lock, highlighting its durable PBT material, 6-color copper wire, and double row metal buckle.

### COMPATIBILITY

The W10810403 washer lid lock is compatible with a wide range of washing machine models from various brands, including Whirlpool, Maytag, and Kenmore. It is designed to fit Maytag Bravos XL, Whirlpool Cabrio, and Kenmore 600/700 Series washers.

**Replaces Part Numbers:** W10787836, W10861642, W10648012, W10787878, W10810403VP, AP5984435, W10637463, W10632841, 4283179, PS11722981, EAP11722981, W10619844, W10059230,

W11188327, W10727693.

**Compatible Whirlpool Models include:** 7MWTW7000EW0, 7MWTW7300EW0, WTW7300DC0, WTW7300DW1, WTW8500DW1, WTW8040DW1, WTW7040DW1, WTW7000DW2, WTW8040DW2, WTW7300DW2, 7MWTW7000EW1, 7MWTW7300EW1, WTW8500DC1, WTW8500DC2, WTW8500DC3, WTW7040DW2, WTW8000DW1, WTW8500DR1, WTW8500DR2, WTW8500DR3, WTW8500DW2, WTW8500DW3, WTW7000DW1, WTW8500DC4.

**Compatible Maytag Bravos XL Models include:** 7MMVWB835EW0, MVWB755DW0, MVWB755DW1, MVWB765FW0, MVWB766FW0, MVWB855DW1, MVWB835DW2, MVWB855DC0, MVWB855DC1, MVWB855DC2, MVWB855DW0, MVWB855DW2, 7MMVWB835EW1, MVWB835DW3, MVWB765FW1, MVWB765FW2, MVWB766FW1, MVWB855DC3, MVWB855DW3, MVWB865GW0, MVWB765FW3, MVWB835DW4, MVWB757JW0, MVWB765FC4, MVWB765FW4, MVWB766FW2, MVWB835DW0, MVWB835DW1, MVWB835DW5, MVWB865GW1.

**Compatible Kenmore Models include:** 11026132411, 11027132411, 11028132411, 11028133411, 11029132411, 11029133411, 11026134610, 11020372710, 11026132412, 11027132412, 11028132412, 11028133412, 11029132412, 11029133412, 11020372711, 11026132413, 11027132413, 11028132413, 11028133413, 11029132413, 11029133413, 11029133410, 11029132410, 11026132410, 11026132414, 11027132410, 11028132410, 11028132414, 11028133410, 11029133414.

## WIDE COMPATIBILITY

- Compatible with crosley
- Compatible with maytag
- Compatible with kenmore
- Compatible with whirlpool



**W10810403**

Image: Visual representation of the lid lock's compatibility with Crosley, Maytag, Kenmore, and Whirlpool washers.

## COMPATIBLE WITH **WHIRLPOOL** MODEL

7MWTW7000EW0 7MWTW7300EW0 WTW7300DC0 WTW7300DW1 WTW8500DW1 WTW8040DW1  
WTW7040DW1 WTW7000DW2 WTW8040DW2 WTW7300DW2 7MWTW7000EW1 7MWTW7300EW1  
WTW8500DC1 WTW8500DC2 WTW8500DC3 WTW7040DW2 WTW8000DW1 WTW8500DR1  
WTW8500DR2 WTW8500DR3 WTW8500DW2 WTW8500DW3 WTW7000DW1 WTW8500DC4  
WTW8500DC5 WTW8500DR4 WTW8500DR5 WTW8500DW4 WTW8500DW5 WTW8000DW2  
WTW8000DW3 WTW8000DW4 WTW8000DW5 WTW7500GW0 WTW7000DW3 WTW7500GC0  
WTW8040DW3 WTW8040DW4 WTW7000DW4 WTW7000DW0 WTW7040DW0 WTW7300DW0  
WTW7500GC3 WTW7500GW3 WTW8000DW0 WTW8040DW0 WTW8500DC0 WTW8500DC6

## COMPATIBLE WITH **MAYTAG** MODEL

7MMVWB835EW0 MVWB755DW0 MVWB755DW1 MVWB765FW0 MVWB766FW0 MVWB855DW1  
MVWB835DW2 MVWB855DC0 MVWB855DC1 MVWB855DC2 MVWB855DW0 MVWB855DW2  
7MMVWB835EW1 MVWB835DW3 MVWB765FW1 MVWB765FW2 MVWB766FW1 MVWB855DC3  
MVWB855DW3 MVWB865GW0 MVWB765FW3 MVWB835DW4 MVWB757JW0 MVWB765FC4  
MVWB765FW4 MVWB766FW2 MVWB835DW0 MVWB835DW1 MVWB835DW5 MVWB865GW1

## COMPATIBLE WITH **KENMORE** MODEL

11026132411 11027132411 11028132411 11028133411 11029132411 11029133411 11026134610  
11020372710 11026132412 11027132412 11028132412 11028133412 11029132412 11029133412  
11020372711 11026132413 11027132413 11028132413 11028133413 11029132413 11029133413  
11029133410 11029132410 11026132410 11026132414 11027132410 11028132410 11028132414  
11028133410 11029133414

**IF YOU CAN'T FIND YOUR MODEL, PLEASE FEEL FREE TO CONTACT US**

Image: Comprehensive list of compatible Whirlpool, Maytag, and Kenmore washer models.

## INSTALLATION AND SETUP

Replacing the washer lid lock assembly is a straightforward process that can often be completed by following proper instructions. Before beginning any repair, always ensure the washing machine is unplugged from the power outlet to prevent electrical shock.

1. **Disconnect Power:** Unplug the washer from the electrical outlet.
2. **Access the Lid Lock:** Depending on your washer model, you may need to remove the top panel or access the lid lock from the front or back. Refer to your specific washer's service manual for precise access steps.
3. **Remove Old Lid Lock:** Carefully disconnect the wiring harness and unscrew the old lid lock assembly.
4. **Install New Lid Lock:** Position the new W10810403 lid lock assembly and secure it with screws. Connect the 6-color wire harness firmly.
5. **Secure Wiring:** Use the provided fixed lock to keep the wires tidy and prevent them from interfering with other components.
6. **Reassemble Washer:** Reattach any panels or components that were removed.
7. **Test Operation:** Plug the washer back in and test the lid lock function by starting a cycle.

For visual guidance, many helpful videos are available online. Searching for "W10810403 washer lid lock replacement" on video platforms can provide step-by-step demonstrations.



Image: Visual guide illustrating the ease of replacing the lid lock, including screwing it into position, tidying wires, and connecting the lock.

Your browser does not support the video tag.

Video: An official product video demonstrating the W10810403 Washer Lid Lock and its features, providing visual context for installation and function.

## OPERATING PRINCIPLE

Once installed, the W10810403 lid lock assembly functions as a safety mechanism. When a wash cycle begins, the lid lock engages, preventing the washer lid from being opened during operation. This ensures that water remains contained within the tub and that users are protected from moving parts. The washer's control board communicates with the lid lock, verifying its engaged status before allowing the wash or spin cycle to proceed. If the lid is not properly locked, the washer will typically pause or display an error code.

## MAINTENANCE

The W10810403 lid lock is designed for durability and long service life. Regular maintenance is generally

not required for this component. However, to ensure optimal performance and longevity:

- **Keep Area Clean:** Ensure the area around the lid lock mechanism is free from lint, debris, or detergent residue that could obstruct its operation.
- **Avoid Forceful Closing:** Always close the washer lid gently. Forceful slamming can put undue stress on the lid lock mechanism.
- **Inspect Wiring:** Periodically check the wiring connected to the lid lock for any signs of wear, fraying, or loose connections.

## TROUBLESHOOTING

The W10810403 lid lock is a common point of failure in washing machines. If your washer is experiencing issues related to the lid, the lid lock assembly may need replacement. Common symptoms and error codes that this part can fix include:

- Washer is flashing F5, F5 E1, or F5 E3 error codes.
- Washer does not spin.
- Lid or door does not open or close properly.
- Lid opens during wash and spin cycles.
- Washer manual indicates lid lock malfunction.
- Washer does not start.

If you encounter these symptoms, consider inspecting or replacing the lid lock. Always consult your washer's specific error code guide for detailed troubleshooting steps.



## Fix symptoms

- ✓ Washer does not spin
- ✓ F5, F5 E1, F5 E3 error code
- ✓ Lid or door won't open or close
- ✓ Lid opens during wash & spin cycles

**Maybe you need the lid lock**



Image: A visual summary of common washer symptoms that indicate a faulty lid lock, such as not spinning, error codes, or lid not opening/closing.

## WARRANTY AND SUPPORT

This product comes with a **1-year warranty**. If you have any questions regarding the compatibility or performance of the W10810403 lid lock, or if you are not satisfied with the product, please contact the manufacturer, yl super products, for assistance. They are committed to providing satisfactory solutions. For further support or to explore other products, visit the [LUXRILIX Store](#).