

ICUIRE ICD4WUP01

ICUIRE Portable Countertop Dishwasher User Manual

BRAND: ICUIRE

Model: ICD4WUP01

1. Product Overview

The ICUIRE Portable Countertop Dishwasher is designed for small living spaces such as apartments, dorms, RVs, and boats. It offers versatile washing programs and efficient drying capabilities without requiring permanent installation.

Key Features:

- **7 Washing Programs:** HEAVY, NORM, ECO, SPEEDY, INFANT, GLASS, and FRUIT modes.
- **No Installation Needed:** Supports both self-suction (bucket) and faucet water supply modes.
- **Hot Air-Dry Function:** 60-minute hot air drying (160°F) and 72-hour ventilated storage.
- **Compact Size, Large Capacity:** Measures 16.5 x 16.9 x 16.9 inches with a 3-4 place-setting capacity.
- **360° Spray:** Ensures thorough cleaning.
- **Fruit & Vegetable Soaking:** Dedicated function for cleaning produce.

2. What's in the Box

Upon unboxing, please ensure all the following components are present:

- ICUIRE Portable Countertop Dishwasher Unit
- Dish Basket
- Fruit Basket
- Power Cord
- Inlet Hose
- Water Adaptor (for faucet mode)
- Self-Suction Filter
- User's Manual (this document)

3. Setup

Placement:

Place the dishwasher on a stable, level surface. Ensure there is adequate space around the unit for ventilation and access to water and drainage connections. The compact design allows for flexible placement in various settings.



Figure 3.1: Dishwasher setup showing the unit and an external water bucket.

Water Supply Modes:

Your ICUIRE dishwasher supports two convenient water supply methods:

1. Self-Suction Mode (No Hookup Needed):

This mode is ideal for situations where a direct faucet connection is not available. Simply place the self-suction filter end of the inlet hose into an external water bucket (or any suitable water container). The dishwasher will automatically draw water as needed during the cycle.

160°F HOT WASHING & 360° SPRAY ARM

ICUIRE Dishwasher

118-160°F washing

Dry

Easy to use

VS

Hand Washing

68-86°F washing

Wet

Thrice a day



Figure 3.2: Self-suction water supply mode.

Video: ICUIRE COUNTERTOP DISHWASHER 2 water supply, NO NEED hookup.

Description: This video demonstrates the two water supply methods for the ICUIRE countertop dishwasher, including the self-suction mode using an external bucket.

2. Faucet Mode:

For direct connection, attach the inlet hose to your kitchen faucet using the provided water adaptor. This allows for a continuous water supply directly from your tap.

Up To 160°F high temperature cleaning



Figure 3.3: Faucet water supply mode.

Drainage:

Ensure the drain hose is properly positioned to discharge water into a sink or a larger bucket. The dishwasher's interior features an integrated design to minimize water leakage during operation.

4. Operating Instructions

Control Panel:

The LED touch screen display is angled for improved visibility and ease of use. It provides access to all washing programs and functions.

7 Wash Cycles

Meet you more different dishwashing needs



Figure 4.1: Control panel with program selection.

Loading Dishes:

Despite its compact size, the dishwasher has a 3-4 place-setting capacity and can fit up to 10-inch dishes when loaded at an angle. The top-load design optimizes space utilization.

- Load dishes, bowls, cups, and cutlery into the designated basket.
- Ensure items do not obstruct the spray arm's rotation.

Top Load Design, Space-Saving

Top load not only saves space but the capacity is larger

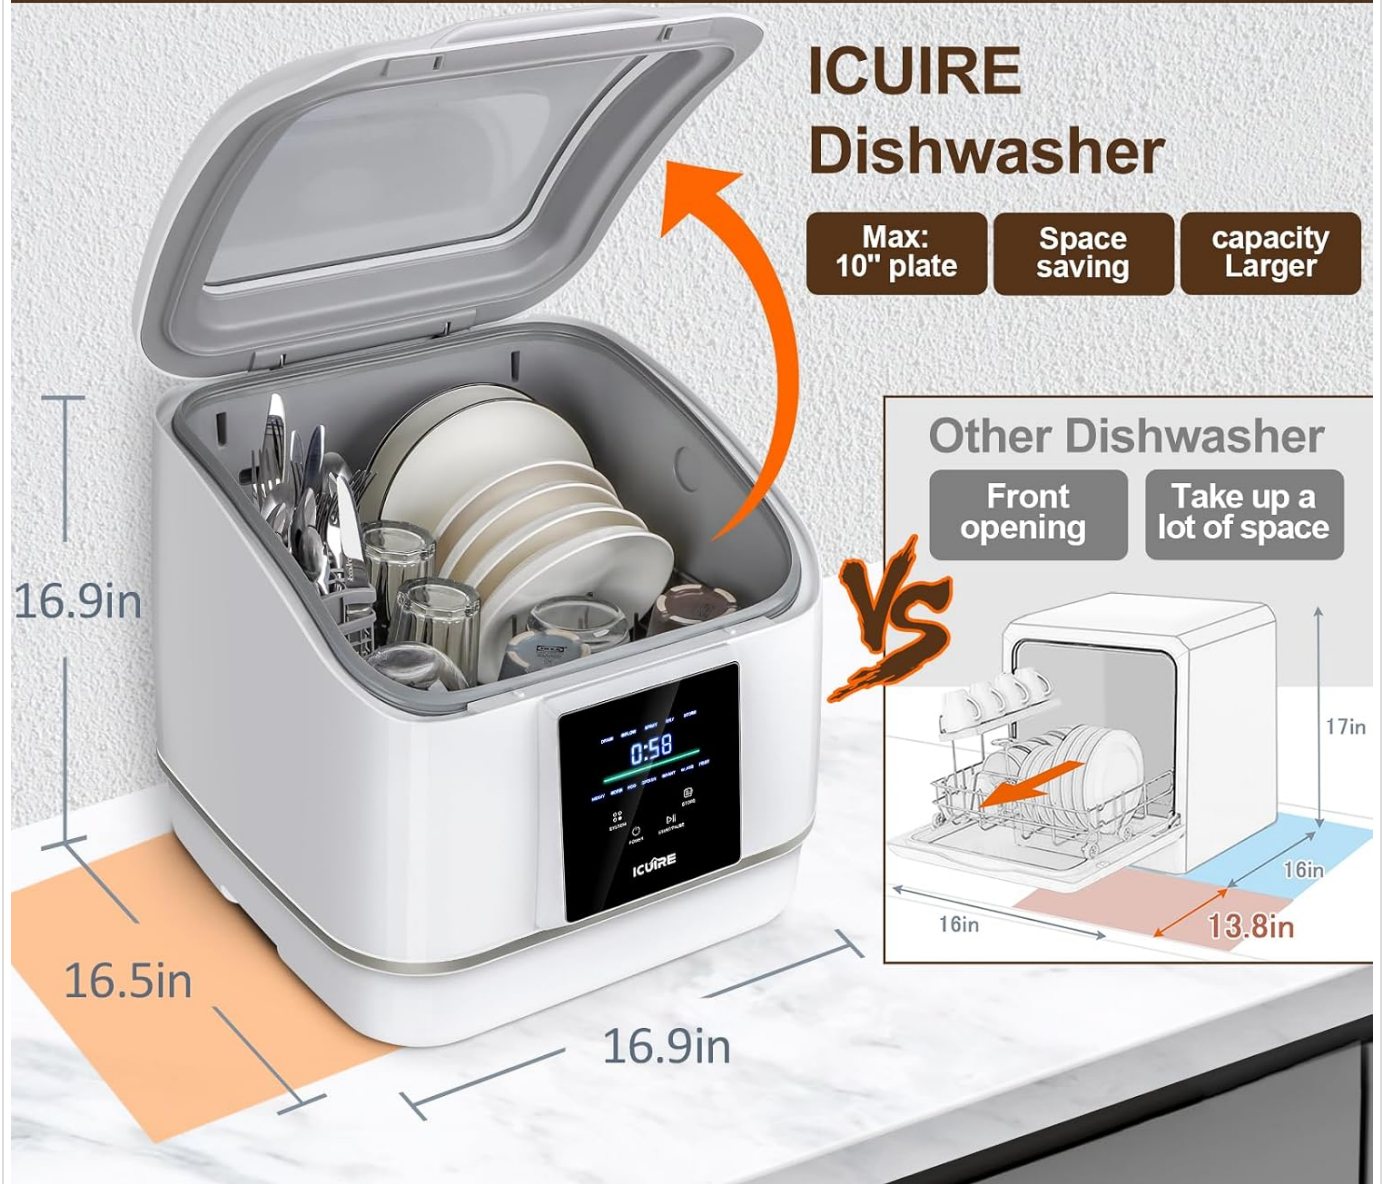


Figure 4.2: Example of dish loading capacity.

Detergent Usage:

Place a dishwasher detergent pod or powder directly into the filter area at the bottom of the unit before starting a cycle.

Selecting a Program:

Tap the 'System' button on the control panel to cycle through the 7 available wash programs: HEAVY, NORM, ECO, SPEEDY, INFANT, GLASS, and FRUIT. The selected program and its duration will be displayed.

Video: ICUIRE Portable Dishwasher built in 7 Programs to wash dish.

Description: This video illustrates how to select and use the 7 different washing programs available on the ICUIRE portable dishwasher.

Drying Function:

After the wash cycle is complete, a 60-minute hot air drying function (160°F) will automatically start to ensure dishes are dry and odorless. An additional 'STORE' mode provides 72-hour ventilated storage to prevent odors and maintain freshness.

HOT AIR CIRCULATION DRYING

Effectively prevent the tableware from being secondary pollution and breed bacteria



Figure 4.4: Hot air circulation drying.

Fruit Wash Function:

Utilize the included fruit basket for washing fruits and vegetables. The dedicated FRUIT mode combines high-pressure spray with soaking to thoroughly clean produce.

Video: ICUIRE Dishwasher -Professionally wash fruits, eat healthier

Description: This video demonstrates the fruit washing capability of the ICUIRE dishwasher, highlighting its effectiveness in cleaning fruits and vegetables.

5. Maintenance

Cleaning the Filter:

Regularly check and clean the filter located at the bottom of the dishwasher to ensure optimal performance and prevent blockages. Refer to the operation guide for detailed instructions on filter removal and cleaning.

Exterior Cleaning:

Wipe the exterior of the dishwasher with a soft, damp cloth. Avoid abrasive cleaners that may damage the surface.

Storage:

If storing the dishwasher for an extended period, ensure it is completely dry. The 'STORE' mode can be used for 72-hour ventilated storage to prevent odors and maintain freshness.

6. Troubleshooting

If you encounter any issues with your dishwasher, please refer to the following common troubleshooting tips:

- **Error Code E4:** This code may indicate an issue with the inlet pump or water supply. Ensure the water supply hose is correctly connected and there is sufficient water in the external bucket (if using self-suction mode).
- **Water Leakage:** Verify that the top lid is securely closed and the interior is properly aligned. The integrated design helps prevent leaks, but improper closure can lead to spills.
- **Dishes Not Clean:** Ensure dishes are loaded correctly and do not obstruct the spray arm. Use the appropriate amount of detergent and select a suitable wash program for the soil level. Pre-rinsing heavily soiled dishes is recommended.
- **Unusual Noise:** Check for any foreign objects inside the dishwasher that might be interfering with the spray arm or pump.

For persistent issues or technical support, please contact ICUIRE customer service.

7. Specifications

Feature	Detail
Model	ICD4WUP01
Item Weight	26.6 pounds
Product Dimensions	16.5 x 16.9 x 16.9 inches
Capacity	2.11 Gallons (7.99L)
Power	950W
Voltage	110 Volts (AC)
Control Console	Touch
Wash Cycles	7 Options (HEAVY, NORM, ECO, SPEEDY, INFANT, GLASS, FRUIT)
Water Supply Modes	Self-suction or Faucet Mode
Material Type	Acrylonitrile Butadiene Styrene (ABS)
Noise Level	55 dB
Special Features	Fruit & Vegetable Soaking, Ultra-Compact Design, Heated Dry, Adjustable Rack, 360° High pressure rotating spray

8. Warranty and Support

For warranty information and customer support, please refer to the official ICUIRE brand store or the user manual PDF provided with your purchase.

- Official User Manual (PDF): [Download PDF](#)
- Visit the ICUIRE Store: [ICUIRE Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question