

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PTHTECHUS](#) /

› [PTHTECHUS Smart Watch for Kids User Manual](#)

## PTHTECHUS X32GMW-Blue

# PTHTECHUS Smart Watch for Kids

## USER MANUAL

### 1. Introduction

Thank you for choosing the PTHTECHUS Smart Watch for Kids. This multi-functional device is designed to provide entertainment and practical tools for children aged 4-12. It features dual cameras, an MP3 music player, 24 built-in games, a voice recorder, pedometer, alarm clock, calculator, and flashlight. All functions are built directly into the watch, requiring no external app downloads or phone connections for operation.

### 2. What's in the Box

- PTHTECHUS Smart Watch
- Charging Cable
- User Manual
- Memory Card (pre-installed)

### 3. Key Features

- **Dual Cameras:** Capture photos and videos with a HD camera (0.3 MP resolution) and a selfie camera with fun stickers.
- **24 Educational Games:** Engage in popular games to train logic and reaction skills on a 1.45-inch HD touch screen.
- **Powerful Media Player:** Play MP3 music from the included memory card and use the built-in voice recorder.
- **Useful Functions:** Includes 3 alarm clocks, 5 national languages, customizable wallpapers, timer, stopwatch, flashlight, calendar, calculator, time and date display, school mode, and pedometer.
- **Easy to Operate:** No apps or phone connection required; all functions are integrated into the watch.

### 4. Setup Guide

#### 4.1 Charging the Smart Watch

Before first use, fully charge the smart watch. Connect the included charging cable to the watch's charging port and plug the other end into a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the battery status. A full charge typically takes 2-3 hours.

## 4.2 Power On/Off

- **To Power On:** Press and hold the Power button (usually on the side) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Power button for a few seconds until a power-off option appears on the screen. Tap to confirm.

## 4.3 Initial Setup (Time, Date, Language)

Upon first power-on or after a reset, you may need to set the time, date, and language. Navigate to the 'Settings' menu on the watch screen. Select 'Time and Date' to adjust the current time and date. Choose 'Language' to select your preferred language from the available options (English, French, Spanish, Italian, German).



Image: Front view of the PTHTECHUS Smart Watch, showing the display and dual cameras.

## 5. Operating Instructions

### 5.1 Navigation

The smart watch features a touch screen for easy navigation. Swipe left or right to browse through different applications and functions. Tap on an icon to open the corresponding application. The physical button on the side typically serves as a power button or a back/home button depending on the context.

### 5.2 Camera and Video Recording

The watch is equipped with dual cameras: a main camera and a selfie camera. You can switch between them

within the camera application. The camera also includes fun stickers to enhance photos.

- Open the 'Camera' application.
- Tap the camera icon to take a photo.
- Tap the video icon to start recording a video. Tap again to stop.
- Use the arrow icons to browse through fun stickers and filters.
- Photos and videos are saved to the internal memory or the installed memory card.



Image: Illustration of the smart watch's dual camera functionality, showing both front and side cameras and examples of fun photo stickers.

### 5.3 Music Player

The watch supports MP3 music playback. Music files should be copied to the 'My Music' folder on the memory card for the player to recognize them.

- Connect the watch to a computer using the charging cable.
- Locate the watch's storage drive on your computer.
- Copy MP3 files into the 'My Music' folder.
- Disconnect the watch safely.
- Open the 'Music' application on the watch to play your songs.



Image: A child enjoying music from the smart watch, with icons for music, video, and camera functions.

#### 5.4 Games

The watch comes with 24 pre-installed educational games designed to improve logic and reaction skills.

- Open the 'Games' application.
- Select a game from the list to start playing.



Image: Children interacting with the smart watch, highlighting the 24 built-in puzzle games.

#### 5.5 Pedometer

The built-in pedometer tracks steps and estimated calories burned.

- Open the 'Pedometer' application.
- Tap 'Start' to begin tracking.
- Tap 'Pause' or 'Stop' as needed.



Image: A child running, with an inset showing the smart watch display with pedometer readings.

## 5.6 Alarm Clock

Set up to 3 alarms to help with daily routines.

- Open the 'Alarm' application.
- Select an alarm slot and tap 'Edit'.
- Set the time, repeat days, and status (On/Off).
- Tap 'Save' to confirm.



Image: Illustrations of the calculator and alarm clock functions on the smart watch.

## 5.7 Calculator

Perform basic arithmetic calculations.

- Open the 'Calculator' application.
- Use the touch screen keypad to input numbers and operations.

## 5.8 Flashlight

Activate the built-in flashlight for convenience.

- Open the 'Flashlight' application.

- Tap 'On' to turn on the flashlight. Tap 'Off' to turn it off.

## 5.9 Voice Recorder

Record and save voice memos.

- Open the 'Recorder' application.
- Tap the record button to start recording. Tap again to stop.
- Recordings are saved and can be played back from the application.

## 5.10 Calendar

View the current date and navigate through months.

- Open the 'Calendar' application.
- Swipe to navigate between months.

## 5.11 School Mode / Silent Profile

Set specific times or activate a silent profile to avoid distractions, especially during school hours.

- Navigate to 'Settings'.
- Select 'School Mode' to set specific time intervals for silent operation.
- Alternatively, select 'Silent Profile' to activate silent mode immediately.

## 5.12 Product Operation Video

Watch this video for a visual guide on operating the PTHTECHUS Smart Watch for Kids, demonstrating various features and navigation.

---

Video: A demonstration of the PTHTECHUS X32 Kids Smart Watch's intelligent game and music functions, along with other operational features.

## 6. Troubleshooting

- **Watch not turning on:** Ensure the watch is fully charged. Connect it to the charger and wait a few minutes before attempting to power on again.
- **Screen unresponsive:** Try restarting the watch by holding down the power button. If unresponsive, allow the battery to fully drain and then recharge.
- **Music not playing:** Verify that MP3 files are correctly placed in the 'My Music' folder on the memory card. Ensure the memory card is properly inserted.
- **Functions not working as expected:** Check the settings menu for any specific configurations related to the function. If issues persist, a factory reset (found in settings) might resolve them, but this will erase all user data.

## 7. Specifications

Attribute	Value
Brand	PTHTECHUS
Model Name	X32GMW

Item Model Number	X32GMW-Blue
Product Dimensions	8.66 x 1.18 x 0.39 inches
Item Weight	1.76 ounces (50 Grams)
Screen Size	1.54 Inches
Visible Screen Diagonal	2" / 4 cm
Battery	1 Lithium Polymer battery (included)
Connectivity Technology	USB
Special Features	Games, Alarm Clock, Camera, Pedometer, Music Player
GPS	No GPS

## 8. Warranty and Support

PTHTECHUS is committed to providing quality products. For any product-related issues, technical support, or warranty inquiries, please contact PTHTECHUS customer service through the platform where you purchased the product. Please retain your proof of purchase for warranty claims.