

[Manuals.plus](#) /

› [Lxcom Lighting](#) /

› Lxcom Lighting Clear TV Key Digital Indoor Antenna User Manual

Lxcom Lighting Clear TV Key Digital Indoor Antenna

Clear TV Key Digital Indoor Antenna

User Instruction Manual

Brand: Lxcom Lighting

1. INTRODUCTION

The Lxcom Lighting Clear TV Key Digital Indoor Antenna is a compact and innovative solution designed to receive free digital and high-definition television broadcasts. This antenna allows you to access local news, weather, sports, and popular network shows without monthly subscription fees. Its razor-thin, multi-directional design ensures easy placement and optimal signal reception from various directions.

2. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Keep the antenna away from heat sources and direct sunlight. Do not attempt to disassemble or modify the antenna. Use only as intended for receiving television signals.

3. PACKAGE CONTENTS

Before starting your installation, please check the contents of your package:

- 1 x Clear TV Key Antenna
- 2 x Suction Cups



Image: Clear TV Key antenna and the two included suction cups.

4. PRODUCT FEATURES

- Innovative, razor-thin antenna design.
- Receives digital and HDTV channels.
- Multi-directional design pulls in signals from all directions.
- Easy installation, no assembly required.
- Suction fasteners for easy setup and placement.
- No monthly fees for TV programs.
- Signal booster for crisp digital and HD broadcasts.
- Plug and play functionality, no driver or software needed.

5. SPECIFICATIONS

Specification	Value
Product Type	TV Key Antenna
Color	Black
Material	ABS
Maximum Range	35 Miles
Gain	7db
SWR	≤1.5
Impedance	5 Ohm
Working Voltage	3-5V
Connector Type	Female Coaxial
Dimensions (L x W x H)	11.8" x 1.26" x 1.26" (300mm x 32mm x 32mm)
Item Weight	2.39 ounces (approx. 70g)

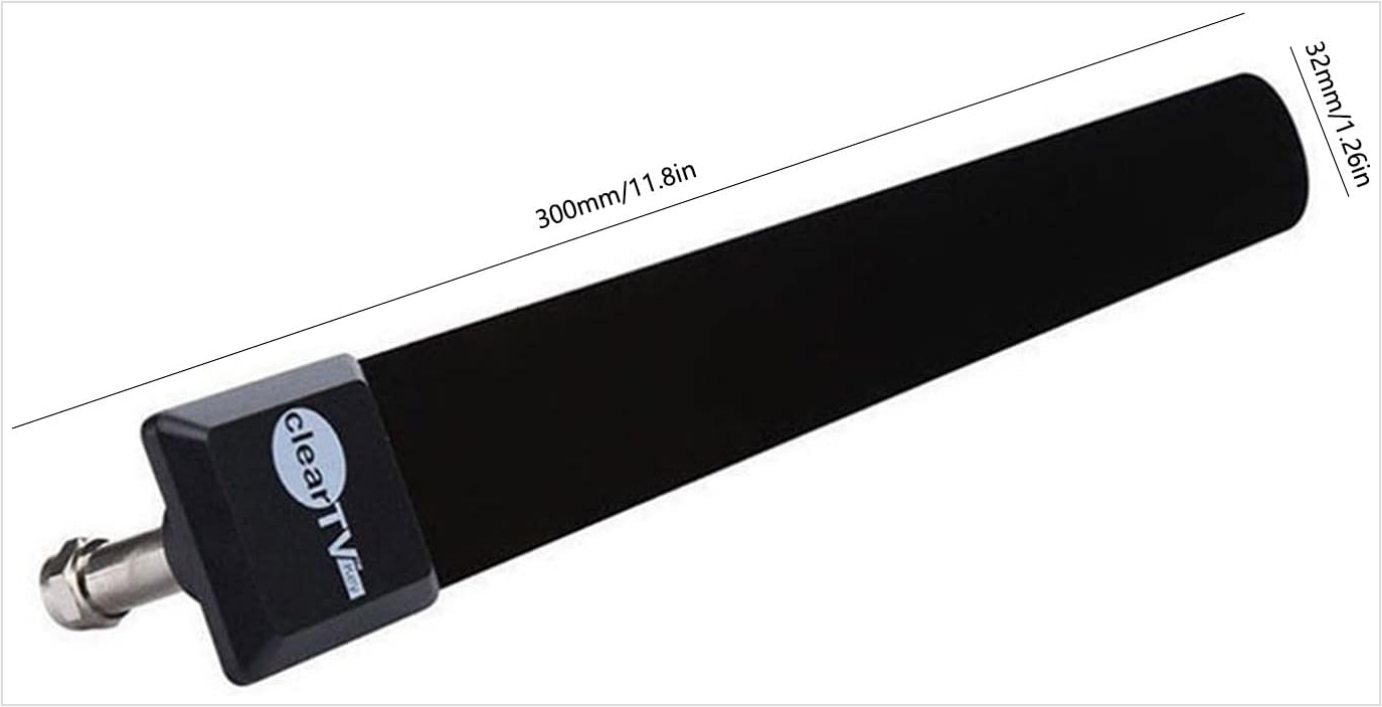


Image: Antenna with its approximate dimensions.

6. INSTALLATION GUIDE

Follow these steps for proper installation of your Clear TV Key Antenna:

Step 1: Connecting Antenna

Attach the mini coax cable, which is the small black cable coming from the antenna. Simply screw the connector into the **Antenna In** or **Cable In** port on the back of your television.

IMPORTANT! Your TV must be a digital TV to receive a digital HD broadcast.



Image: Close-up of the antenna's coaxial connector.

Step 2A: Mounting Antenna to Window (Preferred)

Firmly push the suction cups into place along the top of the windowpane. Use caution when applying pressure to the glass window.

Step 2B: Mounting Antenna to Wall

For mounting your antenna on a wall, simply remove the suction cups and use the holes to mount your antenna in your desired location. It is recommended to use tape to temporarily stick the antenna to the wall before permanently mounting with screws (screws not included).

Easy to Install



Image: Demonstrating the antenna's slim design for easy handling and placement.

Step 3: Auto Program Scan

Using your TV's remote control, navigate to the system menu and set the TV's input to **ANTENNA**. Then, begin an auto search or auto program to find new stations. The exact steps may vary depending on your TV model.

Step 4: Adjust Antenna Location

To maximize the number of stations received, you may need to adjust or reposition the antenna. Try placement in alternate locations and re-scan for new channels. We recommend the antenna be used within 35 miles of the broadcasting towers for optimal performance.



Image: Antenna setup illustrating free 1080P signal reception.

7. OPERATION

Once the antenna is connected and your TV has completed the auto program scan, you can begin watching free over-the-air digital and HD channels. Use your TV's channel up/down buttons or input the channel number directly to navigate

between available stations.

8. MAINTENANCE

The Clear TV Key Antenna requires minimal maintenance. Keep the antenna clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners. Ensure the coaxial connection remains secure.

9. TROUBLESHOOTING

- **No Signal / Few Channels:**

- Ensure the antenna is securely connected to the TV's 'Antenna In' or 'Cable In' port.
- Perform another auto program scan on your TV.
- Try repositioning the antenna to a different location, preferably higher up or closer to a window. Walls and large objects can block signals.
- Check if you are within the 35-mile range of broadcasting towers. Signal strength can vary based on geographical location and terrain.

- **Poor Picture Quality:**

- Adjust the antenna's position slightly to fine-tune the signal.
- Ensure there are no strong electromagnetic interference sources nearby (e.g., large electronic appliances).

- **Antenna Not Sticking with Suction Cups:**

- Ensure the surface is clean and dry before applying suction cups.
- Press firmly on the suction cups to remove any air.

10. IMPORTANT NOTES

- Always install the product correctly according to this instruction manual.
- This antenna acts as a signal booster. Before purchasing or relying on this product, please verify that there are broadcast signal towers within range of your location. Performance may vary based on local signal availability and environmental factors.

11. WARRANTY & SUPPORT

For any questions or support regarding your Lxcom Lighting Clear TV Key Digital Indoor Antenna, please refer to the retailer's return policy or contact Lxcom Lighting customer service through their official channels. Please retain your proof of purchase for warranty claims, if applicable.

© 2024 Lxcom Lighting. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09ZHVJKP2>

More documents and user manuals: <https://manuals.plus/>