

Whirlpool ACE 7.5 TRB DRY MAX

Whirlpool ACE 7.5 TRB DRY MAX Semi-Automatic Washing Machine User Manual

Model: ACE 7.5 TRB DRY MAX

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool 7.5 Kg 5 Star Turbo Dry Semi-Automatic Top Loading Washing Machine. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1.1: Front view of the Whirlpool ACE 7.5 TRB DRY MAX Semi-Automatic Washing Machine.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is connected to a properly grounded electrical outlet.
- Do not operate the machine with a damaged power cord or plug.

- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Never reach into the machine while it is operating.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or freezing temperatures.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials. Check that all included components are present: washing machine, spin cap, detergent box, and drain hose.

3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. The dimensions of the appliance are approximately 50.7 cm (Depth) x 89 cm (Width) x 95.6 cm (Height). The machine features easy mobility with integrated wheels for convenient relocation.



Image 3.1: Side view illustrating the dimensions of the washing machine.



Image 3.2: Illustration of the washing machine's easy mobility feature.

3.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.

3.4 Drainage

Position the drain hose to allow for proper water discharge. Ensure the hose is not kinked or blocked.



Image 3.3: Rear view showing the power cord and drain hose connections.

3.5 Power Connection

Plug the power cord into a 230 Volt, 50 Hz, AC electrical outlet. Ensure the outlet is properly grounded.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the wash tub lid and load clothes loosely. Do not overload the machine; the maximum capacity is 7.5 kg. For optimal washing, ensure clothes can move freely.

3 Wash Programs



Image 4.1: Top view of the washing machine with wash and spin tubs open.

4.2 Adding Detergent

Add the recommended amount of detergent to the detergent box. For best results, refer to your detergent's instructions.

4.3 Selecting Wash Program

Turn the 'Fabric Type' dial to select one of the 5 available wash programs **Delicate**, **Normal**, or **Heavy**. The machine also features a Hard Water Wash option, which adapts programs for effective cleaning in hard water conditions.

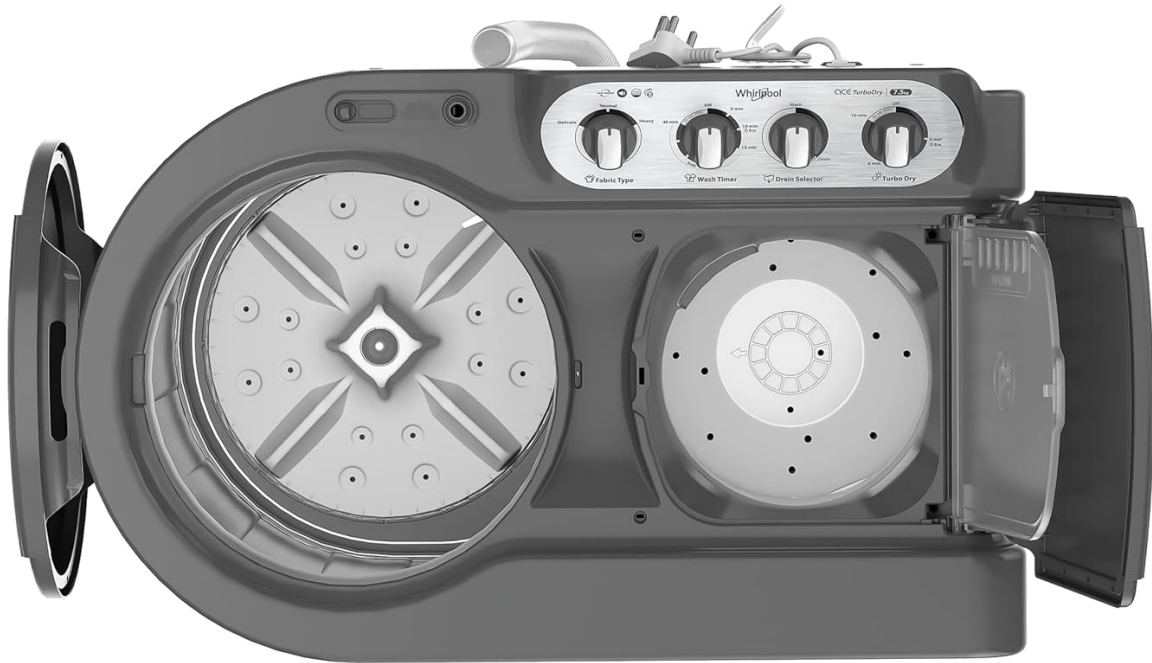 


Image 4.2: Close-up of the control panel with various dials and push buttons.



Image 4.3: Detail of the wash programs dial, showing Delicate, Normal, and Heavy settings.



Image 4.4: Visual representation of the Hard Water Wash feature.

4.4 Wash Cycle

Fill the wash tub with water to the desired level. Set the wash timer according to the fabric type and soil level. The machine's Smart Scrub Station assists in pre-treating tough stains.



Image 4.5: The Smart Scrub Station for pre-treating clothes.

4.5 Spin Cycle

After the wash cycle, transfer clothes to the spin tub. Place the spin cap over the laundry. Close the spin tub lid and set the spin timer. The machine features a 1400 RPM motor for faster drying and Turbo Dry technology for efficient water removal.



Image 4.6: The Turbo Dry dial for selecting spin duration.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Cleaning the Lint Filter

The machine is equipped with a lint filter to collect lint and debris during washing. Regularly remove and clean the lint filter to maintain washing efficiency.



Image 5.1: Location and appearance of the lint filter.

5.2 Cleaning the Wash Tub

After each use, wipe down the interior of the wash tub to prevent detergent residue buildup. Periodically, run an empty wash cycle with a tub cleaner to remove any accumulated grime.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners. The machine features a rust-proof plastic body for durability.

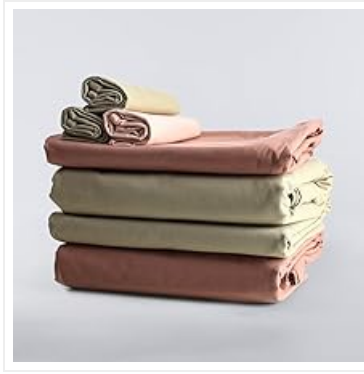 


Image 5.2: Illustration highlighting the rust-proof body feature.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; power outage; lid not closed properly.	Check power connection; check household fuse/breaker; ensure lids are securely closed.
No water filling	Water tap closed; water inlet hose kinked; water supply issue.	Open water tap; straighten hose; check household water supply.
Water not draining	Drain hose kinked or blocked; lint filter clogged.	Straighten/clear drain hose; clean lint filter.
Excessive vibration/noise	Machine not level; uneven load; foreign objects in tub.	Adjust leveling feet; redistribute laundry evenly; check for and remove foreign objects.

7. SPECIFICATIONS

- **Model Name:** ACE 7.5 TRB DRY MAX
- **Capacity:** 7.5 Kilograms
- **Energy Rating:** 5 Star (Best in class efficiency)
- **Operation Mode:** Semi-Automatic
- **Access Location:** Top Load
- **Wash Programs:** 5 (Delicate, Normal, Heavy)
- **Max Rotational Speed:** 1400 RPM
- **Special Features:** Hard Water Wash, Smart Scrub Station, Lint Filter, Large Wash Tub (66L), Easy Mobility, Water & Shock Proof Panel, Rust Proof Body
- **Product Dimensions (D x W x H):** 50.7D x 89W x 95.6H Centimeters
- **Item Weight:** 25000 Grams
- **Material Type:** Plastic (Body and Drum)
- **Voltage:** 230 Volts
- **Included Components:** Washing machine, spin cap, detergent box, drain hose

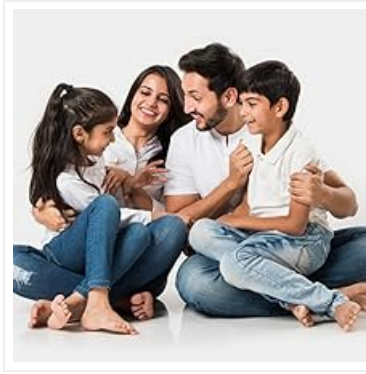 


Image 7.1: Highlights of 5 Star Energy Rating, Superior Drying, and In-Built Collar Scrubber.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Whirlpool washing machine comes with a **4 years comprehensive warranty** and a **10 years warranty on the wash motor, spin motor, and prime mover**.



Image 8.1: Visual representation of the warranty coverage.

8.2 Customer Support

For any queries, service requests, or technical assistance, please contact Whirlpool customer support:

- **Manufacturer:** Whirlpool of India Limited, Village Thirubhavnai, Puducherry - 605107, India
- **Importer Contact:** Whirlpool of India Ltd. Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India
- **Email:** helpdeskindia@whirlpool.com
- **Toll Free:** 1800 208 1800