

[manuals.plus](#) /

› [Andoer](#) /

› [Andoer X6 Mini Digital Camera User Manual](#)

Andoer X6

Andoer X6 Mini Digital Camera User Manual

Model: X6

1. INTRODUCTION

Thank you for choosing the Andoer X6 Mini Digital Camera. This compact and versatile device is designed for capturing high-definition photos and videos, and can also function as a portable audio recorder or webcam. Its miniature size and keychain design make it convenient for various uses.



The Andoer X6 Mini Digital Camera, demonstrating its compact size and keychain design when held in a hand.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Andoer X6 Mini Digital Camera:



Detailed view of the Andoer X6 Mini Digital Camera, highlighting its key components: On/Off key, Function keys, Indication light, Hidden lanyard port, USB port, and Microphone.

- **On/Off Key:** Powers the device on or off.
- **Function Keys:** Used for mode selection and operation.
- **Indication Light:** Provides status feedback (e.g., power, recording, charging).
- **Hidden Lanyard Port:** For attaching the keychain or a lanyard.
- **USB Port:** For charging and data transfer to a computer.
- **Microphone:** For audio recording.

3. SETUP

3.1 Package Contents

Ensure all items are present in the package:

Package List


Mini Digital Camera * 1



USB Cable * 1



User Manual * 1

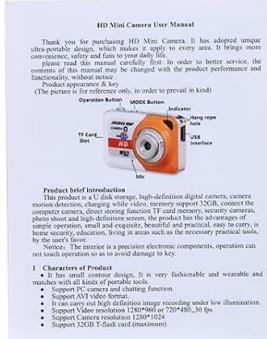

The complete package contents, including the Andoer X6 Mini Digital Camera, USB charging cable, and user manual.

- Andoer X6 Mini Digital Camera
- USB Cable
- User Manual

3.2 Charging the Battery

1. Connect the camera to a USB power source (e.g., computer USB port, USB wall adapter) using the provided USB cable.
2. The indication light will illuminate during charging.
3. Once fully charged, the indication light will change or turn off (refer to specific light behavior in the full manual if available).

3.3 Inserting the TF (Micro SD) Card

The camera requires a TF (Micro SD) card for storing photos and videos. It supports up to 32GB capacity.

1. Locate the TF card slot on the camera.
2. Gently insert the TF card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card in again until it springs out.

4. **Important:** The camera will automatically power off after 15 seconds if no TF card is inserted.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the On/Off key for a few seconds until the indication light illuminates.
- **Power Off:** Press and hold the On/Off key for a few seconds until the indication light turns off.

4.2 Taking Photos

The camera supports a picture resolution of 1280*1024.

1. Ensure the camera is powered on and in photo mode (indicated by the light pattern, refer to the full manual for specifics).
2. Point the camera at your subject.
3. Press the Function key briefly to capture a photo. The indication light may flash to confirm.

4.3 Recording Videos

The camera supports video resolution of 1280*960 at 30 frames per second.

1. Ensure the camera is powered on and in video recording mode.
2. Press the Function key to start recording. The indication light will change to indicate recording is in progress.
3. Press the Function key again to stop recording. The video file will be saved to the TF card.

Picture & Video



Support Video resolution
1280*960,30 fps.

Support Picture resolution
1280*1024.

Examples of video and picture resolution supported by the Andoer X6 Mini Digital Camera.

4.4 Audio Recording

The camera is equipped with a microphone for individual audio recording. Refer to the full manual for specific steps to activate audio-only recording mode.

4.5 Connecting to a PC (Webcam Function)

The Andoer X6 can function as a webcam when connected to a computer.

1. Power on the camera.
2. Connect the camera to your computer using the provided USB cable.
3. The computer should recognize the camera as a removable disk or a webcam device. Select the appropriate mode if prompted by the camera or computer.
4. If used as a webcam, select the camera as your video input device in your video conferencing or webcam software.

5. MAINTENANCE

- Keep the camera dry. Do not expose it to moisture or liquids.

- Clean the lens gently with a soft, lint-free cloth. Avoid abrasive materials.
- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the camera to strong impacts.

6. TROUBLESHOOTING

- **Camera does not power on:**
 - Ensure the battery is charged. Connect to a power source and allow it to charge.
 - Press and hold the On/Off key for a sufficient duration (several seconds).
- **Cannot record photos/videos:**
 - Verify that a TF (Micro SD) card is properly inserted.
 - Check if the TF card has sufficient free space.
 - Ensure the camera is in the correct mode (photo or video).
- **Camera powers off automatically:**
 - This may occur if no TF card is inserted. Insert a TF card.
 - The battery might be critically low. Charge the camera.
- **Computer does not recognize the camera:**
 - Ensure the USB cable is securely connected to both the camera and the computer.
 - Try a different USB port on your computer.
 - Ensure the camera is powered on when connected.

7. SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Brand | Andoer |
| Model Name | X6 |
| Photo Sensor Technology | CMOS |
| Supported File Format | AVI |
| Image Stabilization | Digital |
| Optical Zoom | 6 x |
| Expanded ISO Minimum | 100 |
| Metering Description | Center Weighted |
| Compatible Mountings | Micro Four Thirds |
| Aspect Ratio | 4:3 |
| Storage Support | Up to 32GB T-flash (Micro SD) card (not included) |
| Video Resolution | 1280*960, 30 fps |
| Picture Resolution | 1280*1024 |

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Andoer website. Keep your proof of purchase for warranty claims.

© 2023 Andoer. All rights reserved.