

[manuals.plus](#) /

› [TecTake](#) /

› [tectake® Garden Table User Manual](#)

TecTake 404401-NL

tectake® Garden Table User Manual

Model: 404401-NL

1. INTRODUCTION

Thank you for choosing the tectake® Garden Table. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new table. Please read this manual thoroughly before assembly and keep it for future reference.



Image 1.1: The tectake® Garden Table, a black rectangular table designed for outdoor use, featuring a sturdy aluminum frame and a durable plastic top with a wood-look finish.

2. SAFETY INSTRUCTIONS

- Always assemble the table on a flat, stable surface to prevent tipping.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten if necessary.
- Do not exceed the maximum weight capacity of 150 kg (330 lbs).
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Avoid placing hot items directly on the table surface without protection to prevent damage.
- Do not stand or sit on the table.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Tabletop (with pre-assembled slats)	1
B	Table Legs	4
C	Crossbars/Support Beams	2
D	Adjustable Feet/Caps	4
E	Screw Pack (various sizes)	1
F	Assembly Tool (e.g., Allen key)	1

tectake

garden

Productinformatie

AFMETINGEN

Totale afmetingen

150 x 90 x 74,5 cm

Afmeting per lamel

85,8 x 9 x 1,2 cm

Afstand tussen lamellen

0,5 cm

Hoogteverstelbaarheid voetjes

1 cm

Afmetingen zijn bij benadering

TECHNISCHE DETAILS

Draagkracht 150 kg

Gewicht ca. 16 kg

Materiaal gepoedercoat aluminium, polystyreen

INHOUD

Tuintafel

Montagemateriaal

Montageanleitung

Image 3.1: Product information diagram illustrating the table's dimensions and key components, including the tabletop, legs, and adjustable feet.

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to have two people for easier assembly. Approximate assembly time: 60 minutes.

 
1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches. Refer to the "Package Contents" section to identify each part.
2. **Attach Crossbars to Tabletop:** Place the tabletop (Part A) upside down on your protected surface. Align the crossbars (Part C) with the pre-drilled holes on the underside of the tabletop. Secure them using the appropriate screws from the screw pack (Part E). Do not fully tighten yet.
3. **Attach Legs to Tabletop:** Attach the table legs (Part B) to the corners of the tabletop, aligning them with the pre-drilled holes. Use the provided screws (Part E) to secure them. Ensure the legs are oriented correctly.
4. **Secure All Connections:** Once all legs and crossbars are in place, gradually tighten all screws using the assembly tool (Part F). Ensure the table frame is stable and square before fully tightening.
5. **Install Adjustable Feet:** Turn the table upright. Screw the adjustable feet/caps (Part D) into the bottom of each table leg. These caps protect your floor and allow for minor height adjustments to ensure stability on uneven surfaces.




Het **roestvrije frame** van **gecoat aluminium** zorgt voor een extreem hoge belastbaarheid en duurzaamheid.



De **verstevigingsbalken** onder het tafelblad dragen in belangrijke mate bij aan de **uitstekende stabiliteit**.

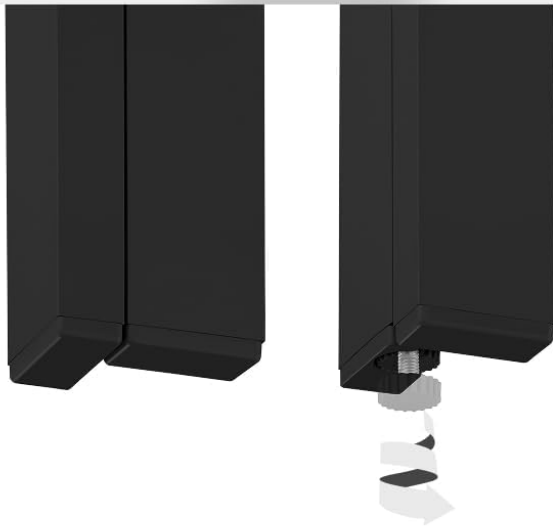

 De **antislipvoetjes** en de **2 stelschroeven** garanderen stabiliteit op elke ondergrond.

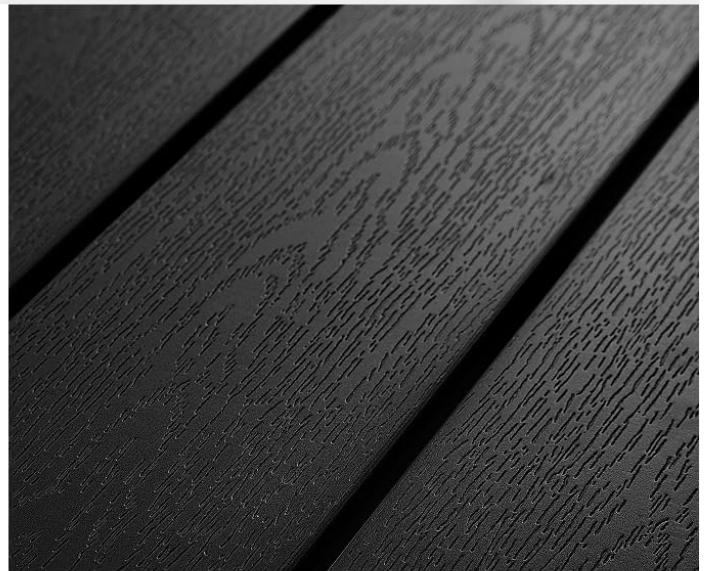

De lamellen van zeer **robuust polywood** combineren een natuurlijke houtlook met absolute duurzaamheid.

Image 4.1: Detail showing the adjustable feet at the base of the table legs, designed for stability on various surfaces, and the texture of the wood-look tabletop slats.

STABIELE Constructie

Deze tafel overtuigt door het weerbestendige aluminium frame, dat maximale stabiliteit en uitstekende corrosiebestendigheid biedt.



Image 4.2: Illustrates the stable construction of the table, highlighting the robust aluminum frame and secure joints that contribute to its overall durability.

5. OPERATING INSTRUCTIONS

The tectake® Garden Table is designed for outdoor dining and leisure. Its robust construction makes it suitable for various weather conditions.

- **Placement:** Place the table on a level surface. Use the adjustable feet to compensate for minor unevenness, ensuring the table does not wobble.
- **Weight Distribution:** Distribute weight evenly across the tabletop. Avoid concentrating heavy items in one small area.
- **Weather Resistance:** The table is designed to be weather-resistant. While it can withstand rain and sun, prolonged exposure to extreme conditions may affect its lifespan. Consider using a protective cover during harsh weather or off-season storage.

ABSOLUUT WIND- & **Weerbestendig**

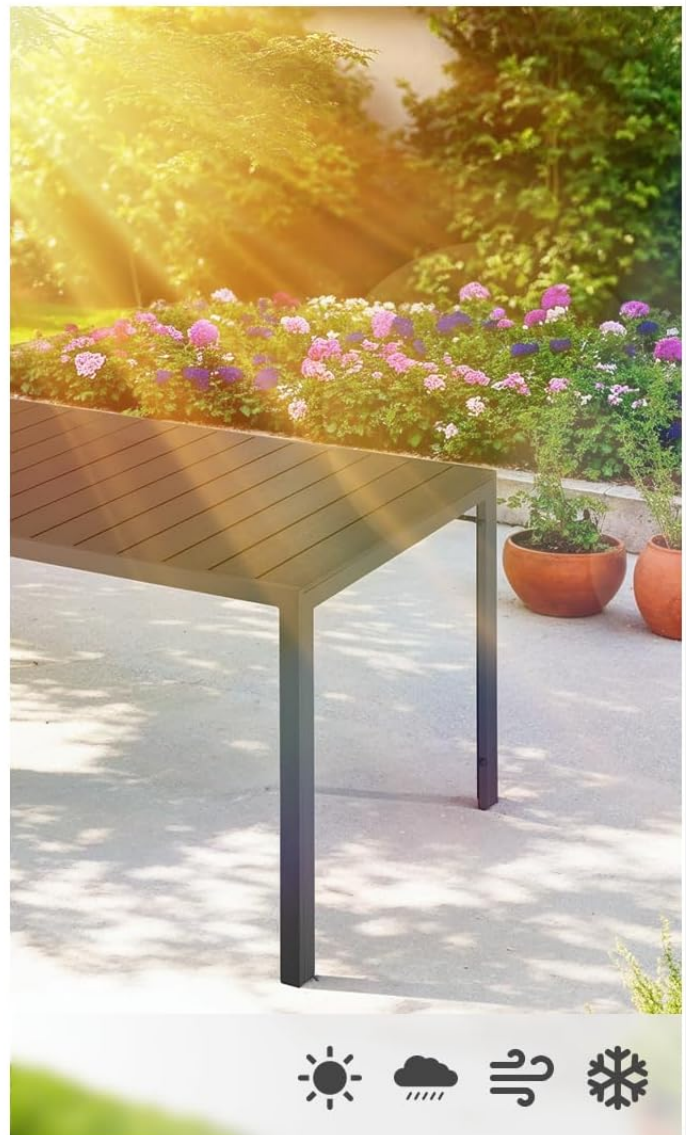 
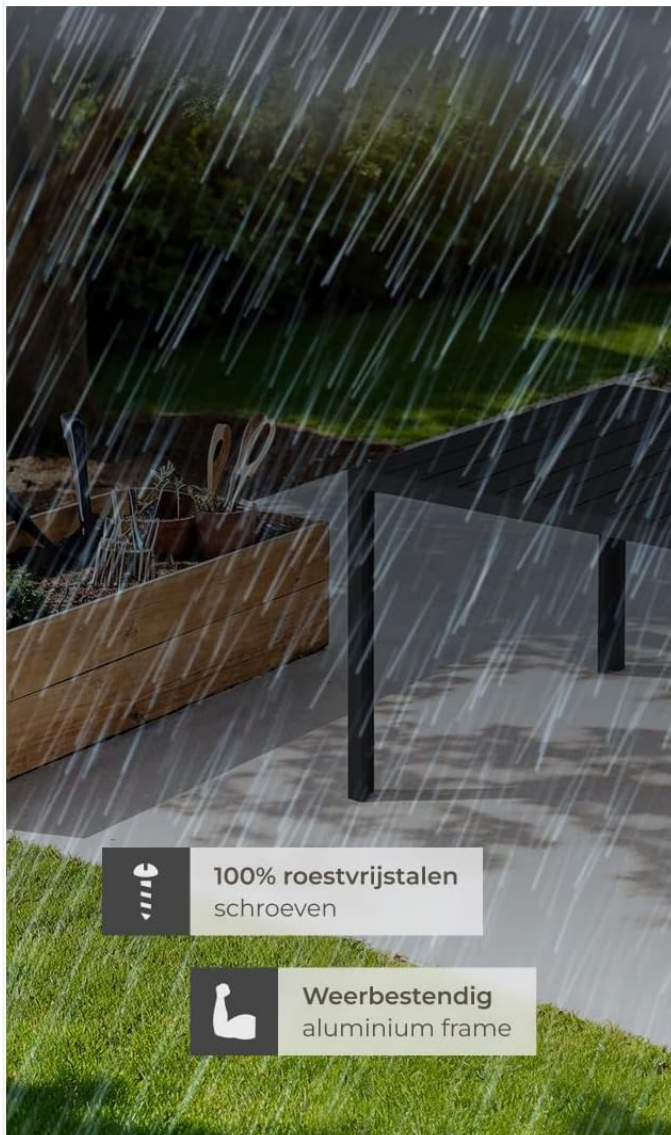 


Image 5.1: Visual representation of the table's weather-resistant properties, showing it enduring both rain and bright sunshine, suitable for year-round outdoor use.

6. MAINTENANCE AND CARE

Regular cleaning and proper care will extend the life and maintain the appearance of your garden table.

- **Cleaning:** Wipe the table surface and frame with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish. Rinse with clean water and dry thoroughly.
- **Dirt Resistance:** The table's surface is designed to be dirt-resistant, making cleaning easy.
- **Rust Prevention:** The aluminum frame is rust-resistant. However, regularly inspect for any signs of damage or corrosion, especially if exposed to saltwater environments.
- **Seasonal Storage:** If storing the table for extended periods, especially during winter, clean it thoroughly and cover it with a protective outdoor furniture cover. Store in a dry, sheltered area if possible.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Table wobbles after assembly.	Uneven floor surface or loose connections.	Adjust the height of the feet using the adjustable caps. Ensure all screws are fully tightened.
Difficulty during assembly.	Parts not aligned correctly or screws not fully loosened before final tightening.	Review assembly steps. Ensure parts are correctly oriented. Loosen all screws slightly, align parts, then re-tighten gradually.
Scratches on surface.	Abrasive cleaning or sharp objects.	Use only soft cloths for cleaning. Avoid dragging sharp objects across the surface. Minor scratches may be buffed out with appropriate plastic polish (test in an inconspicuous area first).

8. SPECIFICATIONS

Feature	Detail
Brand	TecTake
Model Number	404401-NL
Dimensions (L x W x H)	150 cm x 90 cm x 74.5 cm (59.1 in x 35.4 in x 29.3 in)
Color	Black
Material	Aluminum frame, Plastic (wood-look) tabletop
Maximum Weight Capacity	150 kg (330 lbs)
Features	Weather-resistant, Easy assembly, Adjustable feet, Dirt-resistant surface, Rust-free aluminum frame

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official TecTake website. If you have any questions regarding assembly, parts, or general use, do not hesitate to contact TecTake customer service.

 
 

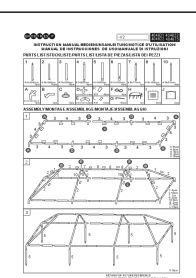 
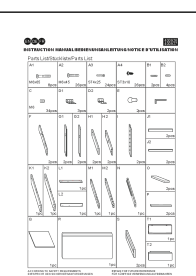 

Seller: tectake nederland

Return Policy: 30-day refund/replacement policy.

Note: Spare parts availability information is not provided by the manufacturer.



Related Documents - 404401-NL

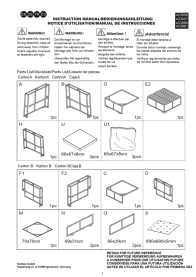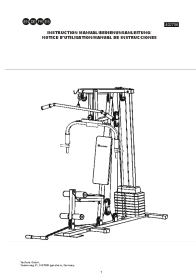	<p>TecTake Rattan Garden Furniture Assembly Instructions</p> <p>Comprehensive assembly instructions for TecTake rattan garden furniture sets, including a detailed parts list and step-by-step visual guidance. Model numbers: 403696, 403697, 403880, 403881.</p>
	<p>TecTake 402756 Home Gym Assembly and Exercise Guide</p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>
	<p>TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p>
	<p>tectake Gazebo Instruction Manual - Assembly Guide</p> <p>Comprehensive instruction manual for assembling and maintaining your tectake gazebo. Includes parts list, step-by-step assembly, location advice, care instructions, and contact information.</p>
	<p>TecTake 400926/400927 Lift Desk Assembly Instructions</p> <p>Step-by-step assembly guide for the TecTake 400926 and 400927 lift desk, including a detailed parts list and safety warnings.</p>
	<p>2-in-1 Grass Shear / Hedge Trimmers WIRELESS BATTERY LI-ION 7.2V - User Manual</p> <p>Comprehensive user manual for the 2-in-1 Grass Shear / Hedge Trimmers WIRELESS BATTERY LI-ION 7.2V (Model 401542). Includes technical specifications, intended use, safety warnings, operating instructions, maintenance, and troubleshooting.</p>

