

[Manuals.plus](#) /

› [Nyeekey](#) /

› Nyeekey Kid's Swivel Seesaw (Model 0839) Instruction Manual

Nyeekey 0839

Nyeekey Kid's Swivel Seesaw (Model 0839) Instruction Manual

360-Degree Rotation Metal Teeter-Totter for Indoor and Outdoor Use

1. INTRODUCTION

Thank you for choosing the Nyeekey Kid's Swivel Seesaw. This manual provides essential information for the safe assembly, operation, and maintenance of your new teeter-totter. Please read all instructions carefully before use and retain this manual for future reference. This product is designed for children aged 3 to 7 years.



Image: Nyeekey Kid's Swivel Seesaw highlighting its no-assembly-required feature and folding supporting rack for easy storage and portability.

2. PRODUCT FEATURES

- **Safe & Amusing Design:** Features EVA-wrapped handrails, suitable for children aged 3 to 7 years. Designed to stimulate imagination, inspire creativity, and exercise motor skills.
- **Durable Steel Construction:** Crafted primarily from high-grade carbon steel, ensuring sturdiness and supporting a load of up to 110 lbs on each end. The frame is paint-sprayed for enhanced rust resistance.
- **Shock Absorption:** Equipped with stopper poles featuring thick rubber caps to absorb impact during play. Ergonomic seats provide comfort and support for the child's spine.
- **Stable Standing:** A tripod supporting base with skid-proof plastic end casings ensures good balance and prevents tipping during use. All parts are designed for a precise fit, eliminating looseness.
- **360-Degree Rotation:** Allows for both traditional teeter-totter motion and full 360-degree swivel for added fun.
- **Indoor/Outdoor Versatility:** Designed for use in various environments, including playgrounds, backyards, or indoor play areas.

★ Safe & Amusing Toy



Image: Overview of the Nyeekoy Swivel Seesaw highlighting its safe and amusing design with features like EVA handgrips, stable base, and 360-degree rotation.

3. PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged:

- 1 x Nyeekoy Kid's Swivel Seesaw Unit
- 1 x User Manual

Rotate freely-360 Degree Rotation

Main Material: Carbon Steel, PP Plastic, EVA Material

Color: Red + Yellow + Blue

Overall Dimensions: 71.65"L x 25"W x 33"H

Seat Size: 7.60"L x 9.84"W

Distance between 2 T-shaped Handgrips: 36.38"

Handrail Height over the Seat: 2.76"

Handrail Distance from the Seat: 9"

Supporting Pole Height: 18.50"

Applicable Age: about 3 – 7 years old

Load Capacity: 110lb for one seat

Net Weight: 13.47lb

Package Includes:

1 x Toddler's Teeter Totter

1 x User Manual



Image: Two children enjoying the Nyeekoy Swivel Seesaw in an indoor setting, demonstrating its suitability for indoor use.

4. SETUP AND ASSEMBLY

The Nyeekoy Kid's Swivel Seesaw is designed for minimal assembly. The supporting base features a folding mechanism for easy setup and storage. Simply unfold the base until it locks securely into place. Ensure all connections are firm before use.

1. Carefully remove all components from the packaging.
2. Unfold the tripod supporting base until it is fully extended and stable. Ensure the locking mechanism (if present) is engaged.
3. Verify that the main seesaw beam is securely attached to the central pivot point.
4. Check that the seats and handrails are firmly in place.
5. Place the seesaw on a flat, level surface, either indoors or outdoors.

STRENGTHENED PIVOT POINT CONNECTION



Image: A detailed view of the strengthened pivot point connection, illustrating the 360-degree rotation capability of the seesaw.

5. OPERATING INSTRUCTIONS

The Nyeekoy Kid's Swivel Seesaw offers two primary modes of play: traditional teeter-totter motion and 360-degree rotation.

5.1. Traditional Teeter-Totter Play

- Two children sit on the seats, facing each other, gripping the handrails firmly.
- By pushing off the ground with their feet, children can move the seesaw up and down.
- Ensure both children are of similar weight for balanced play.

5.2. 360-Degree Rotation Play

- While teeter-tottering, children can also use their feet to push and rotate the entire seesaw unit around its central axis.
- Encourage gentle rotation to maintain stability and prevent dizziness.

Always ensure adult supervision during play.



Image: Two children actively playing on the Nyeekoy Swivel Seesaw in a backyard, demonstrating both the up-and-down and rotational movements.

6. SAFETY GUIDELINES

- **Adult Supervision:** Always ensure an adult supervises children during play.
- **Age and Weight Limits:** Suitable for children aged 3 to 7 years. Maximum weight capacity is 110 lbs per seat. Do not exceed these limits.
- **Proper Seating:** Children must sit properly on the seats and hold onto the handrails at all times.
- **Clear Area:** Ensure the play area is clear of obstacles, sharp objects, or other hazards. Maintain a safe distance from walls, fences, and other play equipment.
- **Stable Surface:** Use the seesaw on a flat, level, and soft surface such as grass, sand, or rubber mulch. Avoid hard surfaces like concrete or asphalt.
- **No Standing:** Children should never stand on the seesaw.
- **Weather Conditions:** Do not use the seesaw in strong winds, rain, or other adverse weather conditions.
- **Regular Inspection:** Before each use, inspect the seesaw for any loose parts, damage, or wear. Do not use if any issues are found.

DURABLE EVA HANDGRIP



Image: A child's hand firmly grasping the durable EVA handgrip, emphasizing the safety and comfort features for young users.

7. MAINTENANCE

Regular maintenance will prolong the life of your Nyeekoy Kid's Swivel Seesaw.

- **Cleaning:** Wipe down the seesaw with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Inspection:** Periodically check all bolts, nuts, and connections to ensure they are tight. Tighten as necessary.
- **Rust Prevention:** While the frame is rust-resistant, prolonged exposure to moisture can cause rust. Store the seesaw indoors or cover it when not in use, especially during inclement weather.
- **Moving Parts:** Ensure the central pivot point and other moving parts operate smoothly. Lubricate with a silicone-based spray if needed.
- **Rubber Caps:** Check the rubber caps on the stopper poles and base for wear or damage. Replace if necessary.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Seesaw feels unstable or wobbly.	Loose connections; uneven ground.	Tighten all bolts and nuts. Move the seesaw to a flat, level surface.
Difficulty with 360-degree rotation.	Central pivot point needs lubrication; debris in mechanism.	Clean the pivot area. Apply a silicone-based lubricant to the pivot point.
Squeaking noises during use.	Friction in moving parts.	Lubricate moving joints and the central pivot point.
Seats or handrails feel loose.	Fasteners are not tight.	Tighten all screws and bolts securing the seats and handrails.

9. SPECIFICATIONS

Attribute	Detail
Brand	Nyeekoy
Model Number	0839
Material Type	Metal, Plastic, Steel
Overall Dimensions	71.65" (L) x 25" (W) x 33" (H)
Seat Size	7.60" (L) x 9.84" (W)
Distance between 2 T-shaped Handgrips	36.38"
Handrail Height over the Seat	2.76"
Handrail Distance from the Seat	9"
Supporting Pole Height	18.50"
Applicable Age	3 - 7 years old
Load Capacity	110 lbs per seat
Net Weight	13.47 lbs
Power Source	Manual
Operation Mode	Manual

Attribute	Detail
UPC	747781784681

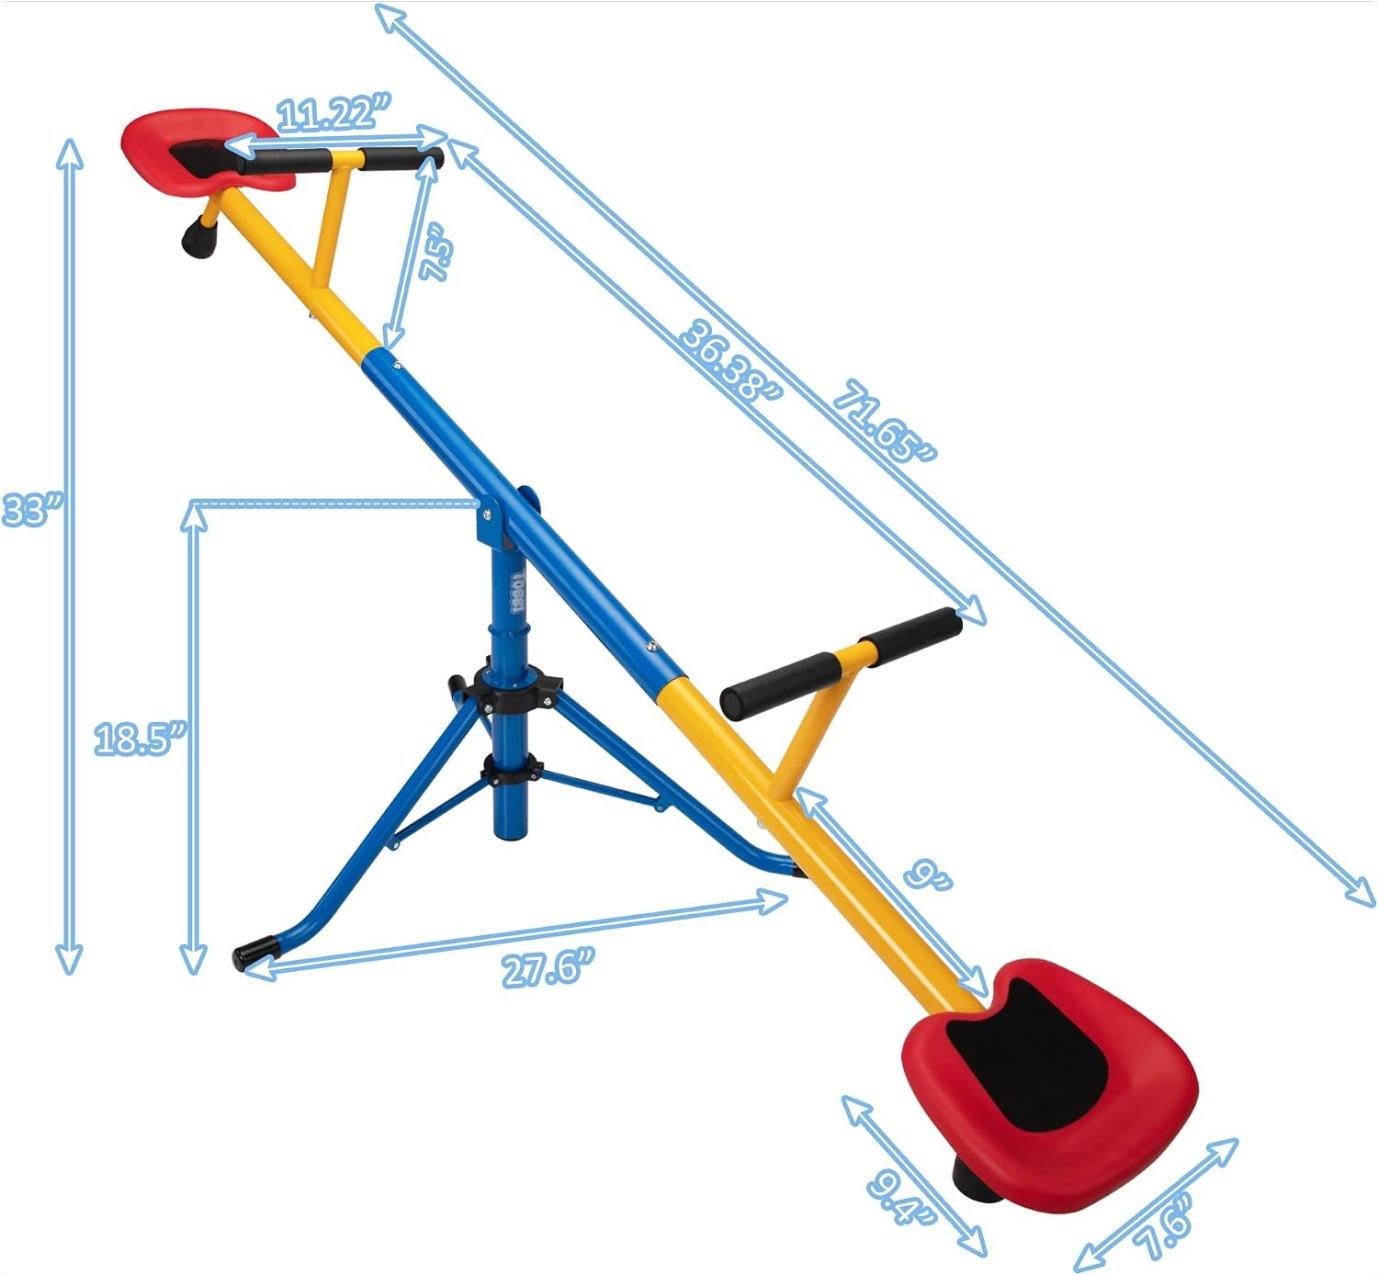


Image: Technical drawing illustrating the key dimensions of the Nyeekoy Swivel Seesaw for reference.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official Nyeekoy website. Please have your model number (0839) and UPC (747781784681) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question