

[Manuals.plus](#) /

› [Lecran](#) /

› Lecran Digital Camera User Manual

Lecran LCRUS0028

Lecran Digital Camera User Manual

Model: LCRUS0028

INTRODUCTION

Thank you for choosing the Lecran Digital Camera. This compact and portable camera is designed for ease of use, making it ideal for teens, beginners, students, and kids. Featuring FHD 1080P video recording and 36.0 megapixels for still images, it allows you to capture memorable moments with clarity. This manual provides detailed instructions on how to set up, operate, and maintain your camera to ensure optimal performance.



Image: Front and back view of the Lecran Digital Camera, showcasing its compact design and LCD screen.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- Lecran Digital Camera
- USB Cable
- Rechargeable Lithium Batteries (x2)
- Portable Bag
- Lanyard Rope
- Instruction Manual



Image: A visual representation of all items included in the product package, such as the camera, USB cable, batteries, and manual.

SETUP

1. Battery Installation

To power your camera, install the rechargeable lithium battery:

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert the battery into the compartment, ensuring the correct orientation as indicated by the diagram inside.
4. Close the battery compartment cover firmly until it clicks into place.



Image: A four-panel diagram illustrating the process of opening the battery compartment, inserting the battery, and closing the compartment.

2. Memory Card Installation (Not Included)

This camera supports SD memory cards up to 128GB (Class 10 recommended). A memory card is required to save photos and videos.

1. With the battery compartment open, locate the SD card slot.
2. Insert the SD card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the card in until it springs out.

OPERATING INSTRUCTIONS

1. Powering On/Off

- **To Power On:** Press and hold the Power button located on the top of the camera.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

2. Basic Photography

Taking Photos

In photo mode, frame your shot using the LCD screen and press the Shutter button to capture an image. The camera features 36.0 megapixels for high-quality stills.

FHD 1080P & 36MP



Image: Demonstrates the difference between 1080P and 720P video resolution and highlights the 36-megapixel photo capability.

Recording Videos

Switch to video mode using the Mode button. Press the Shutter button to start recording and press it again to stop. The camera records in FHD 1080P resolution.

16X Digital Zoom

Use the W (Wide) and T (Telephoto) buttons to zoom in or out digitally, allowing you to get closer to your subject without moving.

16X Digital Zoom & Video Record



Image: Shows a child being zoomed in at 4X, 8X, and 16X digital zoom levels, illustrating the camera's zoom capability.

3. Advanced Features

Anti-Shake & Fill Light

The camera features an anti-shake function to reduce blur from camera movement and a built-in fill light for improved low-light photography.



Anti-Shake & Fill Light



Image: Illustrates the effectiveness of the anti-shake feature by comparing a blurry image with a clear one, and highlights the built-in fill light.

Webcam Mode

To use the camera as a webcam for video calls or live streaming:

1. Ensure the camera is turned off.
2. Connect the camera to your computer using the provided USB cable.
3. Simultaneously press and hold the Power button and the Mode button. The camera will enter webcam mode.

4. Select the camera as your video source in your video conferencing or streaming software.



Image: A step-by-step visual guide on how to activate the webcam mode and connect the camera to a computer.



Image: Depicts various uses of the camera, including webcam functionality for live streaming and video calls, and its portability.

Self-Timer

Set a delay before the photo is taken, allowing you to be in the shot. Options typically include 2s, 5s, and 10s.



Image: Shows the camera's self-timer feature with options for 2, 5, and 10-second delays, useful for group photos or selfies.

Face Detection & Smile Capture

The camera can automatically detect faces and capture a photo when a smile is detected, ensuring perfect portraits.



Image: Illustrates the camera's face and smile detection capabilities, highlighting detected faces with yellow boxes.

Continuous Shooting

Capture a rapid sequence of photos by holding down the shutter button, ideal for capturing fast-moving subjects.

4. Playback and Deleting Files

To review or delete your captured media:

1. Enter Playback mode using the Mode button.
2. Use the navigation buttons to browse through your photos and videos.
3. To delete a file, select it and press the Delete button (often indicated by a trash can icon). Confirm deletion when prompted.



Image: A visual guide demonstrating two methods for deleting files from the camera's memory.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to wipe the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- Do not use strong detergents or solvents.

2. Battery Care

- Charge batteries fully before first use.
- Store batteries in a cool, dry place when not in use.
- Do not expose batteries to extreme temperatures or direct sunlight.
- If the camera will not be used for an extended period, remove the battery.

TROUBLESHOOTING

If you encounter issues with your Lecran Digital Camera, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera does not turn on.	◦ Battery is not charged or incorrectly inserted. Ensure battery is fully charged and inserted correctly. ◦ Battery contacts are dirty. Clean contacts with a dry cloth.

Problem	Possible Cause / Solution
Images are blurry or out of focus.	◦ Subject is too close or too far. Ensure subject is within the camera's focus range. ◦ Insufficient lighting. Use the built-in fill light or shoot in brighter conditions. ◦ Camera shake. Hold the camera steady or use the anti-shake feature. ◦ Lens is dirty. Clean the lens with a soft, lint-free cloth.
Cannot save photos/videos.	◦ No memory card inserted. Insert a compatible SD card. ◦ Memory card is full. Delete unnecessary files or insert a new card. ◦ Memory card is corrupted. Format the card (this will erase all data) or try a different card.
Camera not recognized by computer in webcam mode.	◦ Ensure the camera is off before connecting and then simultaneously pressing Power and Mode buttons. ◦ Try a different USB port or cable. ◦ Restart your computer.
Short battery life.	◦ Battery may not be fully charged. ◦ Battery is old and needs replacement. ◦ Frequent use of flash or LCD screen can drain battery faster.

SPECIFICATIONS

Detailed technical specifications for the Lecran Digital Camera:

Feature	Detail
Brand	Lecran
Model Name	Camera
Model Number	LCRUS0028
Maximum Webcam Image Resolution	36 MP
Effective Still Resolution	36 MP
Video Resolution	1080p
Digital Zoom	16x
Image Stabilization	Digital

Feature	Detail
Photo Sensor Technology	CMOS
Supported File Format	JPEG (Images), AVI (Video)
Screen Size	7.94 Centimeters (LCD)
Flash Memory Type	SD
Memory Storage Capacity	128 GB (Max Supported)
Connectivity Technology	USB
Battery Type	Lithium Ion
Special Features	Anti-shake, Face Detection, Smile Capture, Continuous Shooting, Self-timer, Built-in Fill Light, Webcam Function
Color	Black

WARRANTY AND SUPPORT

Lecran provides a perfect one-year warranty for all purchases on Amazon. If you encounter any problems or have suggestions, please contact us directly through your Amazon order page or visit the [Lecran Store on Amazon](#).

For technical assistance or customer service inquiries, please refer to the contact information provided with your product packaging or on the official Lecran website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question