

[manuals.plus](#) /› [RETROSUN](#) /› [RETROSUN RMF-TX520U MG3-TX520U Replacement Remote Control User Manual](#)

RETROSUN RMF-TX520U MG3-TX520U

RETROSUN RMF-TX520U MG3-TX520U Replacement Remote Control User Manual

For Sony Bravia Smart TV / Google TV

1. INTRODUCTION


This manual provides instructions for the RETROSUN RMF-TX520U MG3-TX520U replacement remote control. This remote is designed to function as a direct replacement for your original Sony Bravia Smart TV or Google TV remote, offering voice control capabilities and dedicated quick access buttons.

2. COMPATIBILITY


The RMF-TX520U MG3-TX520U remote control is compatible with various Sony Bravia Smart TV and Google TV models. Please verify your TV model against the list below:

- KD-43X80J
- KD-43X85J
- KD-50X80J
- XR-50X90J
- XR-50X94J
- XR-55A80J
- XR-55A84J

Compatible With These Models & More

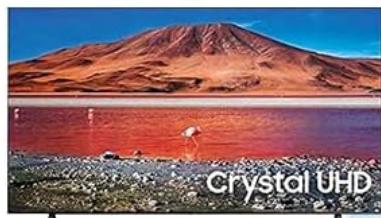


KD-43X series

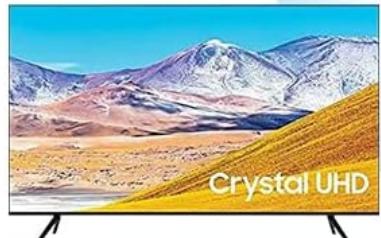

XR-50X series



KD-50X series

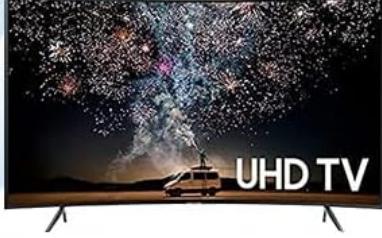

XR-55A series

Image: The RETROSUN RMF-TX520U MG3-TX520U remote control displayed with examples of compatible Sony Bravia TV models.

RMF-TX520U Voice Remote Control for

Sony Bravia Google TV KD-43X/KD-50X
/XR-50X/XR-55A Series



Image: The RMF-TX520U Voice Remote Control positioned in front of a Sony Bravia Google TV, illustrating its intended use with the specified series.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

3.2 Pairing Instructions

Before using the voice function or full remote capabilities, the remote control must be paired with your Sony Bravia Smart TV or Google TV. Follow these steps to pair the remote:

1. Ensure your television is powered on. If it is off, press the power button on the remote or the TV itself to turn it on.
2. Press and hold the **VOL-** (Volume Down) key and the **Google Assistant** key (microphone icon) simultaneously for approximately 2 seconds. This action initiates the pairing process.
3. A message indicating the pairing status will appear on your TV screen.
4. Once the TV screen indicates successful pairing, press the **OK** button on the remote control to complete the process.



How to Pair

1. Press the power button to turn on the TV
2. Press and Hold the VOL- key and the Google Assistant Voice Key for 2 seconds to start pairing
3. A message indicating whether pairing is complete will pop up on the TV screen. Press the OK button to complete the pairing.

Image: Visual guide for pairing the remote control with your television.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

The remote control features standard buttons for TV operation:

- **Power Button:** Turns the TV on or off.

- **Number Pad (0-9):** For direct channel input.
- **Volume Up/Down (VOL+/-):** Adjusts the TV volume.
- **Channel Up/Down (CH+/-):** Changes TV channels.
- **Mute:** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Back:** Returns to the previous screen or menu.
- **Home:** Accesses the TV's home screen or main menu.
- **Input:** Selects input sources (HDMI, AV, etc.).
- **Play/Pause/Rec/Display:** Media playback controls.

4.2 Voice Function

The integrated microphone and Google Assistant key allow for voice commands to control your TV and search for content.

1. Press and hold the **Google Assistant** key (microphone icon) on the remote.
2. Speak your command clearly into the microphone located on the remote control.
3. Release the **Google Assistant** key when you have finished speaking.

Example commands: "Find action movies," "Open YouTube," "What's the weather?"



Image: The voice control button on the remote control.



Use your voice to easily find, launch, and control content

Original series now streaming. YouTube subscription required.

Image: Demonstrating the voice command feature to search for content on the TV.



Image: The remote's Bluetooth link and voice function enable control from a distance and at various angles.

4.3 Quick Access Buttons

The remote includes dedicated buttons for popular streaming services, allowing for quick access:

- YouTube
- Netflix
- Disney+
- Prime Video

Ours Are With More Shortcut Buttons, Enjoy More Fun!



Image: The remote features multiple shortcut buttons for popular streaming services.

5. FEATURES

5.1 Advanced Infrared Technology

The remote utilizes advanced infrared technology, providing reliable control over your television. It supports a long operating distance and wide-angle functionality.

Advanced Infrared Technology Easy To Use

Long Distance / Wide Angle



26FT

Farfrom 26ft

120°

Multi angle remote control

Image: The remote offers advanced infrared technology for long-distance and wide-angle control.

5.2 Stable and Smart Signal

The remote is designed for stable and smart signal transmission, ensuring quick acceptance and reaction to your instructions while optimizing power consumption.

Stable.Smarter

Smart and stable signal
enjoy your life



Stable



Stable link
to your device

Quickly



Quickly accept and
react to your instructions

Smart



The signal will only
be emitted
when you operate it

Save power



No signal when not
operating. Make sure your
battery lasts longer

Image: Features highlighting the remote's stable, smart, and power-efficient signal.

5.3 Ergonomic Design

The remote control features an ergonomic design for a comfortable grip, sensitive buttons for responsive feedback, and an arc design for ease of use.



Image: Dimensions and design features of the remote control, emphasizing comfort and usability.

6. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**

- Check if the batteries are correctly inserted and have sufficient charge. Replace batteries if necessary.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Re-attempt the pairing process as described in Section 3.2.

- **Voice Function Not Working:**

- Confirm the remote is successfully paired with the TV.
- Ensure you are pressing and holding the Google Assistant key while speaking.
- Check your TV's settings to ensure the voice assistant feature is enabled.

- **Delayed Response:**

- Ensure the remote is pointed directly at the TV.
- Try replacing the batteries, as low battery power can sometimes affect response time.
- If the issue persists, it may indicate a compatibility or signal interference problem.

7. SPECIFICATIONS

Feature	Specification
Model Number	RMF-TX520U MG3-TX520U
Package Dimensions	9.29 x 1.85 x 0.87 inches
Item Weight	3.84 ounces
Power Supply	2 x AAA batteries (not included)
Max Number of Supported Devices	1 (Television)
Special Feature	Ergonomic, Voice Control
Color	Black

8. WARRANTY AND SUPPORT

For any issues or questions regarding your RETROSUN RMF-TX520U MG3-TX520U remote control, please contact us via Amazon messenger. We are committed to resolving any problems within 24 hours.