

[Manuals.plus](#) /

› [HCDZ](#) /

› HCDZ AK-380 Replacement Remote Control User Manual

HCDZ AK-380

HCDZ AK-380 Replacement Remote Control User Manual

Model: AK-380

INTRODUCTION

This manual provides instructions for the proper setup, operation, maintenance, and troubleshooting of your HCDZ AK-380 Replacement Remote Control. This remote is designed to function with AK-380 USB SD BT.C FM AUX Audio Power Amplifiers without requiring any programming.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Important: Do not mix new and old batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.



This image shows the HCDZ AK-380 Replacement Remote Control with its battery cover removed, revealing the two battery slots designed for AA batteries.



This image presents the back of the HCDZ AK-380 Replacement Remote Control, with the battery compartment securely closed, indicating readiness for use.

OPERATING INSTRUCTIONS

The HCDZ AK-380 Replacement Remote Control is designed for immediate use after battery installation. No programming or pairing is required. Simply point the remote control towards your AK-380 Audio Power Amplifier and press the desired function button.

Key Functions:

- **Power Button:** Turns the amplifier on or off.
- **Mode Button:** Cycles through input modes (USB, SD, BT.C, FM, AUX).
- **CH+/CH- Buttons:** For channel selection or navigation.
- **Playback Controls:** Play/Pause, Skip Forward, Skip Backward.
- **Volume Controls:** Increase or decrease audio volume.
- **Number Pad (0-9):** For direct track selection or frequency input.
- **EQ Button:** Adjusts equalizer settings.



This image displays the front of the HCDZ AK-380 Replacement Remote Control, highlighting the layout of its buttons, including power, mode, channel, playback controls, and number pad.

MAINTENANCE

- **Storage:** Do not leave the remote control in an extremely hot or humid environment.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent potential damage from leakage and corrosion.
- **Sensor Exposure:** Avoid exposing the remote sensor to direct sunlight or strong lighting apparatuses, as this may cause a malfunction.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or aerosols.

TROUBLESHOOTING

If your remote control is not functioning as expected, please follow these troubleshooting steps:

1. **Remote Control Malfunctions:** If the remote is unresponsive, try replacing the batteries with fresh ones.
2. **Battery Check:** Ensure the battery terminals are clean and making proper contact with the batteries.
3. **Out of Range:** Move closer to the AK-380 Audio Power Amplifier. The maximum effective range is approximately 8 meters.
4. **Obstructions:** Remove any objects or obstructions between the remote control and the IR sensor of the amplifier.
5. **Amplifier Power:** Verify that the power cord to your amplifier is securely plugged in and the amplifier is turned on.

SPECIFICATIONS

Brand	HCDZ
Model	AK-380 (Replacement)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Compatible Devices	AK-380 USB SD BT.C FM AUX Audio Power Amplifier

Max Number of Supported Devices	1
Maximum Range	8 Meters
Batteries Required	2 AA batteries
Special Feature	No programming needed, works out of package

WARRANTY INFORMATION

This HCDZ replacement remote control comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance or inquiries regarding your HCDZ AK-380 Replacement Remote Control, please refer to the seller's support channels or visit the official HCDZ store page on Amazon.

[Visit the HCDZ Store on Amazon](#)

© 2026 HCDZ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09ZL2MZ7D>

More documents and user manuals: <https://manuals.plus/>