

[Manuals.plus](#) /

› [ECR4Kids](#) /

› ECR4Kids Dry-Erase Adjustable Rectangular Activity Table with 2 Chairs Instruction Manual

ECR4Kids ELR-14438-BL

ECR4Kids Dry-Erase Adjustable Rectangular Activity Table with 2 Chairs

Model: ELR-14438-BL

PRODUCT OVERVIEW

The ECR4Kids Dry-Erase Rectangle Activity Table with 2 Chairs is a versatile 3-piece children's furniture set designed to encourage creativity and independence. It includes a kid-sized rectangular table and two chairs, suitable for playrooms, classrooms, or home use. The table features a dry-erase surface for drawing and writing, which is easy to clean. Both the table and chair heights are adjustable to accommodate growing children, ensuring a comfortable fit. The chairs are ergonomically designed with supportive backrests and contoured seats to promote healthy posture, and angled legs with rounded foot caps for stability.



Image: The ECR4Kids Dry-Erase Adjustable Rectangular Activity Table with two chairs, showcasing its design and color.

SAFETY INFORMATION

Adult supervision is required at all times. Ensure chairs are properly adjusted and secured before use. Keep small parts away from young children to prevent choking hazards. Always follow assembly instructions carefully. This product is GREENGUARD [GOLD] Certified for low VOCs and CPSIA compliant, featuring rounded edges for enhanced safety.



Image: Two children using the dry-erase table, highlighting the product's safety certifications.

SETUP AND ASSEMBLY

Assembly is required for this product. Detailed instructions are provided in the assembly manual. Please refer to the official assembly instructions PDF for step-by-step guidance:

[Download Assembly Instructions \(PDF\)](#)

Adjusting Table and Chair Height

The table legs adjust in height from 18" to 22.8" (45.2 cm - 60 cm). The chair seat height adjusts from 10" to 12" (25.4 cm - 30.5 cm). Adjustments can be made easily with a screwdriver to ensure the set grows with your child and provides an ergonomic fit.



Image: A visual representation of the adjustable height for both the table (18"-22.8" H) and chair seat (10"-12" H), indicating adjustment with a screwdriver.

OPERATING INSTRUCTIONS

Using the Dry-Erase Surface

The table features an interactive dry-erase surface. Use only dry-erase markers on this surface. After use, the tabletop wipes clean with a felt eraser or a soft cloth, making cleanup quick and easy.



**Interactive
dry-erase
surface**

**Contoured
chairs**

**Leveling
glides**

**Students
are 44" tall**

Image: Two children engaged in drawing on the dry-erase table, demonstrating its interactive surface.

Table Stability

The table legs are equipped with leveling glides to help maintain stability on uneven floors. Ensure these glides are properly adjusted to prevent wobbling.

Chair Usage

The ergonomic chairs feature a supportive backrest and contoured seat. Angled legs with rounded foot caps improve stability. Always ensure the chair height is appropriate for the child using it.



Image: A child standing near the chair, illustrating its sturdy construction and design.

MAINTENANCE

To clean the table and chairs, use mild soap and water. Wipe down surfaces with a soft cloth. For the dry-erase surface, use a felt eraser or soft cloth to remove marker residue. Avoid abrasive cleaners or harsh chemicals that may damage the finish.



Image: An adult cleaning the dry-erase table surface with a spray and a yellow cloth, demonstrating proper maintenance.

TROUBLESHOOTING

- **Wobbly Table/Chairs:** Ensure all screws and fasteners are tightened securely. Check that the leveling glides on the table legs are properly adjusted to compensate for uneven floor surfaces.
- **Difficulty Adjusting Height:** Verify that the adjustment screws are loosened sufficiently before attempting to change the height. If resistance is met, do not force the adjustment; re-check the mechanism.
- **Dry-Erase Surface Stains:** For stubborn marks, use a specialized dry-erase board cleaner. Avoid permanent markers.

SPECIFICATIONS

Feature	Detail
Model Number	ELR-14438-BL

Table Dimensions	47.2" W x 23.6" D x 18"-22.8" H (119.8 cm W x 60 cm D x 45.2-60 cm H)
Chair Dimensions	12.2" W x 15" D x 21.75" H (31 cm W x 38 cm D x 55.2 cm H)
Chair Seat Height	Adjustable from 10" to 12" (25.4 cm to 30.5 cm)
Item Weight	37 pounds (16.78 kg)
Material Type	Plastic
Included Components	Dry-Erase Rectangular Activity Table, 2 Adjustable Chairs
Certifications	GREENGUARD [GOLD] Certified, CPSIA Compliant

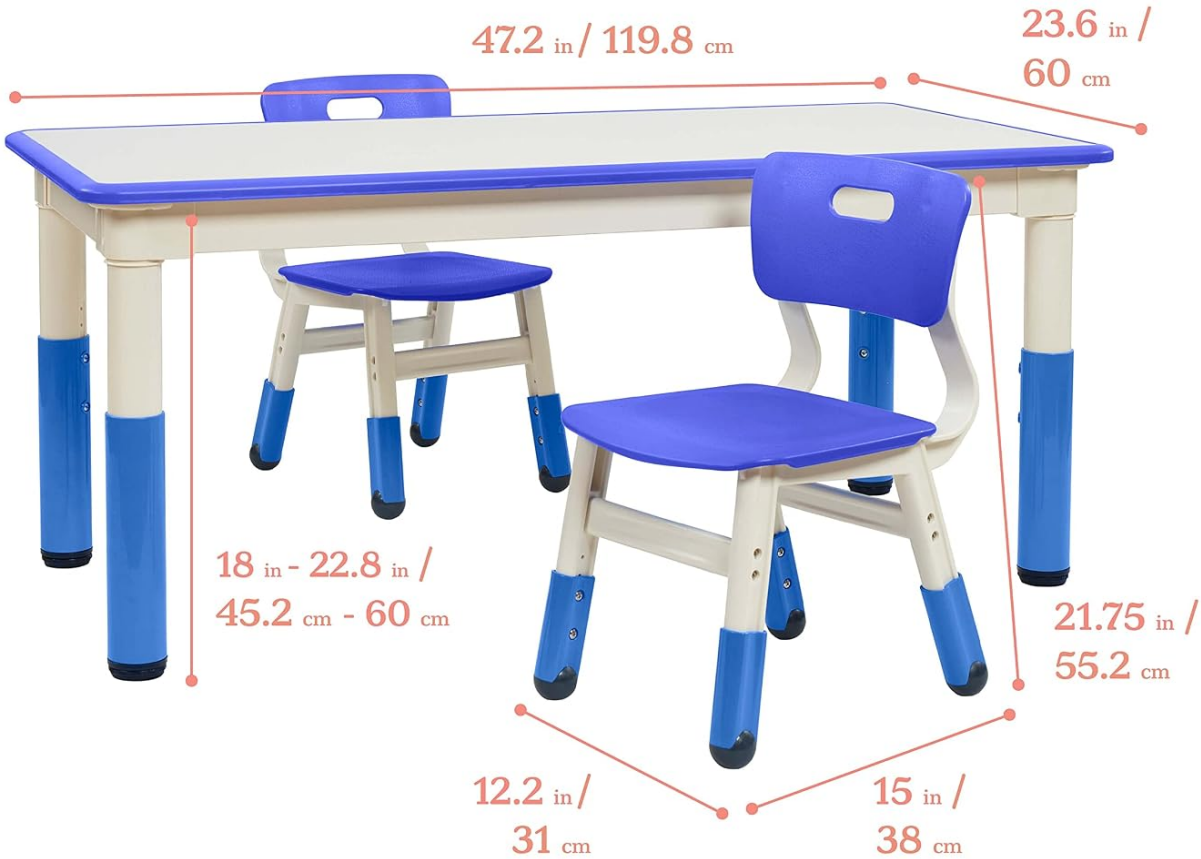


Image: A diagram illustrating the precise dimensions of the table and chairs in both inches and centimeters.

Your browser does not support the video tag.

Video: An official product video from ECR4Kids demonstrating the Adjustable Dry Erase Table and Chair Set in use.

WARRANTY INFORMATION

This product comes with a 2-year limited warranty from the manufacturer, ECR4Kids. For specific details regarding warranty coverage and claims, please refer to the documentation included with your purchase or contact customer support.

CUSTOMER SUPPORT

For further assistance, product inquiries, or to explore other ECR4Kids products, please visit the official ECR4Kids store:

Visit the [ECR4Kids Store on Amazon](#)

© 2024 ECR4Kids. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09ZNB1F66>

More documents and user manuals: <https://manuals.plus/>