

[manuals.plus](#) /

› [Vacmaster](#) /

› [Vacmaster VK1330PWR 1300W 30L Wet/Dry/Shampoo Vacuum Cleaner Instruction Manual](#)

Vacmaster VK1330PWR 03

Vacmaster VK1330PWR 1300W 30L Wet/Dry/Shampoo Vacuum Cleaner

Instruction Manual



1. INTRODUCTION

This manual provides essential information for the safe and effective operation, assembly, maintenance, and troubleshooting of your Vacmaster VK1330PWR 1300W 30L Wet/Dry/Shampoo Vacuum Cleaner. Please read these instructions thoroughly before first use and retain them for future reference. This appliance is designed for versatile cleaning tasks, including dry vacuuming, wet vacuuming, and shampooing carpets and upholstery.



Image: The Vacmaster VK1330PWR 1300W 30L Wet/Dry/Shampoo Vacuum Cleaner with its various attachments.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- **Read all instructions:** Familiarize yourself with the appliance before use.
- **Electrical Safety:** Ensure the power supply matches the voltage specified on the rating label. Do not use with a damaged cord or plug.
- **Avoid Water Contact:** Do not immerse the appliance in water. Do not use outdoors or on wet surfaces unless specifically designed for it.
- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Maintenance:** Disconnect from the power supply before cleaning or performing maintenance.
- **Flammable Materials:** Do not vacuum flammable or combustible liquids, hot ashes, or sharp objects.
- **Filters:** Always ensure appropriate filters are installed for the intended operation (dry or wet).

- **Chemicals:** Use only recommended cleaning solutions for shampooing. Avoid harsh chemicals.

3. PACKAGE CONTENTS AND PRODUCT OVERVIEW

Before assembly, ensure all components listed below are present and undamaged. Refer to the diagram for identification.



Image: Detailed view of the Vacmaster VK1330PWR components and accessories.

Components:

1. 8-ft x 35mm Premium Hose
2. Crevice Tool
3. Remote Control Handle
4. Round Brush
5. Floor Brush/Squeegee Nozzle
6. Multi-surface Floor Nozzle
7. Stainless Steel Telescopic Wand
8. Foam Wet Filter

9. Carpet Shampoo Nozzle
10. Hand Held Shampoo Nozzle
11. Carpet Cleaning Solution (sample)
12. Collection Bag (for dry use)
13. Exhaust Filter
14. Washable Cartridge Filter (for dry use)

Controls:

The appliance features a remote control handle for convenient switching between vacuum and shampoo modes. An indicator light provides operational status.



Image: Close-up of the remote control handle with Vacuum Mode, Detergent Mode, and Indicator Light labels.

4. ASSEMBLY AND SETUP

Follow these steps to prepare your vacuum cleaner for operation.

Initial Assembly:

1. Attach the wheels to the base of the unit.
2. Secure the main hose to the inlet port on the vacuum cleaner.
3. Connect the desired accessory (e.g., telescopic wand, floor nozzle) to the end of the hose.

Filter Installation:

The correct filter must be installed for the specific cleaning mode.

- **For Dry Vacuuming:** Install the Washable Cartridge Filter and, if applicable, a collection bag. Ensure the foam wet filter is removed.
- **For Wet Vacuuming/Shampooing:** Remove the Washable Cartridge Filter and install the Foam Wet Filter. Do not use a collection bag for wet operations.



Image: Diagram illustrating the multi-filtration system, showing HEPA exhaust filter, floating wave filtration, and PTFE filtration.

Filling Detergent Tank (for Shampooing):

1. Locate the clean water/detergent tank, typically located on the side of the unit.

2. Fill the tank with clean water and the recommended carpet cleaning solution according to the solution's instructions. Do not overfill.
3. Securely close the tank cap.

5. OPERATING MODES

Your Vacmaster VK1330PWR offers three primary cleaning modes.

5.1 Dry Vacuuming

This mode is suitable for picking up dry debris, dust, and dirt from hard floors and carpets.

- Ensure the Washable Cartridge Filter is installed.
- Attach the appropriate dry vacuuming nozzle (e.g., multi-surface floor nozzle, crevice tool).
- Plug in the appliance and turn it on.
- Move the nozzle slowly over the surface to be cleaned.



CAR DETAILING

**WET OR DRY DEBRIS
PICK-UP**



**CARPET & UPHOLSTERY
CLEANING**



Image: Visual representation of the vacuum's versatility, including dry debris pick-up.

5.2 Wet Vacuuming

Use this mode for picking up liquid spills or for general wet cleaning tasks.

- Ensure the Foam Wet Filter is installed and the cartridge filter is removed.
- Attach the squeegee nozzle or other suitable wet pick-up tool.
- Plug in the appliance and turn it on.
- Move the nozzle over the wet surface to extract liquids.
- Monitor the dirty water tank and empty it when full to prevent overflow.

5.3 Shampooing (Carpet and Upholstery Cleaning)

This mode is designed for deep cleaning carpets, rugs, and upholstery using a cleaning solution.

- Ensure the Foam Wet Filter is installed and the clean water/detergent tank is filled.
- Attach the Carpet Shampoo Nozzle for large areas or the Hand Held Shampoo Nozzle for upholstery and stairs.
- Plug in the appliance.
- Use the remote control handle to switch to Detergent Mode.
- Press the spray trigger to apply cleaning solution while moving the nozzle over the surface.
- Release the spray trigger and make a second pass to vacuum up the dirty solution.
- Repeat passes until the extracted water appears clean.

3-IN-1 WET/DRY /UPHOLSTERY SHAMPOO VACUUM CLEANER



Floor Nozzle



Multi-Surface Nozzle



Carpet Shampoo Nozzle



**Hand Held
Shampoo Nozzle**

Image: The Vacmaster VK1330PWR demonstrating its 3-in-1 capability, showing spray and vacuum functions.



Image: The Vacmaster VK1330PWR being used to clean upholstery with the hand-held shampoo nozzle.



Image: The Vacmaster VK1330PWR being used to clean a carpet with the carpet shampoo nozzle.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your appliance.

6.1 Emptying Tanks

- **Dirty Water Tank:** After wet vacuuming or shampooing, always empty the dirty water tank. Disconnect the power, remove the tank, and dispose of the contents. Rinse the tank thoroughly with clean water.
- **Clean Water/Detergent Tank:** Empty any remaining solution after shampooing and rinse the tank.

6.2 Filter Cleaning

- **Washable Cartridge Filter:** For dry use, tap off excess dust. If heavily soiled, rinse under running water. Allow to air dry completely before reinstallation.
- **Foam Wet Filter:** Rinse under running water after each wet use. Squeeze out excess water and allow to air dry completely.
- **Exhaust Filter:** Check periodically and clean or replace as needed according to manufacturer guidelines.

6.3 General Cleaning

- Wipe down the exterior of the vacuum cleaner with a damp cloth.
- Rinse all nozzles and accessories after use, especially after wet or shampooing operations, to prevent clogging and odor.
- Store the vacuum cleaner and accessories in a dry, clean place.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	No power supply; damaged cord/plug.	Check power outlet; inspect cord/plug for damage.
Low suction power.	Clogged hose/nozzle; full dirty water tank; incorrect filter.	Clear obstructions; empty tank; ensure correct filter is installed and clean.
No spray/detergent flow.	Empty clean water tank; clogged spray nozzle; pump issue.	Refill tank; clean spray nozzle; contact customer support if pump is faulty.
Water leaking from unit.	Tank not properly sealed; damaged tank/hose.	Ensure tanks are securely closed; inspect for cracks or damage.

If the problem persists after attempting these solutions, please contact Vacmaster customer support.

8. TECHNICAL SPECIFICATIONS

Brand	Vacmaster
Model Number	VK1330PWR 03
Color	1300W 30L
Product Dimensions (L x W x H)	60 x 35 x 45 cm
Capacity	30 Litres
Power	1300 Watts
Voltage	240 Volts
Material	Steel
Noise Level	80 dB
Features	HEPA, Portable, Wheel
Item Weight	10.8 Kilograms
Manufacturer	Cleva
Power Source	Corded Electric
Manufacturing Year	2020

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or consult the retailer from whom you purchased the Vacmaster VK1330PWR. For technical assistance, spare parts, or service inquiries,

please contact the manufacturer, Cleva, or your local authorized service center. Contact details can typically be found on the manufacturer's official website or on your purchase documentation.

© 2024 Vacmaster. All rights reserved.