

VINABTY RMF-TX520P

Instruction Manual for VINABTY RMF-TX520P Voice Remote Control

Replacement Remote Control for Sony Smart TV BRAVIA XR 4K Ultra HD Televisions

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your VINABTY RMF-TX520P Voice Remote Control. This remote is designed as a replacement for various Sony Smart TV BRAVIA XR 4K Ultra HD Television models, including X80J, X85J, X90J, A80J series, and specific KD and XR models listed in the specifications.

Please read this manual thoroughly to ensure proper use and to maximize the functionality of your new remote control.

2. SETUP

2.1 Battery Installation

To install batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the cover back into place until it clicks securely.

Note: If the remote does not respond after battery installation, check the battery orientation and ensure they are fresh.

2.2 Pairing the Remote Control (for Voice Functionality)

For the voice control feature to work, the remote must be paired with your Sony Smart TV via Bluetooth. The remote will function as a standard IR remote for basic controls without pairing.

1. Ensure your TV is powered on.
2. On your TV, navigate to **Settings** (usually represented by a gear icon ⚙️).
3. Select **Remotes & Accessories** or **Bluetooth Settings**.
4. Choose **Pair remote control** or **Add device**.

5. On the RMF-TX520P remote, simultaneously press and hold the **Volume Down (-)** button and the **Microphone** button (located above the directional pad) for approximately 3 seconds. The LED indicator on the remote may flash.
6. Once the remote appears in the list of available devices on your TV screen, select it to complete the pairing process.
7. A confirmation message will appear on your TV screen once pairing is successful.

If pairing fails, ensure the remote is close to the TV and try the process again. Refer to your TV's user manual for specific pairing instructions if needed.

3. OPERATING THE REMOTE CONTROL

The RMF-TX520P remote control features a comprehensive layout for easy navigation and control of your Sony Smart TV. Below is a description of the main buttons and their functions.





Figure 1: Overview of the VINABTY RMF-TX520P Voice Remote Control.

This image displays the full layout of the RMF-TX520P remote control. It is a black remote with various buttons. At the top, there's a green power button and a circular input button. Below these are the number pad (0-9). Further down are dedicated app buttons for YouTube, Netflix, YouTube Music, and Prime Video. The central section includes a directional pad with an enter button, surrounded by buttons for Guide, Back, Home, Apps, Settings, and a Microphone button for voice commands. Below the central section are volume and channel controls, along with Mute, Audio, and Help buttons. At the bottom, media playback controls (Rewind, Play/Pause, Fast Forward) and an Exit button are present. The model number "RMF-TX520P" is printed at the very bottom.

3.1 Top Section Buttons

- **Power Button** (): Turns the TV on or off.
- **Input Button** (circular icon): Switches between different input sources (HDMI, AV, etc.).
- **Number Pad** (0-9): Used for direct channel input or entering numerical data.
- **Dot Button** (•): Typically used for decimal points in channel numbers or special functions.
- **List/Menu Button** (three horizontal lines icon ≡): Accesses channel lists or TV menus.

3.2 Quick Access App Buttons

- **YouTube**: Launches the YouTube application.
- **Netflix**: Launches the Netflix application.
- **YouTube Music**: Launches the YouTube Music application.
- **Prime Video**: Launches the Amazon Prime Video application.

3.3 Navigation and System Control Buttons

- **Guide**: Displays the electronic program guide (EPG).
- **Back**: Returns to the previous screen or menu.
- **Home**: Accesses the TV's home screen or main menu.
- **Apps**: Opens the TV's application list.
- **Settings** (⚙️): Opens the TV's settings menu.
- **Microphone Button** (): Activates voice control. Press and hold to speak commands.

- **Directional Pad** (Up, Down, Left, Right arrows): Navigates through menus and options.
- **Enter/OK Button** (center of directional pad): Confirms selections.

3.4 Volume, Channel, and Media Control Buttons

- **TV Button**: Switches the input to the TV tuner.
- **Volume Up/Down (+ VOL -)**: Adjusts the TV's volume level.
- **Channel Up/Down (+ CH -)**: Changes TV channels.
- **Mute Button** (): Mutes or unmutes the TV's audio.
- **Audio Button**: Cycles through audio options or sound modes.
- **Help Button** (?): Accesses the TV's help menu or on-screen guide.
- **Rewind** (): Rewinds media playback.
- **Play/Pause** (): Plays or pauses media playback.
- **Fast Forward** (): Fast forwards media playback.
- **Exit**: Exits the current menu or application.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check battery orientation and ensure they are fresh.
 - Ensure there are no obstructions between the remote and the TV's IR receiver.
 - If using voice control, ensure the remote is properly paired with the TV (refer to Section 2.2).
 - Try resetting the TV by unplugging it from the power outlet for a few minutes, then plugging it back in.
- **Voice control not working:**
 - Confirm the remote is paired via Bluetooth (Section 2.2).
 - Ensure you are pressing and holding the Microphone button while speaking.
 - Check your TV's internet connection, as voice commands often require online processing.
 - Verify that voice control is enabled in your TV's settings.
- **Buttons are sticky or unresponsive:**
 - Clean the remote control as described in Section 4.1.
 - Avoid spilling liquids on the remote.

6. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	RMF-TX520P
Brand	VINABTY
Compatible Devices	Sony Smart TV BRAVIA XR 4K Ultra HD Television (X80J, X85J, X90J, A80J series, KD-65X85J, KD-75X80J, KD-75X85J, KD-85X85J, KD-43X80J, KD-43X85J, KD-50X80J, KD-50X85J, KD-55X79J, KD-55X80J, KD-55X85J, KD-65X80J, XR-50X90J, XR-55A80J, XR-55X90J, XR-65A80J, XR-65X90J, XR-65X95J, XR-75X90J, XR-75X95J, XR-77A80CJ, XR-77A80J, XR-85X95J)
Product Dimensions	8.2 x 2 x 0.7 inches
Item Weight	2.89 ounces
Color	Black
Power Source	2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Contact details can typically be found on the product packaging or the manufacturer's official website.