

NVK TC16

NVK TC16 Dog Training Collar with Remote User Manual

Model: TC16

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your NVK TC16 Dog Training Collar. This system is designed to assist in training medium to large dogs through various modes including beep, vibration, and static stimulation. Please read this manual thoroughly before operating the device.

2. SAFETY INFORMATION

- This product is intended for use with dogs only. Do not use on humans or other animals.
- The training collar is not a toy. Keep out of reach of children.
- Avoid leaving the collar on your dog for more than 12 hours per day to prevent skin irritation.
- Regularly check your dog's neck for any signs of irritation or sores. If irritation occurs, discontinue use until the skin heals.
- Ensure the contact points are properly positioned and making good contact with your dog's skin.
- Do not use this collar on aggressive dogs. Consult a professional trainer for aggressive behavior.
- The static stimulation mode should be used responsibly and only after other training methods have been attempted. Start with the lowest level and increase only if necessary.

3. PACKAGE CONTENTS

- Remote Transmitter
- Receiver Collar (2 units)
- Adjustable Nylon Collar Strap (2 units)
- 2-in-1 Magnetic Charging Cable
- Short and Long Contact Points
- Test Light Tool

4. PRODUCT OVERVIEW

4.1 Remote Transmitter

The remote features a digital display and intuitive buttons for controlling the training collar. It allows for mode selection, intensity adjustment, and channel switching for multiple dogs.



Image: The NVK remote transmitter and two receiver collars, illustrating the complete training system.

4.2 Receiver Collar

The receiver collar is designed to be waterproof and durable, suitable for various outdoor conditions. It houses the electronic components and contact points for delivering training stimuli.

IPX7 WATERPROOF

Dog can swim or bath freely with the collar



Image: A dog wearing the NVK training collar while swimming, demonstrating its IPX7 waterproof capability.

5. SETUP

5.1 Charging the Devices

Before first use, fully charge both the remote transmitter and the receiver collars. The 2-in-1 magnetic charging cable allows simultaneous charging.

1. Connect the magnetic end of the charging cable to the charging port on the receiver collar.
2. Connect the Micro USB end to the remote transmitter's charging port.
3. Plug the USB-A end into a standard USB power adapter (not included).
4. The battery icons on the remote's display will indicate charging status. The collar's LED indicator will show charging progress.

Long-Lasting Power Life with Magnetic Charging port



Image: The remote and receiver collar connected to the 2-in-1 magnetic charging cable, showing the charging process.

5.2 Attaching the Collar Strap

Thread the adjustable nylon strap through the receiver unit. Ensure it is securely fastened.

5.3 Fitting the Collar on Your Dog

Proper fit is essential for effective and humane training. The collar should be snug but not too tight, allowing two fingers to fit comfortably between the strap and your dog's neck. The contact points must touch the dog's skin.

Adjust for all size dogs



Image: A visual guide demonstrating the adjustable length of the collar strap, suitable for dogs weighing 10 lbs to 110 lbs.

5.4 Pairing Remote and Receiver

The devices are typically pre-paired. If re-pairing is needed:

1. Turn on the remote transmitter.
2. Turn on the receiver collar by pressing its power button.
3. On the remote, select the desired dog channel (1 or 2).
4. Press and hold the power button on the receiver collar until its LED flashes rapidly.
5. Within 10 seconds, press any mode button (Beep, Vibration, or Static) on the remote. The collar's LED will stop flashing and remain solid, indicating successful pairing.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Remote Transmitter:** Slide the power switch on the side of the remote to turn it on or off.
- **Receiver Collar:** Press and hold the power button on the receiver collar until the LED indicator lights up (on) or turns off (off).

6.2 Remote Lock Feature

The remote features a lock switch to prevent accidental activation of training modes. Slide the lock switch up to lock the remote, and down to unlock it.

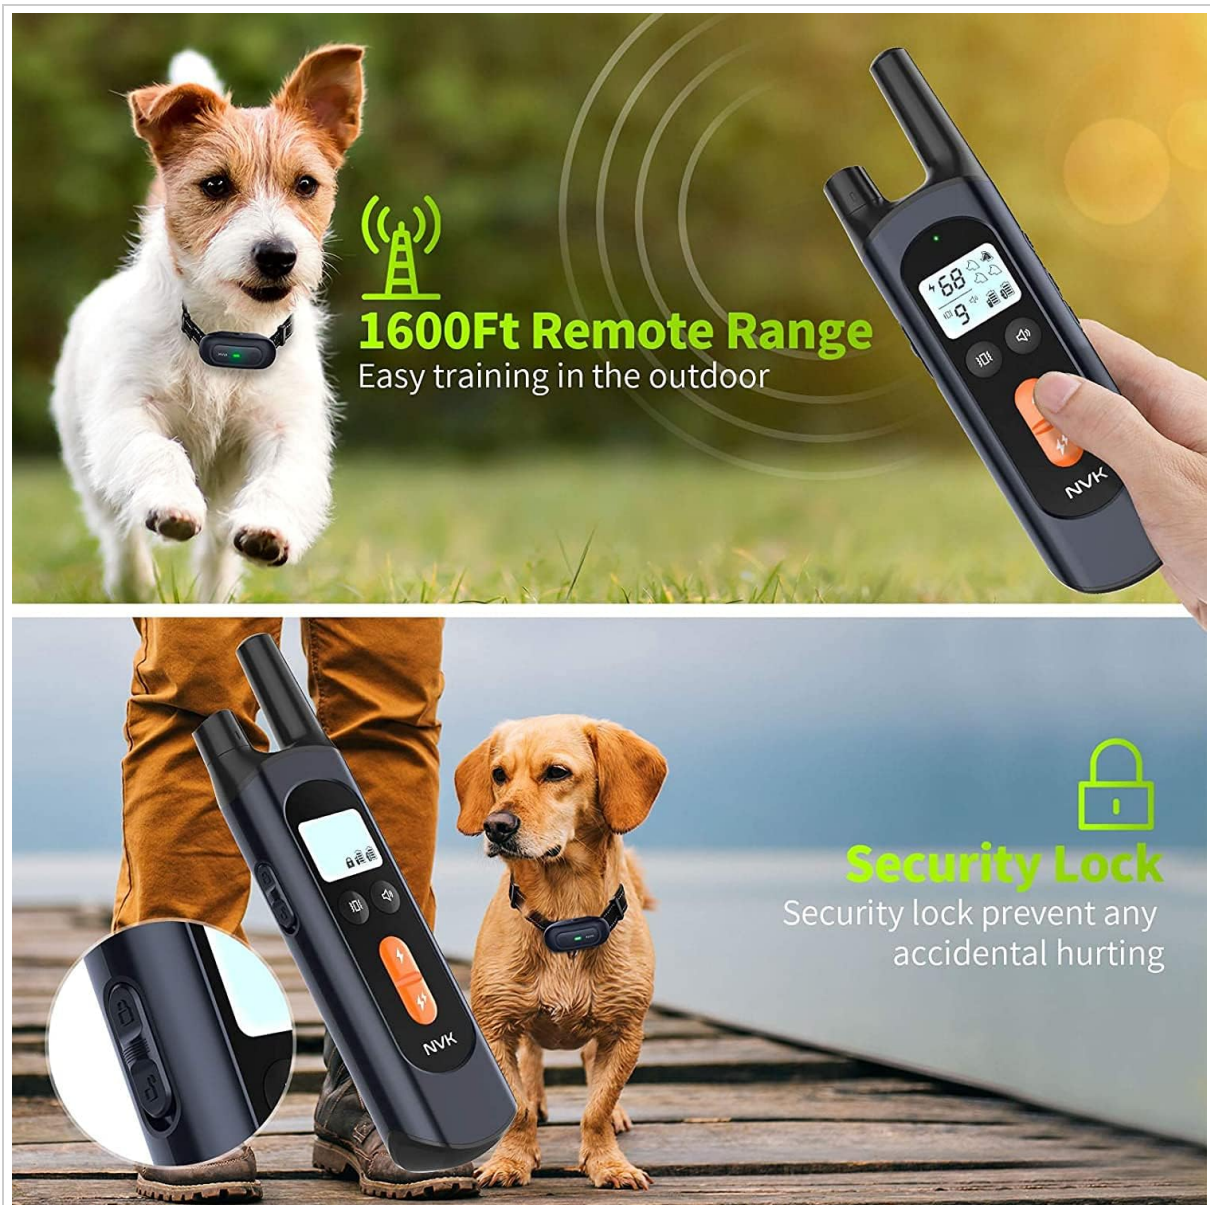


Image: The remote transmitter highlighting the security lock feature and its 1600ft remote range for outdoor training.

6.3 Selecting Dog Channel

The remote can control up to two receiver collars. Use the channel selection button on the remote to switch between Dog 1 and Dog 2.

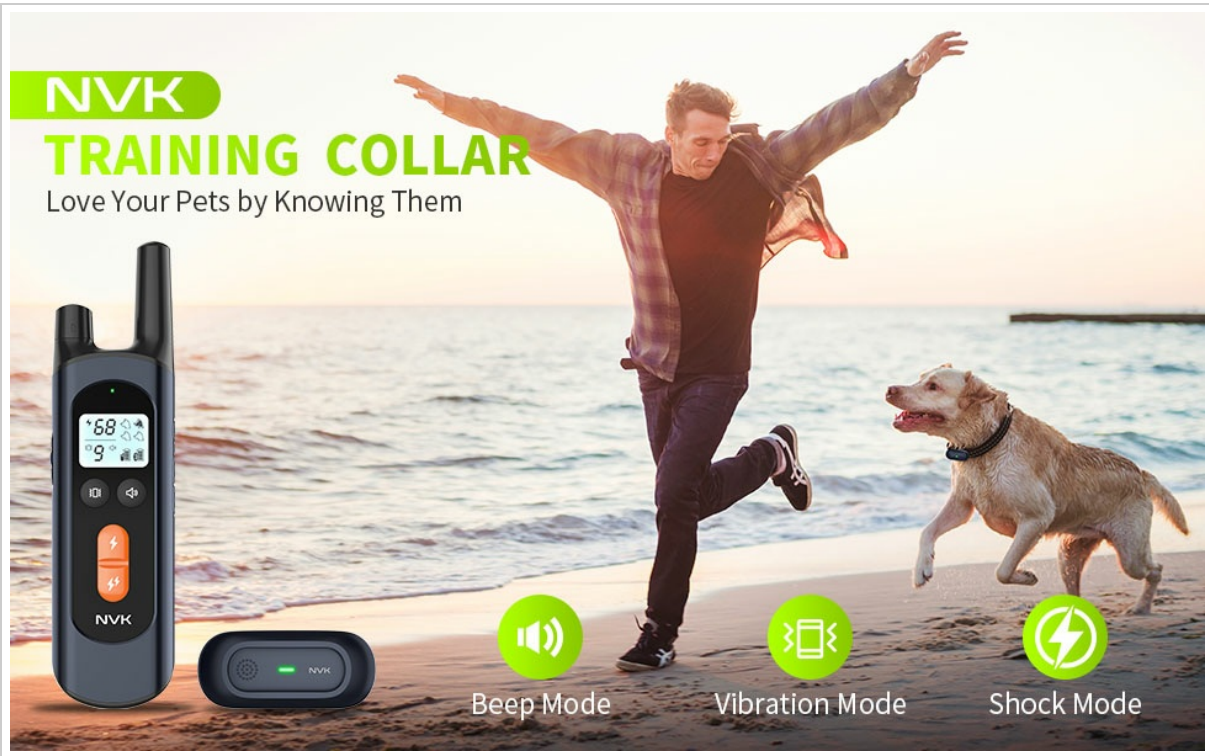


Image: The remote's digital display indicating the ability to select and control up to four different dog channels.

6.4 Training Modes and Intensity Adjustment

The NVK TC16 offers three training modes: Beep, Vibration, and Static. Each mode has adjustable intensity levels (Vibration 0-9, Static 0-99).

3 Training mode

According dogs behavior,
training dogs with different modes.



Beep Mode



Vibration Mode
(0-9) Level



Static Mode(0-99 Level)
(0-49)Low Level
⚠ (50-99)High Level With Warning



Image: A Golden Retriever wearing the NVK training collar, with an overlay showing the three available training modes: Beep, Vibration (0-9 levels), and Static (0-99 levels).

- **Beep Mode:** Press the 'Beep' button to emit an audible tone from the collar. This is often used as a warning or attention-getter.
- **Vibration Mode:** Press the 'Vibration' button to deliver a non-harmful vibration. Adjust the intensity using the up/down buttons on the side of the remote.
- **Static Mode:** Press the 'Static' button to deliver a static pulse. Adjust the intensity using the up/down buttons on the side of the remote. Always start at the lowest level.

7. MAINTENANCE

- **Cleaning:** Regularly clean the receiver collar and contact points with a damp cloth. Ensure all components are dry before charging or re-use.
- **Battery Care:** Charge the devices when the battery indicator is low. Avoid fully depleting the battery for extended periods.
- **Storage:** Store the collar and remote in a dry, cool place when not in use.

8. TROUBLESHOOTING

- **Collar not responding:** Check if both the remote and receiver are powered on and fully charged. Ensure they are paired correctly and within range.
- **No static/vibration:** Verify the contact points are making proper skin contact. Increase the intensity level. Use the test light tool to confirm functionality.
- **Short range:** Ensure there are no large obstacles between the remote and the collar. Check battery levels.
- **Skin irritation:** Remove the collar immediately. Clean the area and allow it to heal. Ensure proper collar fit and rotation of wear time.

9. SPECIFICATIONS

Model	TC16
Brand	NVK
Item Weight	15.5 ounces
Batteries	3 Lithium Polymer batteries (included)
Waterproof Rating	IPX7
Remote Range	Up to 1600 feet
Training Modes	Beep, Vibration (0-9 levels), Static (0-99 levels)
Number of Dogs Supported	Up to 2 (with included collars)
Material	Nylon
Breed Recommendation	All Breed Sizes (10 lbs - 110 lbs)

10. WARRANTY AND SUPPORT

NVK provides a limited warranty for this product against defects in materials and workmanship. For specific warranty details, product support, or technical assistance, please refer to the contact information provided with your purchase or visit the official NVK website. Our pet product experts and veterinarians are available to assist you with any questions.