



[Manuals.plus](#) /

> [Joydeco](#) /

> Joydeco Cordless Blackout Roller Shades Instruction Manual (Model SC0004-PK-60)

Joydeco SC0004-PK-60

Joydeco Cordless Blackout Roller Shades Instruction Manual

Model: SC0004-PK-60

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Joydeco Cordless Blackout Roller Shades. These shades feature a spring system for smooth, cordless operation, offering 100% blackout, thermal insulation, UV protection, and noise reduction. The cordless design ensures a child-safe and pet-safe environment.

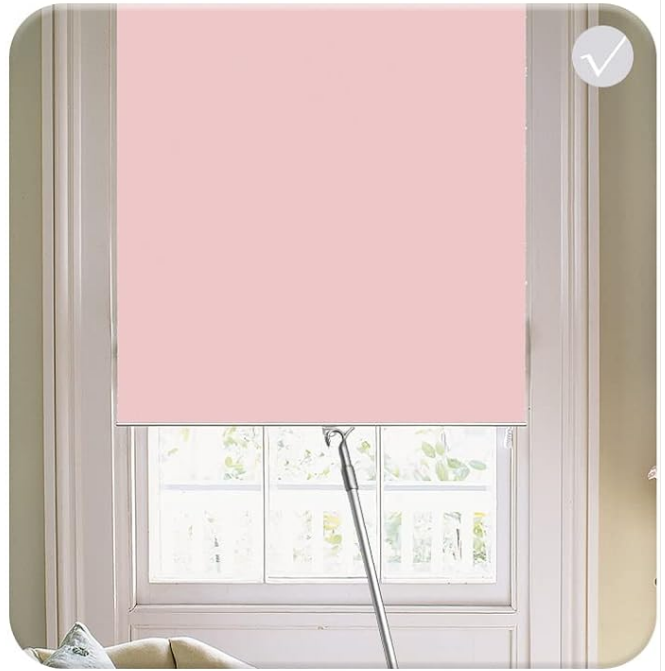


Image: Joydeco Cordless Blackout Roller Shades, showcasing multiple color options including pink, grey, coffee, black, and white.

2. SAFETY INFORMATION

The Joydeco cordless roller blind is designed to provide a child-safe and pet-safe environment by eliminating hazardous cords. This design reduces the risk of strangulation associated with traditional corded blinds. Always ensure the shade is operated smoothly and kept level to prevent damage or malfunction.

CORDLESS BLINDS



• NOT safety for child, pet

Safety

• Safety for child, pet

• complicated to use

Use

• Ease of Use

• tangled cords

Tidy

• WITHOUT tangled cords

Image: Visual comparison highlighting the safety, ease of use, and tidy appearance of cordless blinds over corded blinds.

3. COMPONENTS AND ACCESSORIES

Before beginning installation, verify that all components are present. Your package should include:

- Roller Shade Assembly
- Mounting Brackets (typically 2-3 depending on shade width)
- Screws and Wall Anchors
- Bottom Handle (for operating the shade)
- Installation Manual

If any parts are missing or damaged, please contact Joydeco customer support.

Your browser does not support the video tag.

Video: Joydeco Cordless Roller Blinds Measurement & Installation. This video demonstrates the components and the installation process for the roller blinds.

4. MEASUREMENT GUIDE

Accurate measurement is crucial for proper fit and function. Determine whether you will use an inside mount (within the window frame) or an outside mount (outside the window frame).

4.1. Inside Mount Measurement

For an inside mount, the shade fits within the window casing. Ensure your window depth is at least 2 inches.

- **Width:** Measure the inside width of the window frame at the top, middle, and bottom. Use the shortest of these three measurements. The blind width should be 0.4 inches shorter than this shortest window width.
- **Height:** Measure the inside height of the window frame at the left, middle, and right. Use the longest of these three measurements. The shade height should be greater than or equal to the window height.

⚠ How to choose a correct size?

INSIDE MOUNT



Width blind width = window width - 0.4"

Depth window depth > 2"

OUTSIDE MOUNT



Width Width: blind width = window width + 4

Image: Detailed diagram illustrating how to measure for both inside and outside mount installations, including depth requirements and width

adjustments.

4.2. Outside Mount Measurement

For an outside mount, the shade covers the entire window opening and extends beyond it.

- **Width:** Measure the desired width you want the shade to cover, typically 2-4 inches wider than the window opening on each side to minimize light gaps. The blind width should be this measured width.
- **Height:** Measure the desired height you want the shade to cover, typically from above the window frame to below the sill. The shade height should be this measured height.

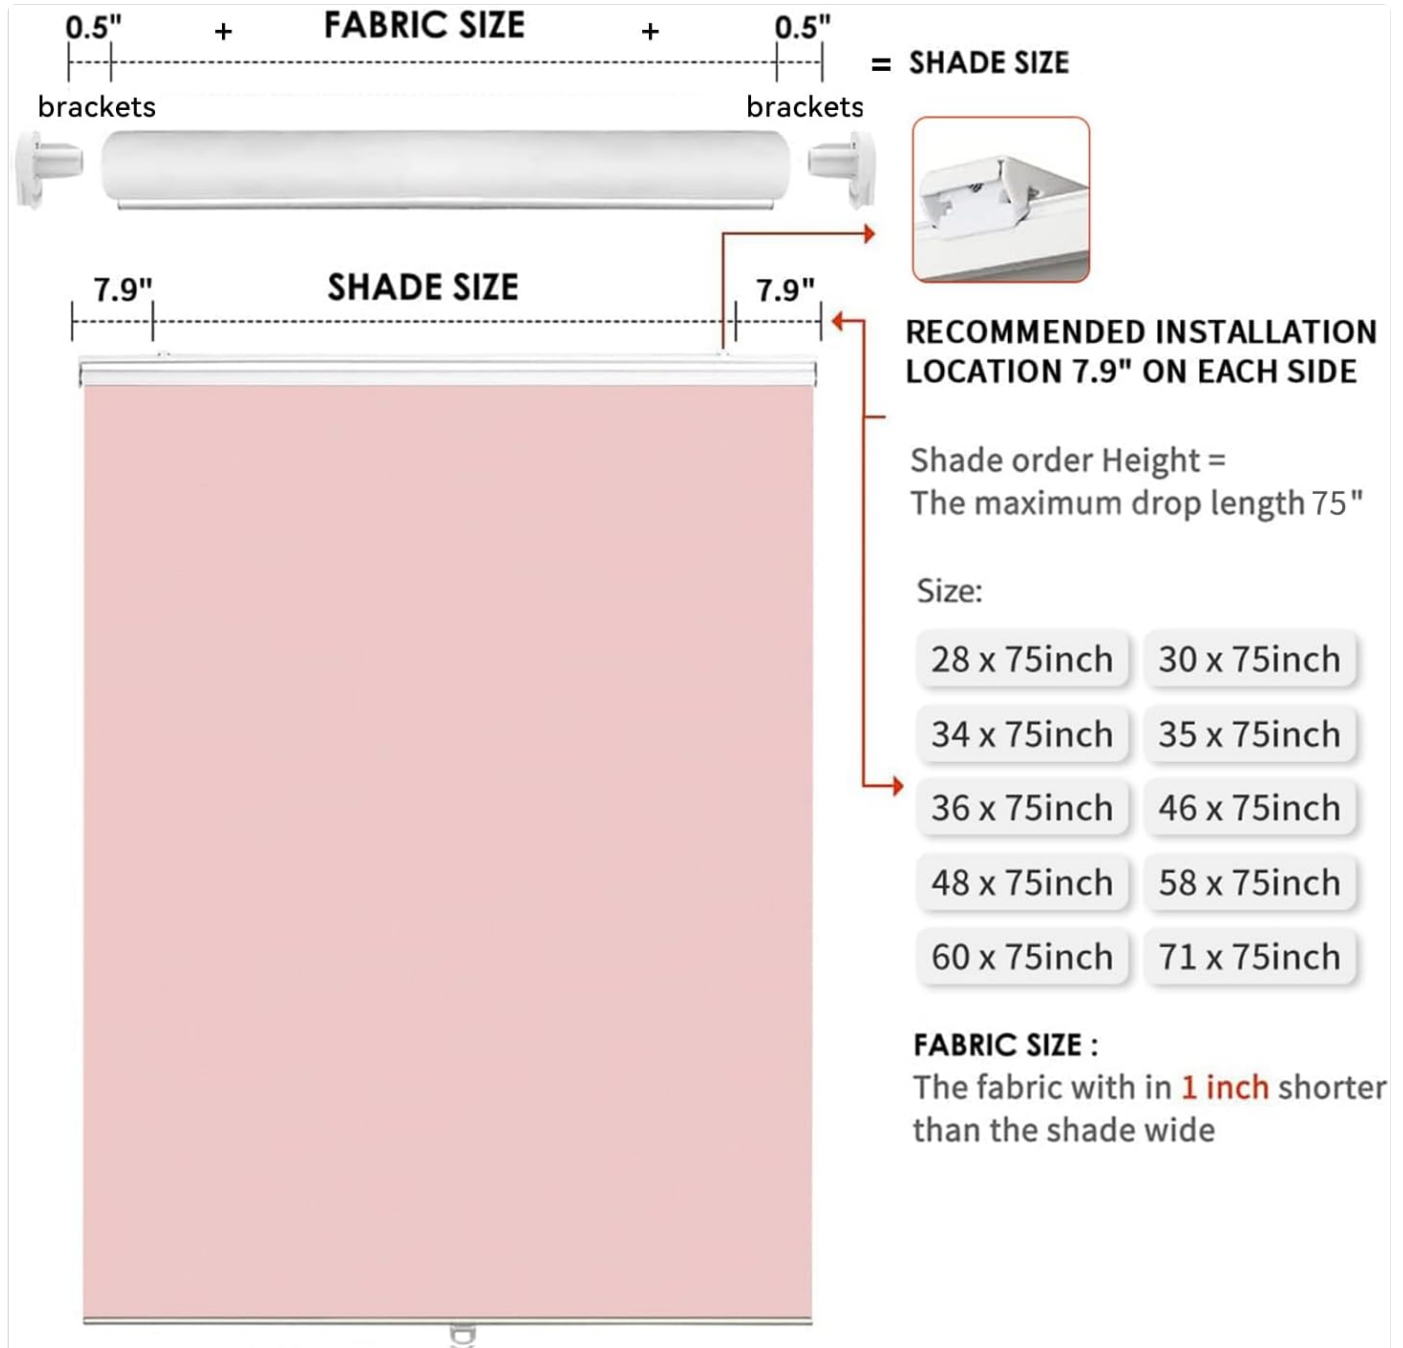


Image: Diagram explaining how the overall shade size relates to the fabric size and mounting brackets, with example dimensions.

5. INSTALLATION

Follow these steps for a secure installation. Refer to the provided video for visual guidance.

1. **Marking:** Hold the shade in the desired mounting position (inside or outside the window frame). Use a pencil to mark the locations where the mounting brackets will be installed. Ensure the marks are level.

2. **Drilling:** Drill pilot holes at the marked locations. For drywall, insert wall anchors before screwing in the brackets.
3. **Attaching Brackets:** Secure the mounting brackets using screws. Ensure they are firmly attached and level.
4. **Mounting the Shade:** Align the headrail of the roller shade with the installed brackets. Push the shade firmly into the brackets until it clicks securely into place.
5. **Attach Handle:** Attach the provided handle to the bottom rail of the shade.

Your browser does not support the video tag.

Video: Joydeco Cordless Roller Blinds Measurement & Installation. This video provides a visual walkthrough of the measurement and installation steps.

6. OPERATING INSTRUCTIONS

Your Joydeco Cordless Roller Shade operates using a smooth spring mechanism. To operate:

- **To Lower:** Gently pull down on the bottom handle of the shade to the desired position. The shade will stay in place once you release the handle.
- **To Raise:** Gently push up on the bottom handle of the shade. The shade will smoothly retract upwards.

Always operate the shade by holding the bottom handle level. Avoid pulling or pushing the shade at an angle, as this can cause the internal mechanism to jam or become defective.

Your browser does not support the video tag.

Video: How to use cellular shades correctly? This video demonstrates the correct and incorrect ways to operate a cordless shade, illustrating the importance of keeping the shade level during operation.

7. MAINTENANCE

To keep your Joydeco roller shades clean and functional:

- **Cleaning:** The shade fabric is anti-static, dustproof, and waterproof. For general cleaning, use a feather duster or a soft, dry cloth to remove dust. For spot cleaning, gently wipe with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Mechanism:** The cordless spring mechanism is designed for durability. Avoid forcing the shade up or down, and ensure it is operated smoothly and evenly.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shade does not roll up or down smoothly.	Shade is being pulled/pushed unevenly or at an angle.	Always operate the shade by holding the bottom handle level and pulling/pushing straight up or down.
Shade is crooked or uneven when fully extended.	Mounting brackets are not level or not installed correctly.	Re-check bracket installation to ensure they are perfectly level and securely fastened. Adjust as necessary.

Problem	Possible Cause	Solution
Light leakage around the edges.	Incorrect measurement for inside mount, or outside mount is too narrow.	For inside mount, ensure shade width is 0.4 inches less than the narrowest window width. For outside mount, ensure shade width extends 2-4 inches beyond the window opening on each side.

9. SPECIFICATIONS

Brand: Joydeco

Model Number: SC0004-PK-60

Product Dimensions: 75"L x 60"W (for this specific variant)

Color: Pink (for this specific variant)

Opacity: 100% Blackout

Material: Polyester Fabric

Operation Mode: Manual, Cordless Spring System

Mounting Type: Inside Mount, Outside Mount

Special Features: Light blocking, Thermal Insulation, UV Protection, Noise Reduction, Anti-static, Dustproof, Waterproof

Product Care: Spot Clean Only

Item Weight: 5.49 pounds

UPC: 810151448107