

Manuals.plus /
› Joydeco /
› Joydeco Cordless Blackout Blinds Instruction Manual

Joydeco SC0004-WH-71

Joydeco Cordless Blackout Blinds
INSTRUCTION MANUAL

Brand: Joydeco | Model: SC0004-WH-71

1. Introduction

Thank you for choosing Joydeco Cordless Blackout Blinds. These roller shades are designed to provide optimal light blocking, privacy, and thermal insulation for various indoor and outdoor settings, including bedrooms, living rooms, offices, and patios. The cordless design ensures ease of use and enhanced safety.



Image 1.1: Joydeco Cordless Blackout Blind installed in a window, demonstrating its light-blocking capability.

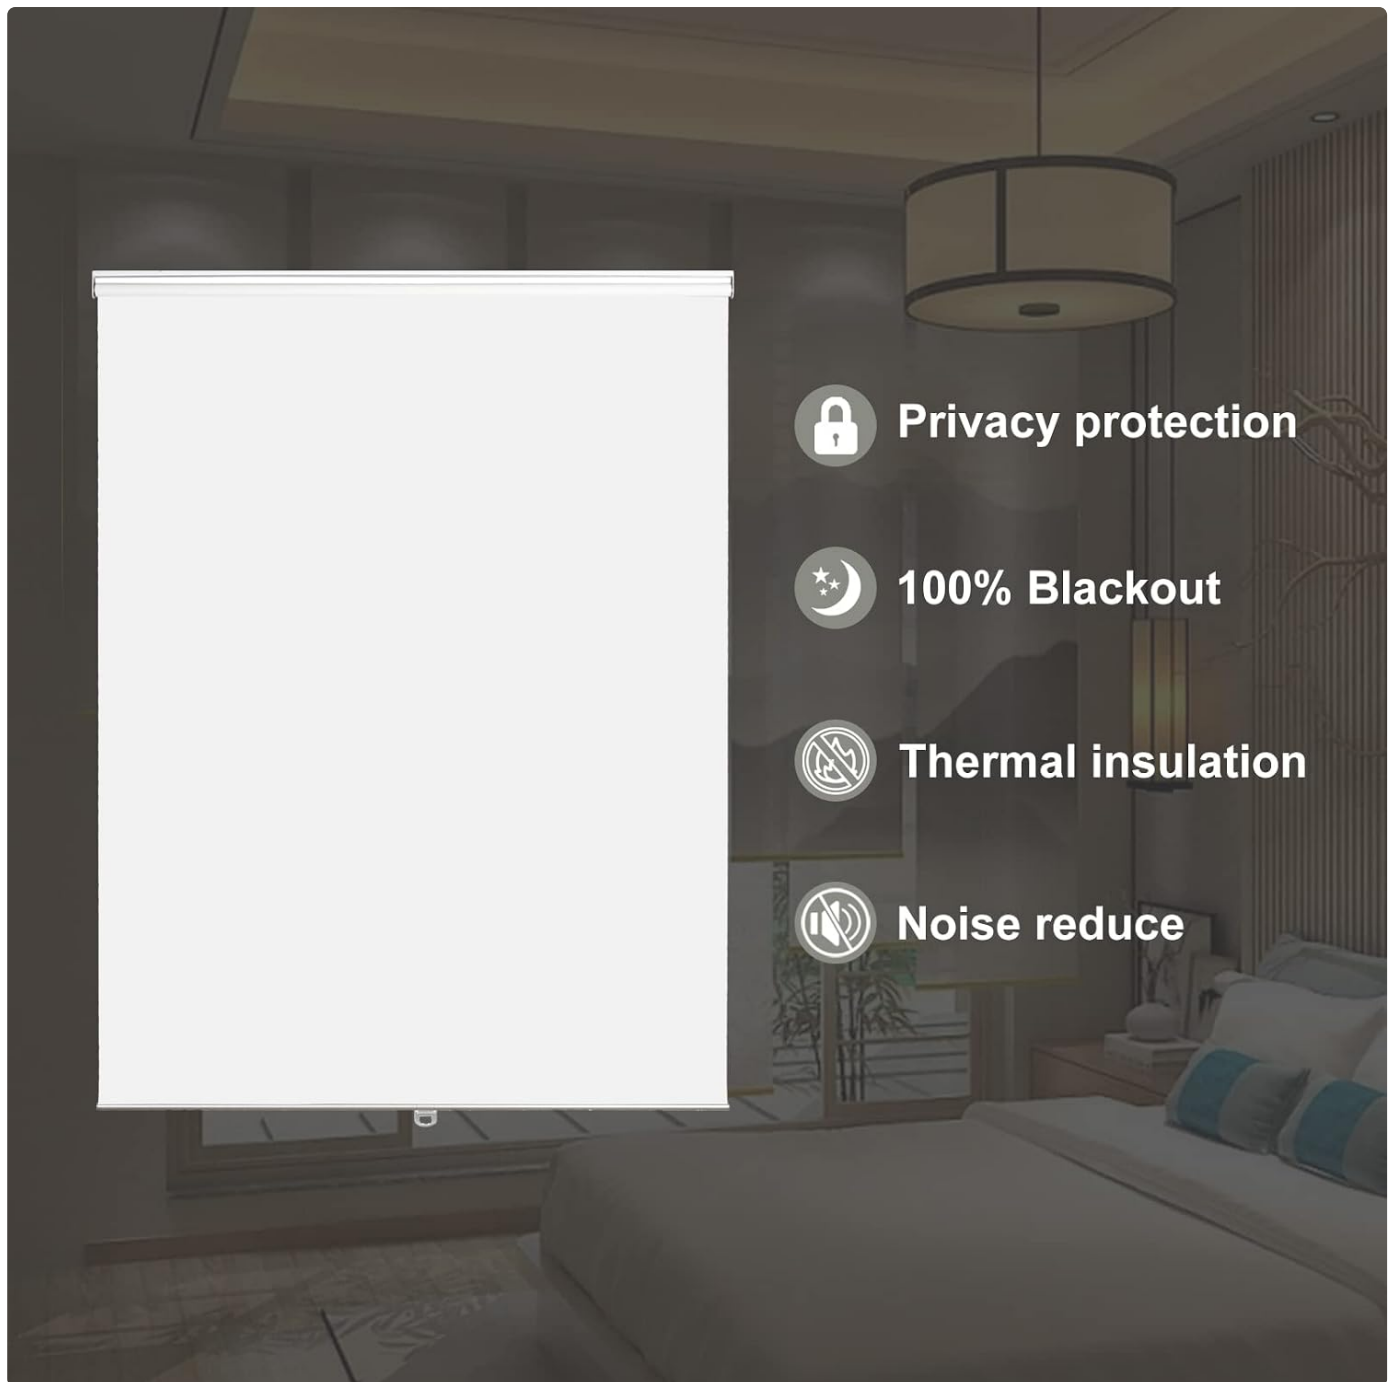


Image 1.2: Key features of the Joydeco Cordless Blackout Blind, including privacy, 100% blackout, thermal insulation, and noise reduction.

2. Safety Information

The Joydeco cordless design prioritizes safety, making it an ideal choice for households with children and pets. Unlike traditional corded blinds that can pose strangulation hazards, these blinds operate without exposed cords, providing peace of mind. The spring mechanism also offers ease of use for elderly individuals or those with hand mobility issues.

CORDLESS BLINDS



- NOT safety for child, pet

Safety

- Safety for child, pet

- complicated to use

Use

- Ease of Use

- tangled cords


Tidy

- WITHOUT tangled cords

Image 2.1: Visual comparison highlighting the safety and ease of use benefits of cordless blinds over corded alternatives.

3. Product Features and Material

 These blackout roller shades are constructed from high-quality fabric with a specialized four-layer coating. This multi-layer design ensures 100% light blockage, superior thermal insulation, and noise reduction. The fabric is also anti-static, dustproof, and waterproof, contributing to its durability and ease of maintenance.

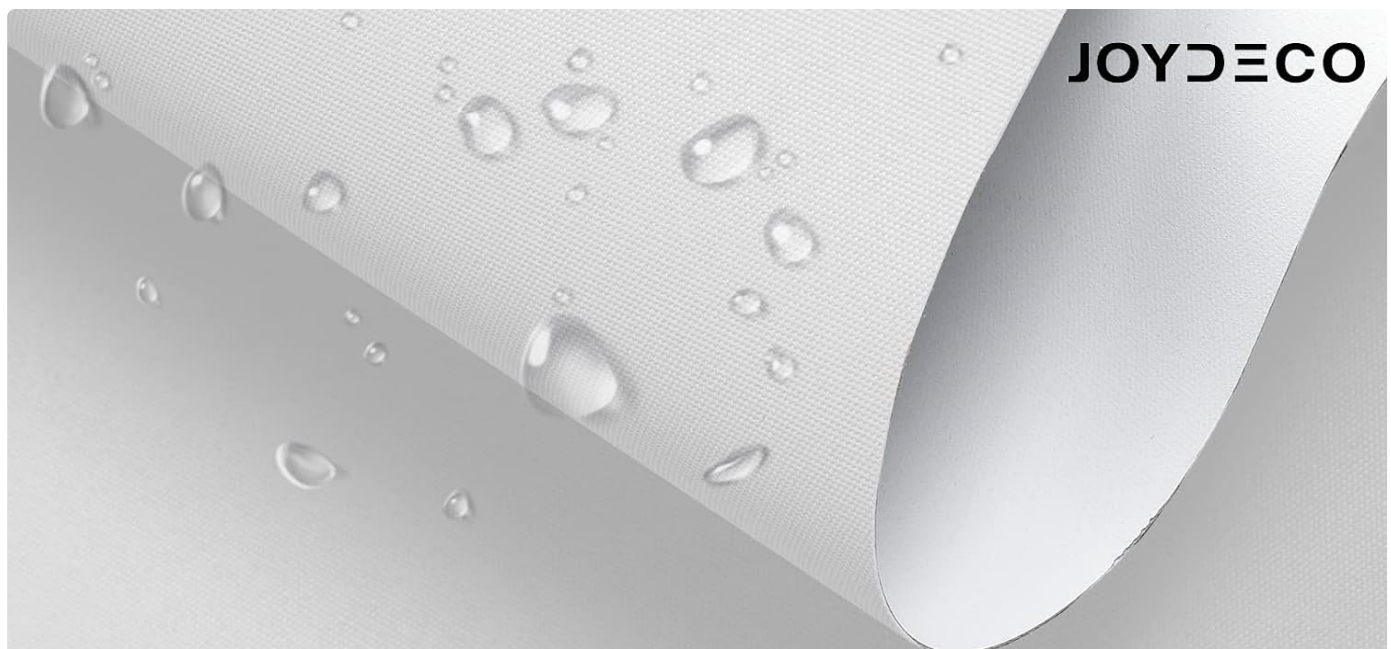

4 LAYERS COATING WORKMANSHIP

100% Blackout, thermal insulation, waterproof

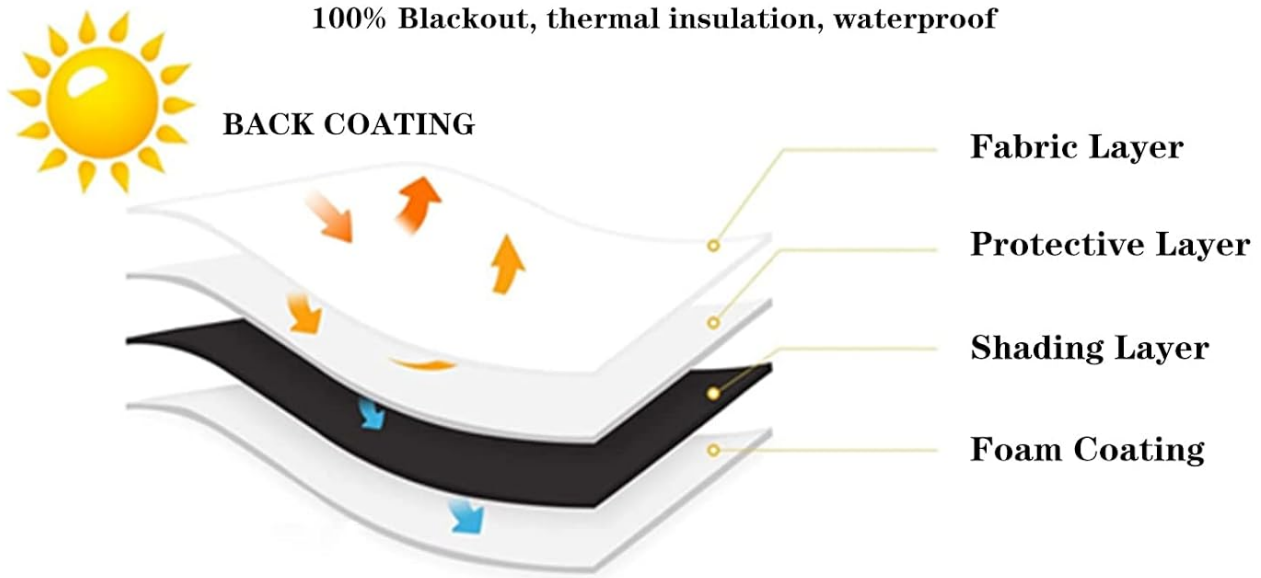


Image 3.1: Detailed view of the four-layer coating workmanship, explaining how the fabric provides 100% blackout, thermal insulation, and waterproofing.

4. Installation Guide

4.1 Choosing the Correct Size and Mounting Type

Proper measurement is crucial for optimal fit and function. Joydeco blinds support both inside mount and outside mount installations. Please follow the guidelines below to determine the correct size for your window.

- **Inside Mount:** For an inside mount, the blind width should be 0.4 inches shorter than the window width. A minimum installation depth of 2 inches is required.
- **Outside Mount:** For an outside mount, the blind width should be 2-4 inches wider than the window width to ensure adequate coverage.

⚠ How to choose a correct size?

INSIDE MOUNT



Width blind width = window width - 0.4"

Depth window depth > 2"

OUTSIDE MOUNT



Width Width: blind width = window width + 4

Image 4.1: Guide for choosing the correct size based on inside mount (blind width = window width - 0.4") and outside mount (blind width = window width + 4").

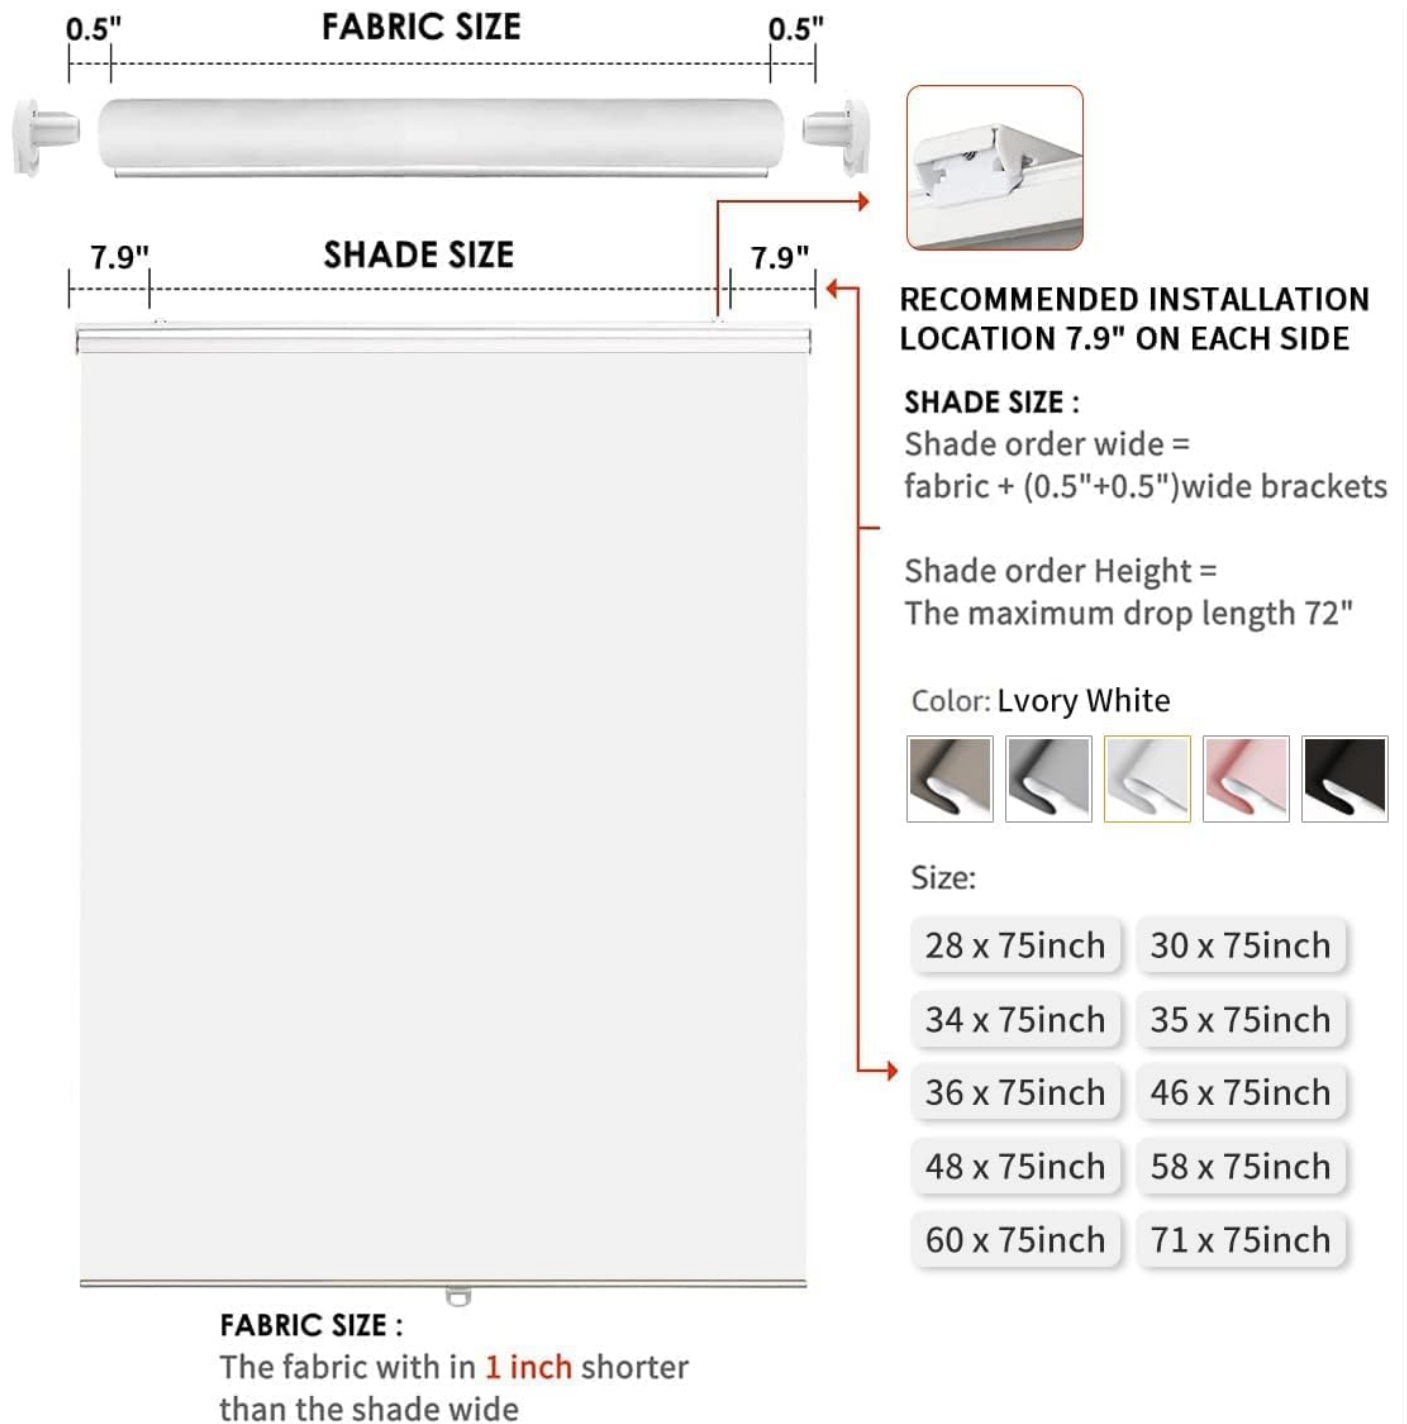


Image 4.2: Detailed diagram explaining shade size (fabric + 0.5" + 0.5" wide brackets) and fabric size (1 inch shorter than shade width).

4.2 Mounting Hardware

All necessary mounting hardware is included with your Joydeco Cordless Blackout Blinds. Please ensure you have appropriate tools for installation, such as a drill, measuring tape, and screwdriver.

4.3 Installation Steps

1. Measure and mark the installation points according to your chosen mounting type (inside or outside mount).
2. Drill pilot holes at the marked locations.
3. Secure the mounting brackets to the window frame or wall using the provided screws.
4. Attach the roller shade assembly to the installed brackets, ensuring it clicks securely into place.
5. Test the operation of the blind to ensure smooth movement.

5. Operation

Joydeco Cordless Blackout Blinds feature a spring mechanism for easy adjustment. To operate the blind:

- **To Raise:** Gently push the bottom rail of the blind upwards. The blind will smoothly retract and hold its position.
- **To Lower:** Gently pull the bottom rail of the blind downwards. The blind will smoothly extend and hold its position.

No cords are needed for operation, making it simple and intuitive for all users.

6. Care and Maintenance

Maintaining your Joydeco Cordless Blackout Blinds is simple due to their anti-static, dustproof, and waterproof properties. Regular cleaning will help preserve their appearance and functionality.

- **Dust Removal:** Use a feather duster or a soft, dry cloth to gently wipe away dust from the fabric surface.
- **Spot Cleaning:** For minor stains or marks, use a damp cloth with mild soap and water. Gently blot the affected area. Avoid harsh chemicals or abrasive cleaners, as these may damage the fabric coating.
- **Deep Cleaning:** Do not immerse the blinds in water. For more stubborn dirt, professional cleaning is recommended.

7. Specifications

Attribute	Value
Brand	Joydeco
Model Number	SC0004-WH-71
Product Dimensions	75"L x 71"W
Size	71"W x 75"H
Color	White
Material	Fabric (Polyester)
Opacity	1 opaque (100% Blackout)
Operation Mode	Manual (Cordless)
Special Feature	Light blocking, Thermal Insulation
Included Components	Mounting Hardware
Mounting Type	Inside Mount & Outside Mount

Attribute	Value
Item Weight	6.49 pounds
Water Resistance Level	Waterproof
Recommended Uses	Indoor, Outdoor, Patio
Room Type	Bedroom, Living Room, Office
Date First Available	May 6, 2022

8. Troubleshooting

If you encounter any issues with your Joydeco Cordless Blackout Blinds, please consider the following general troubleshooting steps:

- **Blind Not Holding Position:** Ensure the blind is properly seated in its brackets. The spring mechanism may require a gentle pull down and then push up to reset its tension.
- **Uneven Movement:** Check for any obstructions in the window frame or on the blind itself. Ensure the brackets are level and securely installed.
- **Installation Issues:** Double-check your measurements and mounting type against the guidelines in Section 4.1. Ensure all screws are tightened.

For persistent issues, please refer to the customer support section.

9. Warranty Information

Joydeco products are manufactured with quality and durability in mind. For specific warranty terms and conditions, including coverage duration and claim procedures, please refer to the product packaging or visit the official Joydeco website. Keep your proof of purchase for warranty claims.

10. Customer Support

Should you require further assistance, have questions about installation, operation, or maintenance, or need to report a product issue, please contact Joydeco customer support. Contact information can typically be found on the product packaging or on the official Joydeco brand website.

We are committed to providing excellent service and support for your Joydeco products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09ZPHXVQ8>

More documents and user manuals: <https://manuals.plus/>