

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TOPELOTEK](#) /
- › [TOPELOTEK 7-inch Kids Tablet KIDS708 User Manual](#)

## TOPELOTEK KIDS708

# TOPELOTEK 7-inch Kids Tablet KIDS708 User Manual

Model: KIDS708

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your TOPELOTEK 7-inch Kids Tablet, model KIDS708. This device is designed to provide an engaging and secure digital experience for children, featuring a durable kid-proof case and comprehensive parental controls. Please read this manual thoroughly before operating the tablet to ensure optimal performance and safety.



Image: The TOPELOTEK KIDS708 tablet in its protective blue case, showcasing its user interface.

# WHAT'S IN THE BOX

---

Please verify that all items are present upon unboxing:

- 1x Android Kids Tablet (Strap not included)
- 1x AC adaptor
- 1x Type-C Cable
- 1x User Manual (this document)
- 1x Quick Solution Guide

## SETUP

---

### 1. Initial Charging

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's charging port and the AC adaptor to a power outlet. The charging indicator will illuminate. A full charge typically takes several hours.

### 2. Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the power button, then select "Power Off" from the on-screen options.
- **To Restart:** Press and hold the power button, then select "Restart" from the on-screen options.

### 3. Connecting to Wi-Fi

1. From the home screen, swipe down from the top to access the Quick Settings panel.
2. Tap the **Wi-Fi icon** to turn it on.
3. Tap and hold the **Wi-Fi icon** to open Wi-Fi settings.
4. Select your desired network from the list and enter the password if prompted.
5. Once connected, the Wi-Fi icon will indicate a successful connection.

### 4. Parental Controls and Child Profiles

The TOPELOTEK KIDS708 tablet features a dual system: a standard Android System and a dedicated iWawa Child System. Parental controls are managed within the iWawa system.

1. **Accessing iWawa:** Locate and tap the iWawa app icon on the Android home screen to switch to the child-friendly interface.
2. **Setting up Parental Controls:** Within iWawa, access the parental control settings (usually indicated by a gear or lock icon, often requiring a password set by the parent). Here you can:
  - Create and manage individual child profiles.
  - Set daily screen time limits and learning targets.
  - Approve or block specific applications (e.g., YouTube, Netflix, Disney+).
  - Filter age-appropriate web content.
  - Manage in-app purchases.
3. **Exiting iWawa:** To return to the standard Android system, locate the exit option within iWawa (often a home icon or power icon) and enter your parental control password.

# PARENTAL CONTROL

Learn to play, Play to learn



Image: The parental control interface, demonstrating content management options.

## OPERATING INSTRUCTIONS

### 1. Navigating the Interface

- **Android System:** Standard Android interface for general tablet use. Swipe to navigate home screens, access app drawer, and use notification panel.
- **iWawa Child System:** A simplified, child-friendly interface with large icons and curated content. Navigation is intuitive for young users.

### 2. Downloading Applications

The tablet supports downloading applications from the Google Play Store. Ensure Wi-Fi is connected and you are in the standard Android system.

1. Open the **Google Play Store** app.
2. Search for desired applications (e.g., Netflix, Khan Academy Kids, Duolingo, YouTube Kids).

3. Tap "Install" to download and install the app.
4. For child profiles, parents must approve app downloads via the parental control settings in iWawa.



Image: Examples of educational and entertainment content available through the Google Play Store.

### 3. Using the Camera

The tablet is equipped with dual cameras (front and rear) for capturing photos and videos.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo or switch to video mode to record.
3. Use the camera switch icon to toggle between the front and rear cameras.

## DUAL CAMERAS STORE MORE BEAUTIFUL MOMENTS



Image: The tablet's dual camera functionality in use.

### 4. Storage Management

The tablet comes with 32GB of internal storage, expandable up to 512GB via a Micro SD card (not included).

1. **Inserting an SD Card:** Locate the SD card slot on the side of the tablet. Gently insert the Micro SD card until it clicks into place.
2. **Managing Storage:** Go to **Settings > Storage** to view storage usage and manage files. You can move compatible apps and media to the SD card to free up internal space.

## MAINTENANCE

---

### 1. Cleaning the Tablet and Case

- Use a soft, lint-free cloth to gently wipe the screen and tablet body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid harsh chemicals.

- The silicone case can be removed and washed with mild soap and water if necessary. Ensure it is completely dry before reattaching.



*Image: The durable kid-proof case provides protection against drops and impacts.*

## 2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Use only the provided charger and cable.
- For optimal battery longevity, avoid completely draining the battery frequently.

## 3. Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security enhancements. Go to **Settings > System > System update**

## TROUBLESHOOTING

---

If you encounter issues, please refer to the Quick Solution Guide included with your tablet. Below are some common troubleshooting tips:

- **Tablet not powering on:** Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then attempt to power on.
- **Wi-Fi connection issues:** Verify your Wi-Fi password. Try restarting your router and the tablet.
- **Apps crashing or freezing:** Close and reopen the app. If the issue persists, clear the app's cache (**Settings > Apps > [App Name] > Storage > Clear cache**).
- **Slow performance:** Close unused apps. Consider uninstalling unnecessary applications or moving media files to an SD card to free up internal storage.
- **Parental control issues:** Double-check your parental control password. Ensure settings are correctly configured for each child profile.

## SPECIFICATIONS

Feature	Specification
Screen Size	7 Inches
Screen Resolution	1024x600 Pixels
Processor	1.6 GHz Quad-Core
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 512GB via Micro SD Card
Operating System	Android 11.0
Battery Capacity	3500mAh (8-10 hours normal use)
Wireless Connectivity	Wi-Fi (802.11ac), Bluetooth
Cameras	Dual Camera (Front & Rear, Rear 2 MP)
Item Weight	1.41 pounds
Product Dimensions	8 x 3 x 7 inches

## WARRANTY AND SUPPORT

TOPELOTEK offers a 30-day free exchange policy for your tablet. Additionally, lifetime technical support is provided for any issues you may encounter. For assistance, please do not hesitate to contact TOPELOTEK customer service. Your satisfaction is our priority.

For support, please refer to the contact information provided with your purchase or visit the official TOPELOTEK website.



## Related Documents - KIDS708

	<p><a href="#">TOPELOTEK KIDS08 User Manual: Setup, Parental Controls, and FCC Compliance</a></p> <p>User manual for the TOPELOTEK KIDS08 tablet. Covers product features, detailed setup for parental controls using iWawa, kid application management, factory reset instructions, and essential FCC compliance and SAR information.</p>
	<p><a href="#">TOPELOTEK KIDS08 User Manual: Setup, Parental Controls, and FCC Compliance</a></p> <p>User manual for the TOPELOTEK KIDS08 tablet. Covers product features, detailed setup for parental controls using iWawa, kid application management, factory reset instructions, and essential FCC compliance and SAR information.</p>

Documents - TOPELOTEK – KIDS708

no relevant documents