Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > EuropAce /
- > EuropAce EVC 3201W Super Cyclone Vacuum Cleaner User Manual

EuropAce EVC 3201W

EuropAce EVC 3201W Super Cyclone Vacuum Cleaner User Manual

Model: EVC 3201W

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- Always ensure the power supply matches the voltage specified on the rating label.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Unplug the appliance from the power outlet before cleaning or performing maintenance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up burning or smoking materials, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- · This appliance is for household use only.

2. PRODUCT OVERVIEW

The EuropAce EVC 3201W is a Super Cyclone Vacuum Cleaner designed for efficient dry cleaning. It features a powerful 2000W motor and a HEPA filter for trapping fine particles, contributing to a cleaner environment.



Figure 1: EuropAce EVC 3201W Super Cyclone Vacuum Cleaner. This image displays the complete vacuum cleaner unit, including the main body (canister), the flexible hose connected to the main unit, the telescopic metal tube, and the floor nozzle attachment. The main body is dark grey with orange accents, featuring large wheels and a transparent dust collection area.

Key Features:

- Super Cyclone Separation System: Efficiently separates dust from air, maintaining strong suction.
- **HEPA Filter:** Traps harmful particles and allergens, improving air quality.
- Powerful 2000W Motor: Provides strong suction for thorough cleaning.
- Adjustable Speed Control: Allows customization of suction power for different surfaces.
- Easy Dust Bucket Disposal: Designed for convenient and hygienic emptying.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner before first use.

1. **Connect the Hose:** Insert the flexible hose into the air inlet opening on the main unit until it clicks securely into place. To detach, press the release button and pull.

- 2. **Attach the Telescopic Tube:** Connect the curved end of the hose handle to the telescopic metal tube. Extend the telescopic tube to your desired length by pressing the adjustment button and pulling the tube.
- 3. **Attach the Floor Nozzle:** Connect the floor nozzle to the end of the telescopic tube. Ensure it is firmly attached.
- 4. **Power Connection:** Extend the power cord from the rear of the unit and plug it into a suitable 240V AC power outlet.

4. OPERATING INSTRUCTIONS

Operating your EuropAce EVC 3201W is straightforward.

- 1. Power On/Off: Press the power button located on the main unit to turn the vacuum cleaner on or off.
- Adjust Suction Power: Use the adjustable speed control dial (if present) on the main unit or the air flow control on the hose handle to regulate suction power. Reduce suction for delicate fabrics and increase for heavily soiled carpets.
- 3. **Vacuuming:** Guide the floor nozzle over the surface to be cleaned. For optimal results, move the nozzle slowly and steadily.
- 4. **Cord Rewind:** After use, unplug the power cord from the outlet. Press the cord rewind button (if present) on the main unit to automatically retract the power cord.

Using Attachments:

- Crevice Tool: Ideal for narrow gaps, corners, and edges.
- **Upholstery Brush:** Suitable for cleaning furniture, curtains, and other fabric surfaces.
- Dusting Brush: For delicate surfaces like shelves, blinds, and keyboards.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner. Always unplug the appliance before performing any maintenance.

5.1. Emptying the Dust Bucket

- 1. Locate the dust bucket release button/handle on the main unit.
- 2. Press the button and carefully remove the dust bucket from the vacuum cleaner.
- 3. Position the dust bucket over a waste bin. Open the bottom lid of the dust bucket (if applicable) or twist to unlock and empty the contents.
- 4. Close the dust bucket lid securely and reinsert the dust bucket into the main unit until it clicks into place.

5.2. Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly, typically after every 3-5 uses, or when suction power noticeably decreases. It is recommended to replace the HEPA filter annually or as needed.

- 1. Remove the dust bucket as described above.
- 2. Locate the HEPA filter, usually positioned within or near the dust bucket assembly.
- 3. Carefully remove the HEPA filter.

- 4. Tap the filter gently over a waste bin to dislodge loose dust. For a more thorough clean, rinse the filter under cool running water. Do not use detergents or hot water.
- 5. Allow the HEPA filter to air dry completely for at least 24 hours before reinserting it. Do not use the vacuum cleaner with a wet filter.
- 6. Reinsert the dry HEPA filter and then the dust bucket.

5.3. Cleaning Other Parts

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Check the hose, telescopic tube, and nozzles for blockages. Remove any debris that may be obstructing airflow.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; no power at outlet; power button not pressed.	Check power cord connection; test outlet with another appliance; press power button firmly.
Low suction power.	Dust bucket full; filters clogged; hose/nozzle blocked; air flow control open.	Empty dust bucket; clean/replace filters; check for and remove blockages; close air flow control.
Unusual noise.	Blockage in hose/nozzle; motor issue.	Check for and remove blockages. If noise persists, contact customer support.
Dust escaping from unit.	Dust bucket not properly closed; filters not correctly installed or damaged.	Ensure dust bucket is securely closed; check filter installation; replace damaged filters.

7. SPECIFICATIONS

Model: EVC 3201WBrand: EuropAce

• Type: Super Cyclone Cylinder Vacuum

• Motor Power: 2000 Watts

Voltage: 240 VoltsFilter Type: HEPADust Capacity: 2 Liters

Power Source: Corded Electric
Item Weight: 4.1 Kilograms

• Package Dimensions: 48.6 x 33.2 x 32 cm

8. WARRANTY AND SUPPORT


EuropAce products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official EuropAce website. Keep your purchase

receipt as proof of purchase.

For technical assistance, spare parts, or service inquiries, please contact EuropAce customer support. Contact details can typically be found on the product packaging or the official brand website.

Website: www.europace.com.sg

Related Documents - EVC 3201W

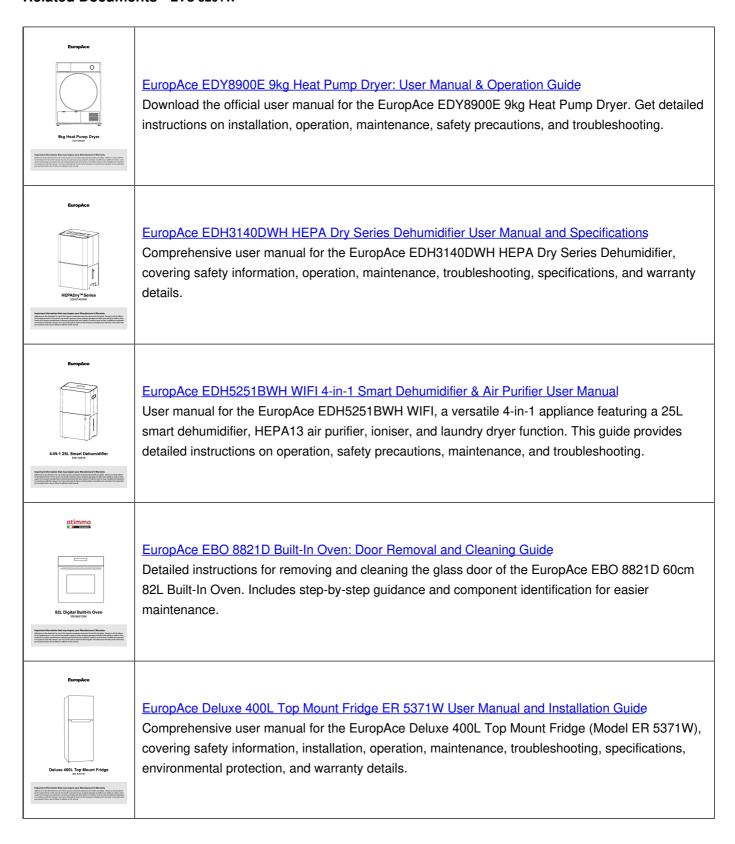



Otimmo 90cm Slimline Hood with Touch Control (ECH5503E) User Manual

Comprehensive user manual for the Otimmo 90cm Slimline Hood with Touch Control (Model ECH5503E) by EuropAce, covering safety, installation, operation, maintenance, and warranty information.