



Manuals.plus /

- › Sharper Image /
- › Sharper Image Portable Evaporative Cooler Instruction Manual

## Sharper Image 206051

# Sharper Image Portable Evaporative Cooler Instruction Manual

Model: 206051  
Brand: Sharper Image

## INTRODUCTION

---

Thank you for choosing the Sharper Image Portable Evaporative Cooler. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This evaporative cooler is designed to efficiently cool areas up to 250 sq. ft. It features multiple settings including oscillation, misting, and humidifier functions, providing versatile comfort. Its portable design with wheels ensures easy transport, and the included wireless remote offers convenient control.



Figure 1: Front view of the Sharper Image Portable Evaporative Cooler.

## KEY FEATURES

---

- **Water Tank Capacity:** 1.6 Liters, ensuring extended operation.
- **Wind Speed Settings:** Offers low, medium, or high wind speed options for customized comfort.
- **Coverage Area:** Recommended for rooms up to 250 sq. ft.
- **LED Water Level Indicator:** Provides clear visibility of the water level, indicating when a refill is needed.
- **Oscillation Function:** Distributes cool air evenly across the room.
- **Misting Function:** Adds a fine mist to the airflow for enhanced cooling.
- **Humidifier Settings:** Helps maintain optimal humidity levels.
- **Portable Design:** Equipped with wheels for easy movement between locations.
- **Wireless Remote Control:** Allows for convenient operation from a distance.

## SETUP

---

1. **Unpacking:** Carefully remove the evaporative cooler from its packaging. Retain all packaging materials for future storage or transport.
2. **Placement:** Position the unit on a flat, stable surface. Ensure there is adequate space around the unit for optimal airflow and oscillation. The portable design allows for flexible placement in various indoor environments.

### 3. Water Tank Filling:

Locate the water tank at the rear of the unit. The tank is detachable for easy filling. Open the water tank cover and fill with clean, cool water. Do not overfill beyond the maximum fill line. The LED water level indicator will help monitor the water level.



Figure 2: Water tank access for filling.

### 4. Power Connection: Plug the power cord into a standard electrical outlet.

Your browser does not support the video tag.

Video 1: Overview of the Portable Evaporative Cooler, demonstrating its features and ease of use, including water filling.

## OPERATING INSTRUCTIONS

---

The Sharper Image Portable Evaporative Cooler can be operated using the control panel on the unit or the included wireless remote control.



Figure 3: Control panel of the evaporative cooler.

1. **Power On/Off:** Press the **On/Off** button to turn the unit on or off. The LED display will illuminate when the unit is active.
2. **Adjusting Speed:** Press the **Speed** button repeatedly to cycle through low, medium, and high wind speed settings.
3. **Oscillation:** Press the **Oscillation** button to activate or deactivate the oscillating function, which allows the unit to swing from side to side, distributing air over a wider area.
4. **Misting Function:** Press the **Mist** button to turn the misting function on or off. Ensure the water tank is filled for this feature to operate.
5. **Timer Setting:** Press the **Timer** button to set an automatic shut-off time. Refer to the display for available time increments.
6. **Economic Mode:** Press the **Economic** button to activate an energy-saving mode, which adjusts fan speed and mist output for efficiency.
7. **Swing Function:** Press the **Swing** button to control the vertical airflow direction.



Figure 4: The evaporative cooler in use, providing cooling comfort.

## MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your evaporative cooler.

- **Water Tank Cleaning:** Periodically empty and clean the water tank to prevent mineral buildup and mold growth. Use a mild detergent and rinse thoroughly.
- **Exterior Cleaning:** Wipe the exterior surfaces of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Air Filter Cleaning:** Check and clean the air filter regularly, especially if the unit is used frequently or in dusty environments. Refer to the product diagram for filter location and removal instructions.
- **Storage:** If storing the unit for an extended period, ensure the water tank is completely empty and dry. Store in a cool, dry place away from direct sunlight.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit does not turn on.	No power, power cord not properly connected.	Check power outlet, ensure power cord is securely plugged in.
No mist or weak mist.	Water tank empty, mist function not activated, mineral buildup.	Refill water tank, press the Mist button, clean the water tank and misting components.
Weak airflow.	Air filter clogged, fan speed too low.	Clean or replace air filter, increase fan speed.
Unusual noise.	Unit not on a level surface, internal obstruction.	Ensure unit is on a flat surface, check for any foreign objects inside the fan area (with unit off and unplugged).

## TECHNICAL SPECIFICATIONS

Specification	Detail
Brand	Sharper Image
Model Name	206051
Mounting Type	Freestanding
Special Feature	Portable
Color	White
Controls Type	Remote
Reservoir Capacity	1.6 Liters
Floor Area Coverage	250 Square Feet
Product Dimensions	15.7"D x 15.7"W x 42.5"H
Noise Level	65 dB
Included Components	Fan, Remote
UPC	854761007866

## WARRANTY AND SUPPORT

This Sharper Image product is manufactured and distributed by Sharper Image. For any questions regarding product operation, maintenance, or troubleshooting not covered in this manual, please refer to the official Sharper Image website or contact their customer support. Specific warranty details may vary and are typically provided with the product packaging or on the manufacturer's official website.

Please retain your proof of purchase for warranty claims.