

Kassioneel Universal Replacement Remote Control

Kassioneel Universal Replacement Remote Control User Manual

For Skyworth Android Smart TV Models: 50UC6200, 43UB5500, 43UB5550, 43UB5560, 50UB5500, 50UB5550, 50UB5560, 55UB5500, 55UB5550, 55UB5560

1. INTRODUCTION

This manual provides instructions for the Kassioneel Universal Replacement Remote Control. This remote is designed to be compatible with various Skyworth Android Smart TV models, offering a straightforward replacement solution without the need for complex programming.

Please read this manual carefully before using the remote control to ensure proper operation and to understand its features and limitations.

2. PRODUCT OVERVIEW

The Kassioneel Universal Replacement Remote Control is a pre-programmed device designed for immediate use with compatible Skyworth Android Smart TVs. It features soft plastic buttons for comfortable use and is constructed from durable ABS material for a long lifespan.



Image: Front view of the remote control, illustrating its design and highlighting features such as four dedicated shortcut keys for streaming services (Netflix, Prime Video, YouTube, Google Play), soft plastic buttons, durable ABS material, and the "no need to set up" functionality.

Key Features:

- **Pre-Programmed:** Ready to use right out of the package. No setup required.
- **Dedicated Shortcut Keys:** Includes direct access buttons for popular streaming services like Netflix, Prime Video, YouTube, and Google Play.
- **Durable Construction:** Made with ABS material and soft plastic buttons for enhanced durability and user comfort.
- **No Voice Function:** This replacement remote does not support voice control features.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



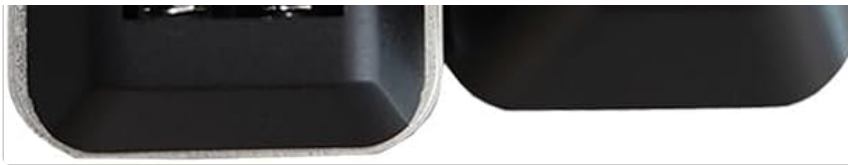


Image: The back of the remote control with the battery cover removed, showing the two slots for AAA batteries and indicating the correct polarity for insertion.

Note: Always use new alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with compatible Skyworth Android Smart TVs. Point the remote directly at your television.



Image: A user holding the remote control, demonstrating its use by pointing it towards a television, with an overlay indicating signal transmission.

4.1 Basic Functions

- **Power Button (⏻):** Turns the TV on or off.

- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (VOL +/-):** Adjusts the television volume.
- **Channel Up/Down (P ^/v):** Changes channels sequentially.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen.
- **Menu Button:** Opens the TV's main menu.
- **Exit Button:** Exits the current menu or application.

4.2 Shortcut Keys

The remote includes dedicated buttons for quick access to popular streaming applications:

- **NETFLIX:** Launches the Netflix application.
- **prime video:** Launches the Amazon Prime Video application.
- **YouTube:** Launches the YouTube application.
- **Google Play:** Launches the Google Play Store or Google Play Movies & TV application.

Note: The functionality of shortcut keys depends on the installed applications and internet connectivity of your Skyworth Android Smart TV.

5. COMPATIBILITY

This Kassione Universal Replacement Remote Control is compatible with the following Skyworth Android Smart TV models:

- 50UC6200
- 43UB5500
- 43UB5550
- 43UB5560
- 50UB5500
- 50UB5550
- 50UB5560
- 55UB5500
- 55UB5550
- 55UB5560

Important: This remote is a replacement and may not offer all the advanced features (e.g., voice control) found on original equipment manufacturer (OEM) remotes for these models.

6. SPECIFICATIONS

Feature	Detail
Brand	Kassione
Compatible Devices	Skyworth Android Smart Televisions (listed models)

Power Source	2 x AAA Alkaline Batteries (not included)
Special Feature	No Programming Required
Color	Silver (front), Black (back)
Product Dimensions	8.41 x 1.74 x 0.74 inches (approximately)
Item Weight	2.65 ounces (without batteries)
Material	ABS Plastic

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Verify that the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - Check if the button is physically stuck or damaged.
 - Some advanced functions or specific smart TV features might not be supported by this replacement remote.
- **Voice control not working:**
 - This replacement remote control does not include voice control functionality. This is a known limitation.
- **Shortcut keys (Netflix, YouTube, etc.) not launching apps:**
 - Ensure your Skyworth Android Smart TV is connected to the internet.
 - Verify that the respective applications are installed and updated on your TV.

8. MAINTENANCE AND CARE

- Keep the remote control dry. Avoid exposure to water or high humidity.
- Do not expose the remote to direct sunlight or extreme temperatures.
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Remove batteries if the remote is not used for an extended period to prevent leakage.

9. SAFETY INFORMATION

- Keep batteries out of reach of children. If swallowed, seek medical attention immediately.
- Dispose of used batteries according to local regulations. Do not dispose of batteries in fire.
- Do not attempt to disassemble or modify the remote control.

10. WARRANTY AND SUPPORT

This Kassionel product is designed for reliability and performance. For any issues or inquiries regarding your replacement remote control, please contact the retailer or manufacturer directly for support.

Please retain your purchase receipt as proof of purchase for any warranty claims.