

ONN 100008725

onn 1000W CD Mini Component System with Bluetooth Wireless Technology

Model: 100008725

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your onn. 1000W CD Mini Component System. This system offers versatile audio playback options, including CD, FM radio, and Bluetooth wireless technology, along with a USB charging port and dynamic LED light effects. Please read this manual thoroughly before using the product to ensure proper and safe operation.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury, always follow basic safety precautions when using this product. Keep this manual for future reference.

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Ensure proper ventilation around the unit.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x onn. CD Stereo System (Main Unit)

- 1 x Left Speaker
- 1 x Right Speaker
- 1 x Subwoofer
- 1 x Remote Control
- 1 x Quick Start Guide
- Attached Power Cord (4.92 ft / 1.5 m)



Image: The complete onn. 1000W CD Mini Component System, showing the main unit, two satellite speakers, and a subwoofer. A remote control is also visible.

PRODUCT OVERVIEW

Main Unit Controls and Ports



Image: A close-up view of the main unit's front panel, highlighting the central volume knob, playback controls, equalizer buttons, LED light mode buttons, CD tray, and USB charging port.

The main unit features a central display, a large volume knob, and various buttons for mode selection, playback control, equalizer settings, and LED light effects. Below the main controls, you will find the tray-loading CD player and a USB charging port.

Speaker System



Image: A separate view of the subwoofer (left) and the two satellite speakers (center and right), showcasing their design.

The system includes two satellite speakers and a dedicated subwoofer for a 2.1 channel stereo audio output. The

speakers are designed to connect directly to the main unit.

SETUP

1. **Placement:** Place the main unit, speakers, and subwoofer on a stable, flat surface. Ensure adequate ventilation around all components.
2. **Connect Speakers:** Connect the left speaker, right speaker, and subwoofer to their respective audio output ports on the back of the main unit. Ensure connections are secure.
3. **Power Connection:** Plug the attached power cord into a standard electrical outlet.
4. **Initial Power On:** Press the Power button on the main unit or remote control to turn on the system. The digital clock will display.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button on the main unit or the remote control to turn the system on or off.

Setting the Clock

When the unit is in standby mode, press and hold the **CLOCK** button (if available on remote) or a dedicated clock setting button on the main unit. Use the ◀◀/▶▶ buttons to adjust hours and minutes, and press **CLOCK** again to confirm.

Bluetooth Wireless Technology

1. Press the **MODE** button on the main unit or remote until "BT" or "Bluetooth" appears on the display.
2. The system will enter pairing mode, indicated by a flashing Bluetooth icon or "PAIRING" message.
3. On your Bluetooth-enabled device (smartphone, tablet, laptop), enable Bluetooth and search for "onn. 1000W Mini System" or similar.
4. Select the system from the list to pair. Once connected, the Bluetooth indicator will become solid.
5. You can now stream audio wirelessly from your device to the system.

CD Playback

1. Press the **MODE** button until "CD" appears on the display.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD or CD-R/RW disc with the label side facing up into the tray.
4. Press the **OPEN/CLOSE** button again to close the tray. The system will read the disc and begin playback automatically.
5. Use the **PLAY/PAUSE** button to pause or resume playback.
6. Use the ◀◀/▶▶ buttons to skip tracks.

FM Radio Operation

1. Press the **MODE** button until "FM" appears on the display.
2. To auto-scan and save presets: Press and hold the **SCAN** or **PLAY/PAUSE** button. The system will automatically scan for and store available FM stations (up to 20 presets).
3. To manually tune: Use the ◀◀/▶▶ buttons to fine-tune the frequency.
4. To select a preset station: Use the **PRESET** buttons or number pad on the remote.

USB Charging Port

The front panel features a USB port (5V/1A output) for charging compatible devices. Simply connect your device's USB charging cable to this port.

Digital Equalizer Settings

Press the **EQ** button repeatedly to cycle through preset equalizer modes such as Rock, Jazz, Pop, and Classical. Select the mode that best suits your audio preference.

LED Light Effects

The system features color-changing LED light effects on the speakers. Press the **LIGHT** button to cycle through different light modes or to turn the lights off.



Image: The system with speakers illuminated by green LED lights.



Image: The system with speakers illuminated by purple LED lights.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior surfaces of the unit and speakers. Do not use liquid cleaners or aerosol sprays.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- **Ventilation:** Ensure that the ventilation openings are not blocked by dust or debris. Periodically clean around the vents.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely plugged in. Power outlet not active.	Ensure power cord is firmly connected to the unit and a working outlet. Test the outlet with another device.
No sound	Volume too low. Speakers not connected properly. Incorrect input mode.	Increase volume. Check speaker connections. Press MODE to select the correct input (CD, BT, FM).
Bluetooth pairing fails	Device too far. Bluetooth not enabled on device. System not in pairing mode.	Move device closer to the system. Ensure Bluetooth is enabled on your device. Press MODE to select Bluetooth and enter pairing mode.

Problem	Possible Cause	Solution
CD does not play	Disc inserted incorrectly. Disc is dirty or scratched. Incorrect mode selected.	Ensure disc is inserted label-side up. Clean the disc with a soft cloth. Try a different disc. Select CD mode.
Poor FM reception	Antenna not extended or positioned correctly. Interference.	Extend and adjust the FM antenna for better reception. Move the unit away from other electronic devices that may cause interference.

SPECIFICATIONS

- **Brand:** ONN
- **Model:** 100008725
- **Audio Output Mode:** Stereo
- **Speaker Configuration:** 2.1 Channel (2 satellite speakers, 1 subwoofer)
- **RMS Output Wattage:** 500W
- **Peak Output Wattage:** 1000W
- **Supported Audio Formats:** Bluetooth, CD, CD-R/RW
- **Tuner Technology:** Digital FM (20 Presets)
- **Compatible Devices:** Laptop, Tablet, Smartphone
- **Power Source:** Corded Electric
- **USB Charging Port:** 5V/1A Output
- **Remote Control:** Included
- **Dimensions (Package):** 57 x 45.2 x 36.8 cm (22.4 x 17.8 x 14.5 inches)
- **Weight (Package):** 13.72 kg (30.25 lbs)
- **Special Features:** Color-changing LED light effects, Digital Clock, Digital Equalizer (Rock, Jazz, Pop, Classical)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the Quick Start Guide included in your package or visit the official ONN website. Keep your purchase receipt as proof of purchase for any warranty claims.
Note: Specific warranty terms and contact information may vary by region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I perform a hard reset on my onn. 1000W CD Mini Component System (Model 100008725) if it will not turn on?

The official manual for the onn. 1000W CD Mini Component System (Model 100008725) does not list a specific button combination for a "hard reset." However, if your unit is unresponsive or will not turn...

[Read full answer](#)

Why won't my onn. 1000W CD Mini Component System (model 100008725) turn on?

If your onn. 1000W CD Mini Component System (Model 100008725) will not turn on, please follow these troubleshooting steps based on the user manual: Check the Power Connection: Ensure the attached power cord is firmly...

[Read full answer](#)

Where is the hidden pinhole on my onn. 1000W CD Mini Component System (model 100008725) to perform a reset?

Based on the official manual for the onn. 1000W CD Mini Component System (Model 100008725), there is no mention of a physical "hidden pinhole" for resetting the device. Most mini component systems of this...

[Read full answer](#)