

## SVAN XVNWDL015102

# SVAN Wonder 5kg Washing Machine User Manual

Model: XVNWDL015102

## 1. INTRODUCTION

Thank you for choosing the SVAN Wonder 5kg Washing Machine, model XVNWDL015102. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the washing machine and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

To prevent personal injury or property damage, please observe the following safety precautions:

- Ensure the washing machine is properly grounded before use.
- Do not install or store the appliance where it will be exposed to temperatures below freezing or outdoor weather conditions.
- Keep flammable materials and vapors away from the washing machine.
- Do not allow children to play on or in the appliance. Supervise children when the appliance is in use.
- Always unplug the washing machine from the power supply before cleaning, servicing, or performing any maintenance.
- Do not wash items that are soiled with cooking oils, gasoline, or other flammable substances.
- Ensure all transport bolts are removed before operating the machine to prevent excessive vibration and damage.
- Do not open the detergent dispenser or the door during a wash cycle, especially when the water level is high or the temperature is hot.

## 3. PRODUCT OVERVIEW

The SVAN Wonder washing machine is designed for efficient and convenient laundry care. Key features include a 5kg capacity, 1000 rpm spin speed, and an electronic control system with LED indicators.



Figure 3.1: Front view of the SVAN Wonder 5kg Washing Machine, showing the control panel, detergent drawer, and transparent door.

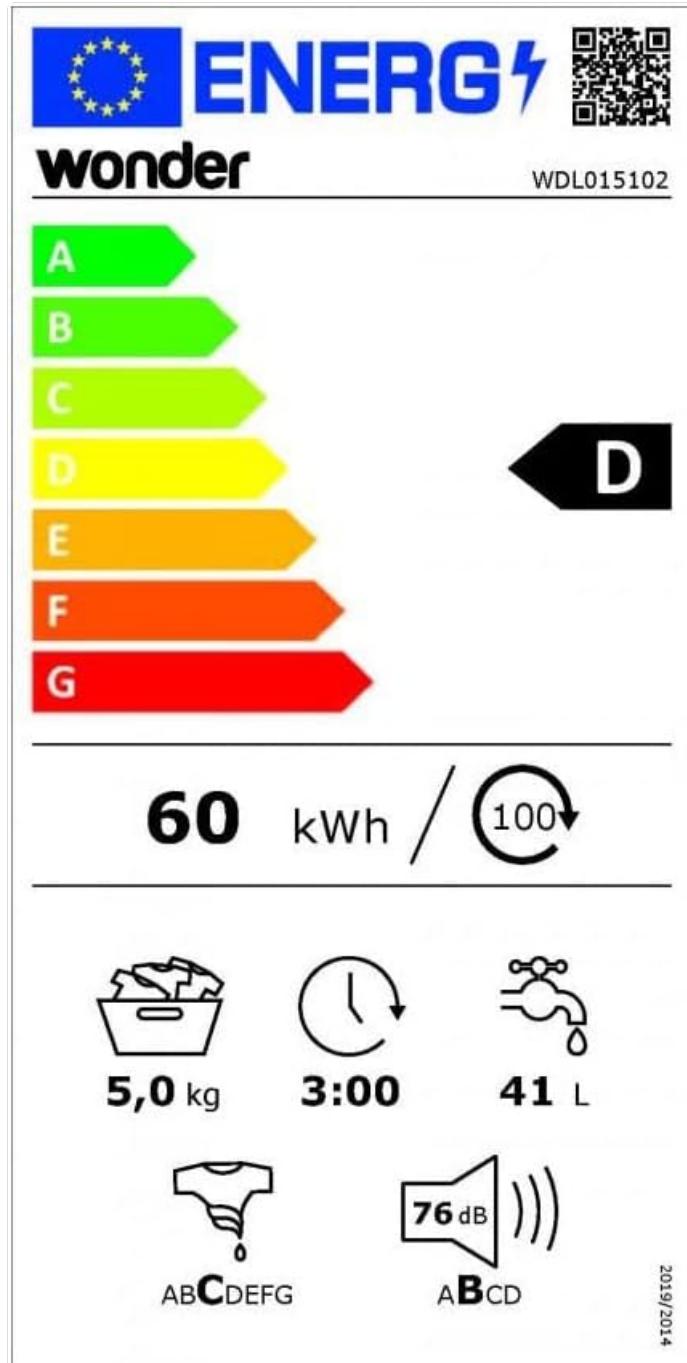


Figure 3.2: Detailed view of the washing machine's stainless steel drum, designed for gentle yet effective cleaning.

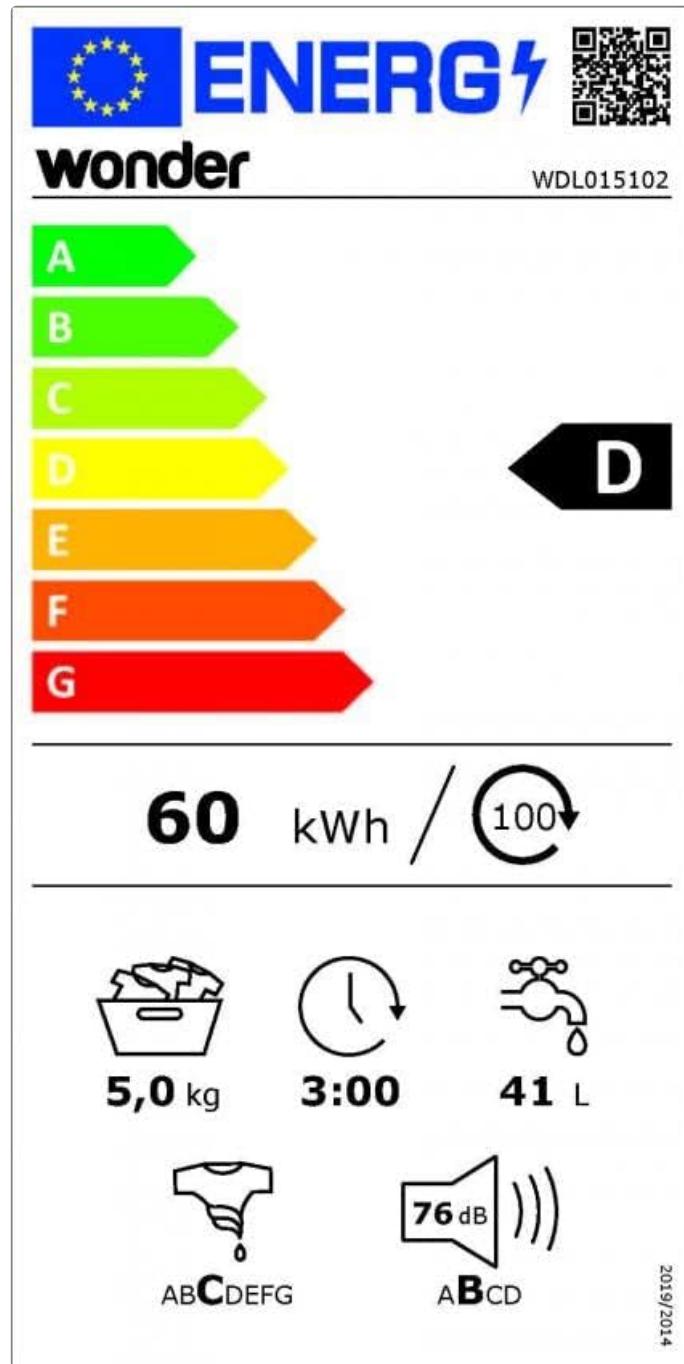


Figure 3.3: The current energy efficiency label (D rating) for the SVAN Wonder washing machine, indicating 60 kWh/100 cycles and 41L water consumption per cycle for 5kg load.



Figure 3.4: The previous energy efficiency label (A++ rating) for the SVAN Wonder washing machine, showing 147 kWh/annum and 9240 L/annum water consumption.

## 4. INSTALLATION AND SETUP

### 4.1 Unpacking

Carefully remove all packaging materials. Inspect the washing machine for any damage during transit. Keep packaging materials out of reach of children.

### 4.2 Removing Transport Bolts

Before first use, it is crucial to remove the transport bolts located at the rear of the machine. These bolts secure the drum during transport and must be removed to prevent severe vibration and damage during operation. Refer to the diagram in the quick start guide for their exact location.

### 4.3 Leveling the Appliance

Place the washing machine on a firm, level floor. Adjust the adjustable feet at the bottom of the machine until it is perfectly level and stable. Use a spirit level to ensure accuracy. An unlevel machine can cause excessive noise and vibration.

## 4.4 Water Connection

Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during drainage.

## 4.5 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance's rating plate.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and hooks to prevent damage to clothes and the drum.

## 5.2 Loading Laundry

Open the washing machine door and load the laundry loosely into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 5 kg.

## 5.3 Adding Detergent and Additives

Pull out the detergent drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

## 5.4 Selecting a Wash Program

Turn the program selector knob to choose one of the 165 available wash programs. The electronic control system with LED indicators will display the selected program. Consider the fabric type and soiling level when making your selection.

## 5.5 Special Functions

- **Eco-logic System:** This system automatically detects the amount of laundry in the drum and adjusts the water consumption and cycle duration accordingly, ensuring an effective and environmentally friendly wash.
- **Quick Wash (15 minutes):** For lightly soiled items or when you need a fast wash, select the 15-minute quick program.
- **Stop&Go Function:** If you forget an item, press the Stop&Go button to pause the cycle, add the garment, and then resume the wash from where it left off.

## 5.6 Starting and Ending a Cycle

Press the Start/Pause button to begin the selected wash program. The machine will automatically proceed through the wash, rinse, and spin cycles. Once the program is complete, the machine will signal its finish. Open the door and remove your laundry promptly.

# 6. MAINTENANCE AND CLEANING

---

## 6.1 Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the surface.

## 6.2 Detergent Drawer Cleaning

Periodically remove the detergent drawer and rinse it under running water to remove any detergent residue. This prevents blockages and ensures proper dispensing.

## 6.3 Drum Cleaning

To prevent odors and maintain hygiene, run a maintenance wash cycle (e.g., a hot wash with no laundry and a washing machine cleaner) once a month.

## 6.4 Drain Filter Cleaning

Locate the drain filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any water. Unscrew the filter slowly, allow water to drain, and remove any lint, coins, or debris. Clean the filter and screw it back in securely.

## 7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry evenly.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Check and straighten drain hose; Clean the drain filter.
Detergent residue in drawer	Insufficient water pressure; Detergent drawer clogged.	Check water supply; Clean the detergent drawer.

## 8. TECHNICAL SPECIFICATIONS

**Brand:** SVAN

**Model Number:** XVNWDL015102

**Capacity:** 5 kg

**Maximum Spin Speed:** 1000 RPM

**Energy Efficiency Class (New):** D

**Energy Efficiency Class (Old):** A++/D

**Maximum Noise Level:** 76 dB

**Dimensions (H x W x D):** 84.5 cm x 59.7 cm x 49.7 cm

**Weight:** 56.5 kg

**Control Type:** Electronic with LED indicators

**Number of Programs:** 165

**Special Functions:** Eco-logic System, 15-minute Quick Wash, Stop&Go

**Drum Material:** Stainless Steel

**Access Type:** Front Load

**Color:** White

**Included Components:** Washing Machine

## 9. WARRANTY AND SUPPORT



Your SVAN Wonder washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included

with your purchase for specific terms and conditions. For technical support, spare parts, or service requests, please contact your local SVAN authorized service center or visit the official SVAN website. Ensure you have your model number (XVNWDL015102) and purchase date available when contacting support.

For more information, you can visit the [SVAN Brand Store on Amazon](#).

© 2023 SVAN. All rights reserved.

## Related Documents

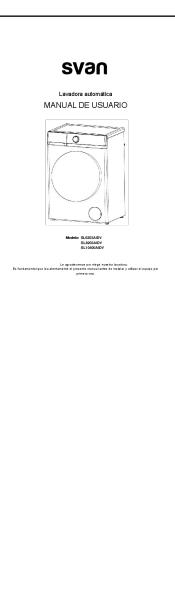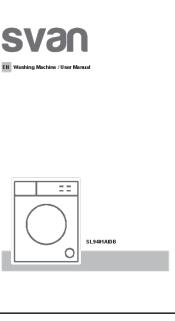	<p><a href="#"><u>Svan SLCS6201C Manual de Usuario: Guía Completa para tu Lavadora de Carga Superior</u></a></p> <p>Descubre el manual de usuario completo para la lavadora Svan SLCS6201C. Incluye instrucciones de instalación, operación, seguridad y mantenimiento para tu lavadora de carga superior.</p>
	<p><a href="#"><u>Manual de Usuario Svan Lavadora Automática: Modelos SL6203AIDV, SL8203AIDV, SL10400AIDV</u></a></p> <p>Guía completa para la instalación, uso seguro y mantenimiento de las lavadoras automáticas Svan, incluyendo los modelos SL6203AIDV, SL8203AIDV y SL10400AIDV. Aprenda a operar su electrodoméstico de manera eficiente.</p>
	<p><a href="#"><u>Svan SL9401AIDB Washing Machine User Manual</u></a></p> <p>Comprehensive user manual for the Svan SL9401AIDB washing machine, covering safety instructions, installation, operation, maintenance, and troubleshooting for optimal use.</p>
	<p><a href="#"><u>Svan SL8401AIDVBX Washing Machine User Manual</u></a></p> <p>Comprehensive user manual for the Svan SL8401AIDVBX washing machine, covering safety information, installation, operation, maintenance, and troubleshooting.</p>