

Neakasa Neakasa P1 Pro

Neakasa P1 Pro Pet Grooming Vacuum Instruction Manual

Model: Neakasa P1 Pro

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Neakasa P1 Pro Pet Grooming Vacuum. Please read this manual thoroughly before operating the device and retain it for future reference. The Neakasa P1 Pro is designed to assist with pet grooming by collecting loose hair and dander, promoting a cleaner grooming experience.

SAFETY INFORMATION

For your safety and to prevent damage to the device, observe the following precautions:

- Always use the grooming kit gently to avoid distressing your pet.
- Keep the trimmer away from water sources to prevent electrical hazards.
- Do not use the trimmer on infants or near the face to avoid injury.
- Always follow the recommended cleaning and maintenance procedures to ensure safe and proper use.
- Ensure the device is unplugged before cleaning or performing any maintenance.
- Do not operate the device with a damaged cord or plug.
- Keep out of reach of children.

PACKAGE CONTENTS

The Neakasa P1 Pro Pet Grooming Vacuum package includes the following components:

- Neakasa P1 Pro Vacuum Unit
- Grooming Brush
- De-shedding Brush
- Electric Clipper
- Nozzle Head
- Cleaning Brush
- 5 Adjustable Guard Combs (3mm, 6mm, 12mm, 18mm, 24mm)
- Hose and Power Cord



Image: Neakasa P1 Pro Pet Grooming Vacuum with all included accessories, including the main unit, hose, grooming tools, and clipper guards.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging. Verify that all components listed in the "Package Contents" section are present.
2. **Connect Hose:** Attach the flexible hose to the main vacuum unit's intake port. Ensure it is securely fastened.
3. **Select Tool:** Choose the desired grooming tool (e.g., grooming brush, de-shedding brush, electric clipper) and attach it to the end of the hose.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet.

5 Professional Tools

to Create a Pet Grooming Salon at Home

Daily Brush



Weekly Rake



Seasonal Trim



As Needed Collect



Image: The Neakasa P1 Pro main unit with its hose and various grooming attachments, illustrating the components for setup.

OPERATING INSTRUCTIONS

Before beginning, ensure your pet is calm and comfortable. Introduce the device gradually to minimize stress.

General Operation

1. **Power On:** Press the power button on the main unit to turn on the vacuum.
2. **Adjust Suction Level:** The device features 3 adjustable suction levels. Select a lower setting initially, especially for pets sensitive to noise. Increase as needed.
3. **Grooming:** Gently apply the chosen tool to your pet's coat. The vacuum will collect loose hair directly into the dustbin.
4. **Power Off:** After grooming, press the power button to turn off the unit.

Using the Grooming Tools

- **Grooming Brush:** Use for daily brushing to remove loose hair and dander, preventing tangles and mats. This promotes a healthy and shiny coat.



Image: The grooming brush attachment in use, demonstrating how pet hair is collected by the vacuum.

- **De-shedding Brush:** Designed to remove undercoat and loose hair, reducing shedding without damaging the topcoat.
- **Electric Clipper:** For trimming and cutting pet hair. Attach one of the 5 adjustable guard combs (3mm, 6mm, 12mm, 18mm, 24mm) to achieve desired hair length. The detachable guide combs allow for quick changes.

Meet Different Hair Length& Shape Need

5 Comfort Guard Combs

5 guidance Combs for more precise trimming

Pet	Guard Comb Length
Orange Cat	3mm
Grey and White Cat	6mm
Brown Poodle	12mm
Black and White Dog	18mm
Long-haired Dog	24mm

Image: The electric clipper attachment with a selection of five guard combs, illustrating options for precise trimming.

- **Nozzle Head:** Use to collect pet hair from carpets, sofas, and floors.



Image: The nozzle head attachment in use, demonstrating its effectiveness in cleaning pet hair from upholstery.

- **Cleaning Brush:** Useful for cleaning pet hair from clothes or pet feet.



Image: The cleaning brush attachment in use, illustrating its function for removing pet hair from fabric surfaces.

Noise Level Information

The Neakasa P1 Pro is designed with a low noise level (approximately 52dB) to help pets feel at ease during grooming. For sensitive pets, start with the lowest suction setting and gradually increase. Offering treats during grooming can also help reduce nervousness.

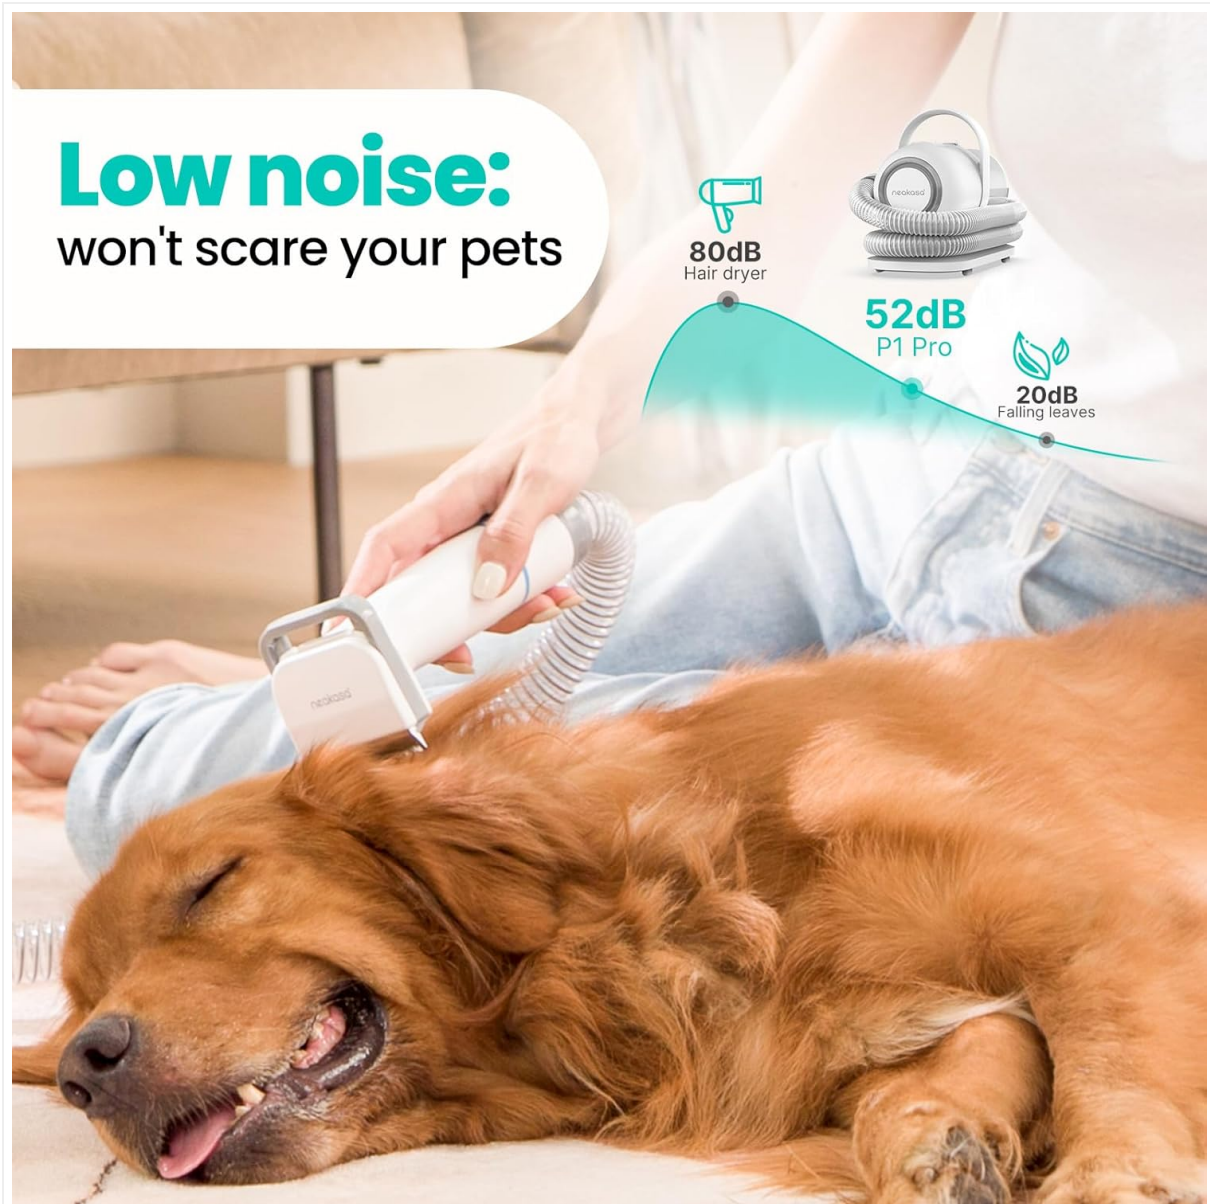 


Image: A visual representation comparing the low noise level of the P1 Pro (52dB) to a hair dryer (80dB) and a vacuum robot (75dB), with a calm dog being groomed.

Suitability for Pet Types

The Neakasa P1 Pro is suitable for various pet types and hair lengths, including extra long hair, medium long hair, and curly hair, for both dogs and cats.

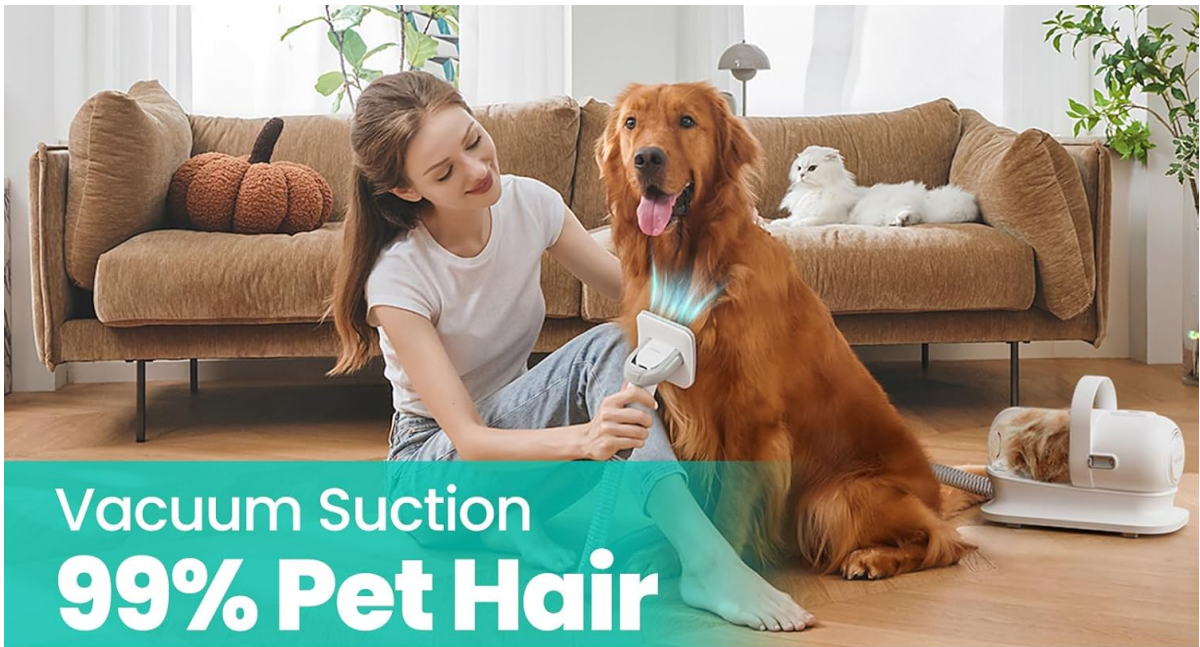 


Image: A collage of various dog and cat breeds, demonstrating the product's versatility for different pet sizes and hair types, including extra long, medium long, and curly coats.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Neakasa P1 Pro.

- **Empty Dustbin:** The removable dust cup should be emptied regularly to maintain suction power. It features an easy-empty lid for quick disposal of collected hair.
- **Clean Dustbin:** The dustbin is washable and reusable. Clean it with water and mild soap as needed, ensuring it is completely dry before reattaching.
- **Clean Tools:** After each use, clean any hair or debris from the grooming attachments. The cleaning brush can assist with this.
- **Storage:** The hose and power cord can be coiled around the machine for compact storage.



Collect



Clean



Image: The vacuum unit demonstrating hair collection into its transparent dustbin, alongside a clean brush head, highlighting the cleaning process.

TROUBLESHOOTING

If you encounter issues with your Neakasa P1 Pro, refer to the following common solutions:

Problem	Possible Cause	Solution
Low Suction Power	Dustbin is full; filter is clogged; hose or attachment is blocked.	Empty the dustbin. Clean or replace the filter. Check and clear any blockages in the hose or attachments.
Device Does Not Turn On	Power cord not properly connected; no power from outlet.	Ensure the power cord is securely plugged into both the device and a working electrical outlet. Test the outlet with another appliance.
Excessive Noise	Obstruction in the fan or motor; loose components.	Turn off and unplug the device. Inspect for any visible obstructions. If the issue persists, contact customer service.
Hair Not Being Collected Effectively	Incorrect tool selection; suction level too low; pet hair is matted.	Ensure the appropriate tool is used for the grooming task. Increase the suction level. Pre-brush matted hair before using the vacuum.

SPECIFICATIONS

Feature	Detail
Model Name	Neakasa P1 Pro
Brand	Neakasa
Item Weight	4.4 pounds (2 Kilograms)
Product Dimensions (LxWxH)	11.42 x 5.12 x 8.27 inches
Material	Plastic
Power Source	Corded Electric
Included Components	Grooming brush, Electric clipper, De-shedding brush, Nozzle head, Cleaning brush, 5 Adjustable Guard Combs
Noise Level	Approximately 52dB

WARRANTY AND SUPPORT

The Neakasa P1 Pro Pet Grooming Kit & Vacuum includes a 1-Year Warranty. Additionally, a 45-day no-worry return policy is provided. For any issues or inquiries, customer service is available 24/7. Please contact us via the message system on the platform of purchase for assistance.

 



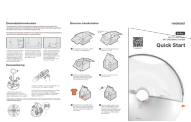 




Image: A customer service representative with headset, symbolizing available support, alongside icons indicating 24-hour customer service and a 1-year warranty.

Related Documents - Neakasa P1 Pro

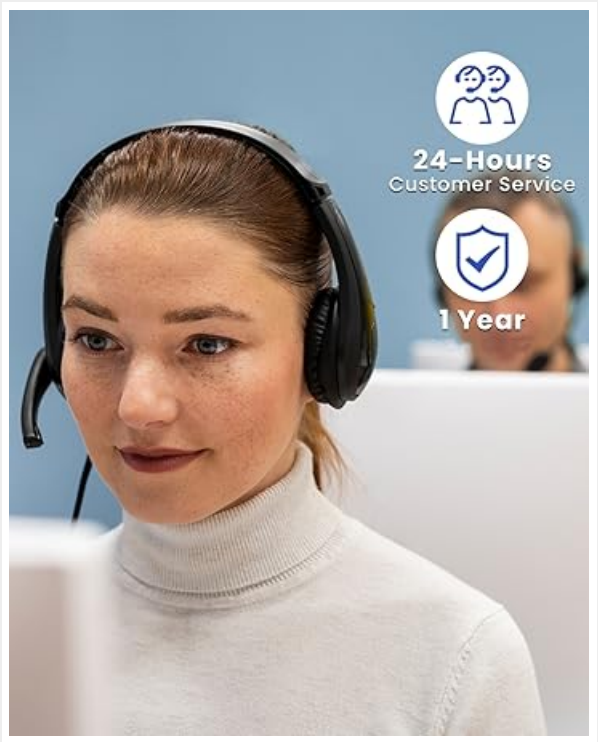	<p>Neakasa P2 PRO Pet Grooming Kit User Guide</p> <p>Comprehensive user guide for the Neakasa P2 PRO Pet Grooming Kit, covering safety information, package contents, setup, usage, maintenance, and specifications. Learn how to effectively groom your pet with this advanced kit.</p>
	<p>Neakasa Pet Grooming System User Guide - PO Pro, PO Lite, PO Max</p> <p>Comprehensive user guide for the Neakasa Pet Grooming System, covering safety, setup, accessory usage, maintenance, specifications, and warranty for PO Pro, PO Lite, and PO Max models.</p>
	<p>Neakasa P1 PRO Pet Grooming Kit & Vacuum User Guide</p> <p>User guide for the Neakasa P1 PRO Pet Grooming Kit & Vacuum. Learn about safety, setup, accessories, maintenance, specifications, and warranty. Keep your pet's coat healthy and clean.</p>
	<p>Neakasa S1 Pro Multifunctional Pet Grooming System Quick Start Guide</p> <p>A quick start guide for the Neakasa S1 Pro Pet Grooming System, providing essential information on desensitization, product components, usage instructions, and important safety precautions for pet grooming.</p>
	<p>Neakasa S1 Pro Multifunctional Pet Grooming System User Manual</p> <p>Comprehensive user manual for the Neakasa S1 Pro Multifunctional Pet Grooming System, detailing desensitization, safety, packing, operation, maintenance, troubleshooting, specifications, and warranty information.</p>
	<p>Neakasa S1 Pro Multifunctional Pet Grooming System User Manual</p> <p>Comprehensive user manual for the Neakasa S1 Pro Multifunctional Pet Grooming System, covering setup, operation, safety, maintenance, troubleshooting, and specifications. Includes detailed instructions and diagrams translated into English.</p>