

Manuals.plus /

› VEGER /

› VEGER V0556 5000mAh USB C Portable Charger Instruction Manual

## VEGER V0556

# VEGER V0556 5000mAh USB C Portable Charger Instruction Manual

## 1. INTRODUCTION

Thank you for choosing the VEGER V0556 5000mAh USB C Portable Charger. This device is designed to provide convenient, cordless power for your USB-C compatible Android smartphones and other devices. This manual provides essential information on how to safely and effectively use and maintain your portable charger.



Image 1.1: Two VEGER V0556 5000mAh USB C Portable Chargers.

## 2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in fire, electric shock, explosion, or other hazards.

- Do not overcharge the portable chargers. Once the battery reaches 100%, unplug it to prevent potential damage to the battery or overheating.
- Do not charge overnight or leave the charger plugged in for prolonged periods to avoid overheating or possible short-circuiting.
- Keep the device away from water, moisture, and extreme temperatures.
- Do not disassemble, modify, or attempt to repair the device yourself. Contact customer support if service is required.
- Avoid dropping or subjecting the device to strong impacts.
- Dispose of the product according to local regulations for electronic waste.

### **3. PACKAGE CONTENTS**

---

Verify that all items are present in your package:

- VEGER V0556 5000mAh USB C Portable Charger (x2)
- USB-A to USB-C Charging Cable (x2)
- User Manual (this document)

## 2 Packs for Sharing Ideal for Gifts Ideas



Image 3.1: Package contents of the VEGER V0556 Portable Charger.

### 4. PRODUCT OVERVIEW

The VEGER V0556 portable charger features a compact design with a built-in USB-C connector for direct charging of compatible devices. It includes LED indicators to show battery status and supports fast charging protocols.

#### Key Features:

- **Built-in USB-C Plug:** Directly connects to USB-C compatible Android phones and devices.
- **5000mAh Capacity:** Provides emergency power backup for your devices.
- **Fast Charging & Recharging:** Supports PD, QC3.0, FCP, MTK PE1.1/2.0, AFC protocols for quick

power delivery and replenishment.

- **Cordless Design:** Eliminates the need for extra charging cables when connected to a device.
- **Pass-Through Charging:** Allows the power bank to charge itself while simultaneously charging a connected device.
- **LED Indicators:** Four LED lights display the remaining battery level.



Image 4.1: Compact design of the VEGER V0556 Portable Charger.



Image 4.2: Compatibility with USB-C Android devices.

## 5. SPECIFICATIONS

---

Feature	Detail
Model Number	V0556
Battery Capacity	5000mAh (3.7V Battery)
USB C Input (QC)	5V-2A, 9V-2A
USB C Plug Input (PD + QC)	5V-3A, 9V-2A, 12V-1.5A
USB C Plug Output (PD + QC + FCP + PE1.1/2.0 + Samsung AFC + BC 1.2)	5V-3A, 9V-2.2A, 12V-1.6A
Recharging Time	Approx. 1.5 hours (with 9V-2A quick charger)
Product Dimensions	77.2 x 35.0 x 24.7 mm (3.03 x 1.38 x 0.97 inches)
Item Weight	Approx. 92g (0.2 lb) per unit

## 6. SETUP AND INITIAL USE

### 6.1 Charging the Portable Charger

Before first use, fully charge your VEGER V0556 portable charger. It can be recharged in two ways:

1. **Direct Wall Plug:** Plug the portable charger directly into a compatible USB-C wall adapter (9V-2A recommended for fast charging).
2. **Via USB-C Cable:** Connect the provided USB-A to USB-C cable to the USB-C input port on the side of the power bank and then to a USB power source.

The LED indicators will illuminate to show charging progress. All four LEDs will be solid when fully charged. A full charge takes approximately 1.5 hours with a 9V-2A quick charger.

# Fast Recharging in 2 Ways

**1.5 h**

by 9V 2A USB C Plug



**1.5 h**

by 9V 2A USB C Input



Image 6.1: Two methods for fast recharging the portable charger.

## 6.2 Checking Battery Level

Press the power button on the side of the charger to view the current battery level via the LED indicators:

- **4 LEDs:** 75-100% charged
- **3 LEDs:** 50-75% charged
- **2 LEDs:** 25-50% charged
- **1 LED:** 0-25% charged (recharge soon)

## 7. OPERATING INSTRUCTIONS

### 7.1 Charging Your Device

To charge your USB-C compatible Android smartphone or other device:

1. Ensure the portable charger has sufficient battery life.
2. Align the built-in USB-C plug of the portable charger with the USB-C charging port on your device.
3. Gently insert the portable charger's plug into your device's port until it is securely connected.
4. Your device should begin charging automatically. The LED indicators on the power bank will show its remaining charge.
5. Once your device is charged, or the power bank is depleted, carefully disconnect the portable charger from your device.



## Special Designed for USB C Port Phones



Samsung  
Series



Huawei  
Series



Xiaomi  
Series



Google Pixel  
Series



Motorola  
Series



Other USB-C  
Phone Models

Image 7.1: Charging a device directly with the portable charger.

### 7.2 Pass-Through Charging

The VEGER V0556 supports pass-through charging, allowing you to recharge the power bank while it simultaneously charges a connected device.

1. Connect your device to the portable charger using its built-in USB-C plug.
2. Connect the portable charger to a power source using a USB-C cable plugged into its side input port.
3. Both the portable charger and your device will charge.



Image 7.2: Pass-through charging in action.

## 8. MAINTENANCE

Proper care ensures the longevity of your portable charger:

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.

- Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for extended periods, charge the power bank to approximately 50-75% every three months to maintain battery health.

## 9. TROUBLESHOOTING

---

### 9.1 Charger Not Charging

- **Check Power Source:** Ensure the wall adapter or USB port you are using is functional and providing power.
- **Check Cable:** Try a different USB-C charging cable to rule out a faulty cable.
- **Secure Connection:** Ensure the charging cable is securely plugged into both the power bank and the power source.

### 9.2 Device Not Charging from Power Bank

- **Check Power Bank Charge:** Ensure the portable charger has sufficient battery life (check LED indicators).
- **Secure Connection:** Ensure the power bank's built-in USB-C plug is fully and securely inserted into your device's charging port.
- **Device Compatibility:** Confirm your device uses a USB-C port and is compatible with the power bank's output specifications. This power bank is designed for Android USB-C devices.
- **Restart Device:** Sometimes restarting your phone can resolve charging issues.

### 9.3 Overheating During Use

- It is normal for the charger to become slightly warm during operation.
- If the device becomes excessively hot, disconnect it immediately from both the power source and your device. Allow it to cool down before attempting to use it again.
- Ensure the charger is used in a well-ventilated area and not covered by blankets or other materials.

## 10. WARRANTY AND SUPPORT

---

VEGER products are manufactured with high-quality standards. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official VEGER website. Please retain your proof of purchase for warranty claims.