

SENCOR SRM 0601BK

Sencor SRM 0601BK Rice Cooker User Manual

Model: SRM 0601BK

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Sencor SRM 0601BK Rice Cooker. Please read these instructions thoroughly before first use and retain them for future reference.

The Sencor SRM 0601BK is a compact rice cooker designed for preparing various types of rice, including sushi rice, using a steaming principle. It features fully automated operation and indicator lights for ease of use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW AND COMPONENTS



Image: Sencor SRM 0601BK Rice Cooker, black color, with a glass lid, side handles, and a control panel featuring 'KEEP WARM' and 'COOK' indicator lights.

The Sencor SRM 0601BK Rice Cooker consists of the following main components:

- **Main Unit:** The body of the rice cooker housing the heating element and control panel.
- **Removable Inner Pot:** A special non-stick pot for cooking rice.
- **Glass Lid:** Transparent lid with an opening to drain excess steam.
- **Control Panel:** Features 'KEEP WARM' (orange) and 'COOK' (red) indicator lights and a cooking switch.
- **Handles:** Practical handles on both sides of the main unit for easy carrying.
- **Non-slip Feet:** Located at the base for stability.
- **Accessories:** Includes a special spatula for rice and a measuring cup for rice and water.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the rice cooker and all accessories from the packaging. Retain packaging for future storage or transport.

2. **Initial Cleaning:** Before first use, wash the removable inner pot, glass lid, spatula, and measuring cup with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from water sources and direct heat. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Ensure the voltage and frequency of your power outlet match the specifications of the appliance (220-240 V, 50/60 Hz). Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. The capacity is 0.6 liters, suitable for cooking up to 450g of rice.
2. **Rinse Rice:** Rinse the rice thoroughly under cold running water until the water runs clear. This helps remove excess starch.
3. **Add Water:** Place the rinsed rice into the removable inner pot. Add the appropriate amount of water according to the rice type and desired consistency. A common ratio is 1 cup of rice to 1.5-2 cups of water, but refer to specific rice packaging for best results.
4. **Place Pot:** Insert the inner pot into the main unit of the rice cooker. Ensure it is seated correctly.
5. **Close Lid:** Place the glass lid securely on the inner pot.
6. **Start Cooking:** Plug the rice cooker into a power outlet. Push the cooking switch down to the "COOK" position. The red "COOK" indicator light will illuminate, indicating that cooking has started.
7. **Automatic Shut-off:** The rice cooker operates on a steaming principle and will automatically switch to the "KEEP WARM" mode once the rice is cooked and the water has been absorbed. The red "COOK" light will turn off, and the orange "KEEP WARM" light will illuminate.
8. **Resting Period:** For best results, allow the rice to rest in the "KEEP WARM" mode for 5-10 minutes after cooking is complete. This allows the rice to firm up and absorb any remaining moisture.
9. **Serve:** Unplug the rice cooker. Carefully open the lid, avoiding steam. Use the provided spatula to fluff and serve the rice.

Keep Warm Function

After cooking, the appliance automatically switches to the "KEEP WARM" function. This function maintains the rice at an optimal serving temperature without overcooking it. The orange "KEEP WARM" indicator light will be on. Do not keep rice in "KEEP WARM" mode for extended periods (e.g., more than 4-6 hours) to maintain quality and safety.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Sencor SRM 0601BK Rice Cooker.

1. **Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Lid:** The removable inner pot, glass lid, spatula, and measuring cup can be washed with warm, soapy water. Rinse thoroughly and dry completely. These parts are generally not dishwasher safe; hand washing is recommended as per product care instructions.

3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit, power cord, or plug in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing. Store the rice cooker in a cool, dry place.

TROUBLESHOOTING






 
Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Not enough water; cooking cycle interrupted; lid not sealed properly.	Add more water next time; ensure cooker is plugged in and switch is down; ensure lid is properly seated.
Rice is too soft or mushy.	Too much water; rice not rinsed properly.	Reduce water next time; rinse rice thoroughly before cooking.
Rice sticks to the bottom of the pot.	Not enough water; inner pot not clean; prolonged "KEEP WARM" time.	Ensure proper water ratio; clean inner pot thoroughly; avoid keeping rice warm for too long.
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check household circuit breaker; try a different outlet.

SPECIFICATIONS

- **Model:** Sencor SRM 0601BK
- **Brand:** SENCOR
- **Capacity:** 0.6 Liters (for cooking 450 g of rice)
- **Power Consumption:** 300 W
- **Voltage and Frequency:** 220-240 V, 50/60 Hz
- **Dimensions (W x D x H):** 235 x 208 x 210 mm (approx. 8.94"D x 8.78"W x 7.72"H)
- **Weight:** 1.2 kg (approx. 3.4 pounds)
- **Color:** Black
- **Material:** Stainless Steel, Plastic, Glass (Lid)
- **Special Feature:** Steaming principle, automated operation, indicator lights
- **Included Components:** Rice cooker, inner pot, glass lid, spatula, measuring cup
- **Product Care:** Hand Wash (inner pot, lid, accessories)
- **EU Spare Part Availability Duration:** 5 Years

CUSTOMER SUPPORT

For technical assistance, warranty claims, or spare parts inquiries, please contact your local Sencor authorized service center or visit the official Sencor website. Please have your model number (SRM 0601BK) and purchase information ready when contacting support.

 <p>EN+Fully-automatic Rice Cooker Translation of the original manual</p>	<p>SENCOR SRM 0600WH Fully-Automatic Rice Cooker User Manual</p> <p>Comprehensive user manual for the SENCOR SRM 0600WH Fully-Automatic Rice Cooker, covering safety instructions, operation, cleaning, maintenance, and technical specifications. Learn how to use your rice cooker safely and effectively.</p>
 <p>EN+Fully-automatic Rice Cooker Translation of the original manual</p>	<p>SENCOR SRM 0600WH Fully-Automatic Rice Cooker User Manual</p> <p>Official user manual for the SENCOR SRM 0600WH Fully-Automatic Rice Cooker. Provides essential safety instructions, step-by-step usage guide, cleaning and maintenance procedures, technical specifications, and disposal information.</p>
 <p>RU+Pecomena Translation of the original manual</p>	<p>SENCOR SRM 0650SS Rice Cooker User Manual</p> <p>Comprehensive user manual for the SENCOR SRM 0650SS Rice Cooker, providing instructions on safety, operation, cooking modes, care, and troubleshooting.</p>
 <p>EN+Rice cooker Translation of the original manual</p>	<p>SENCOR SRM 0650SS Rice Cooker User Manual - Cooking, Safety, and Maintenance Guide</p> <p>Comprehensive user manual for the SENCOR SRM 0650SS Rice Cooker. Learn about its features, safety instructions, operating modes, cooking tips, cleaning, and troubleshooting for optimal use.</p>
 <p>SLOW COOKER Translation of the original manual</p>	<p>Sencor SPR 5520SS Slow Cooker User Manual</p> <p>Comprehensive user manual for the Sencor SPR 5520SS Slow Cooker, covering safety instructions, operation, cooking programs, maintenance, and recipes.</p>
 <p>EN+ User Manual SENCOR HOME App</p>	<p>SENCOR HOME App User Manual: Connecting and Managing Your Electric Scooter</p> <p>Comprehensive guide to installing and using the SENCOR HOME app for your SENCOR electric scooter. Learn how to pair, control, and reset your device.</p>