

BELLA 17644

BELLA Dual Brew Single Serve Coffee Maker Model 17644 Instruction Manual

Your comprehensive guide to operating and maintaining your BELLA Dual Brew Single Serve Coffee Maker.

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The BELLA Dual Brew Single Serve Coffee Maker offers versatility and convenience for your daily coffee needs. It is designed to brew both K-Cup pods and ground coffee with a simple one-touch operation.



Figure 1: Front view of the BELLA Dual Brew Single Serve Coffee Maker, showing the coffee dispenser and power button.

Key Components:

- **Water Reservoir:** Located at the back, holds up to 14oz of water.
- **Brew Head:** Houses the K-Cup pod holder or ground coffee adapter.
- **Ground Coffee Adapter:** A reusable filter basket for brewing with your favorite ground coffee.
- **Power Button:** One-touch operation to start brewing.
- **Drip Tray:** Removable for easy cleaning and accommodates various mug sizes.



Figure 2: The coffee maker highlighting its dual brew capability for K-Cup pods and ground coffee.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials and promotional labels from your coffee maker. Ensure all parts are accounted for before discarding packaging.

3.2 Initial Cleaning and First Use

1. Wipe the exterior of the coffee maker with a damp cloth.
2. Remove the K-Cup holder and ground coffee adapter. Wash them in warm, soapy water, then rinse thoroughly.
3. Fill the water reservoir with fresh water up to the 14oz mark. Do not add coffee or a K-Cup pod.
4. Place a large mug or container on the drip tray.
5. Close the brew head lid securely.
6. Press the power button to start a brewing cycle. This will flush the internal components.
7. Discard the hot water. Your coffee maker is now ready for use.

4. OPERATING INSTRUCTIONS

4.1 Brewing with K-Cup Pods

1. Ensure the coffee maker is plugged into a standard electrical outlet.

2. Lift the brew head lid.
3. Fill the water reservoir with fresh water up to the desired level, not exceeding 14oz.
4. Insert a K-Cup pod into the K-Cup holder. Ensure it is seated correctly.
5. Close the brew head lid firmly until it clicks into place.
6. Place your mug on the drip tray.
7. Press the power button. The indicator light will illuminate, and brewing will begin.
8. Once brewing is complete, the coffee maker will automatically shut off. Carefully remove your hot coffee.



Versatile
Brews both K-Cups® and ground coffee

Figure 3: Inserting a K-Cup pod into the brew head.

4.2 Brewing with Ground Coffee

1. Ensure the coffee maker is plugged into a standard electrical outlet.
2. Lift the brew head lid.
3. Fill the water reservoir with fresh water up to the desired level, not exceeding 14oz.
4. Place your desired amount of ground coffee into the reusable ground coffee adapter. Do not overfill.
5. Insert the filled ground coffee adapter into the brew head.
6. Close the brew head lid firmly until it clicks into place.
7. Place your mug on the drip tray.

8. Press the power button. The indicator light will illuminate, and brewing will begin.
9. Once brewing is complete, the coffee maker will automatically shut off. Carefully remove your hot coffee.



Fits Your Needs

Adjustable drip tray fits most travel mugs

Figure 4: The ground coffee adapter, ready for use.

4.3 Auto Shut-off Feature

For your convenience and safety, the BELLA Dual Brew Single Serve Coffee Maker is equipped with an auto shut-off feature. The appliance will automatically turn off after the brewing cycle is complete.



Easy to Use

One touch operation

Figure 5: One-touch operation for brewing.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

5.1 Daily Cleaning

1. Unplug the coffee maker and allow it to cool completely.
2. Remove the K-Cup holder or ground coffee adapter. Discard used coffee grounds or K-Cup pod.
3. Wash the K-Cup holder, ground coffee adapter, and drip tray in warm, soapy water. Rinse thoroughly and dry.
4. Wipe the exterior of the coffee maker with a damp, soft cloth. Do not use abrasive cleaners or immerse the unit in water.

5.2 Descaling

Over time, mineral deposits (scale) can build up in your coffee maker, affecting its performance. Descale your coffee maker every 3-6 months, or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of one part white vinegar and two parts water.

2. Place a large mug on the drip tray.
3. Run a brewing cycle without a K-Cup pod or ground coffee.
4. After the cycle, let the coffee maker sit for 30 minutes with the vinegar solution inside.
5. Run several cycles with fresh water to rinse out any remaining vinegar taste.

6. TROUBLESHOOTING

If your coffee maker is not functioning as expected, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
Coffee maker is not brewing.	Water reservoir empty; brew head lid not closed securely; clogged needle.	Fill water reservoir; ensure lid is latched; clean brew head needle (refer to maintenance).
Coffee is weak or watery.	Too much water for coffee amount; coffee grounds too coarse; K-Cup pod punctured incorrectly.	Adjust water to coffee ratio; use finer ground coffee; ensure K-Cup is properly inserted.
Water leaks from the unit.	Water reservoir overfilled; brew head lid not closed properly; internal seal issue.	Do not exceed 14oz water; ensure lid is firmly closed; contact customer support if issue persists.

7. SPECIFICATIONS

- **Brand:** BELLA
- **Model Name:** Dual Brew Single Serve Coffee Maker
- **Model Number:** 17644
- **Product Dimensions:** 5.35"D x 6.45"W x 10.9"H
- **Item Weight:** 1.82 pounds
- **Coffee Input Type:** Ground, Pod (K-Cup compatible)
- **Capacity:** 14oz
- **Operation Mode:** Fully Automatic
- **Power Source:** AC adapter
- **Included Components:** Reusable Ground Coffee Filter

8. PRODUCT VIDEOS

Watch these official product videos for a visual guide on using your BELLA Dual Brew Single Serve Coffee Maker.

Video 1: An overview of the BELLA Dual Brew Coffee Maker, demonstrating its features and ease of use.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This BELLA Dual Brew Single Serve Coffee Maker is covered by a **2-Year Limited Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal household use.

9.2 Customer Support

For further assistance, troubleshooting, or warranty inquiries, please contact BELLA customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.