Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SENCOR /
- > SENCOR Water Filter Instruction Manual for SES 4900SS Coffee Maker

SENCOR SEX 002

SENCOR Water Filter Instruction Manual

Model: SEX 002 FOR SES 4900SS COFFEE MAKER

Product Overview



Image: SENCOR SEX 002 Water Filter. This image shows the cylindrical filter cartridge with a threaded base and a small spout, designed for easy insertion into compatible coffee makers. A handle is visible at the top for convenient handling.

The SENCOR SEX 002 Water Filter is specifically designed for use with the SENCOR SES 4900SS coffee

maker. This filter plays a crucial role in enhancing the quality of your coffee by improving its flavor and aroma. It is engineered for quick and easy installation, making maintenance straightforward.

Key benefits include:

- Improved Coffee Flavor: Enhances the taste and aroma of your coffee.
- Limescale Reduction: Significantly reduces limescale deposits, which are common in tap water.
- Enhanced Appliance Performance: By reducing mineral buildup, the filter helps maintain optimal performance of your coffee maker.
- Extended Coffee Maker Lifespan: Protecting internal components from limescale can prolong the operational life of your appliance.
- Easy Installation: Designed for a simple and quick setup process.

Setup and Installation

Proper installation of your SENCOR water filter ensures optimal performance and water quality. Follow these steps to install the filter in your SENCOR SES 4900SS coffee maker:

- 1. **Prepare the Filter:** Remove the new water filter from its packaging. Rinse the filter under cold running water for approximately 1 minute to remove any loose carbon particles.
- 2. **Access the Water Tank:** Locate and remove the water tank from your SENCOR SES 4900SS coffee maker.
- 3. **Insert the Filter:** Identify the filter holder or designated slot within the water tank. Insert the water filter firmly into this position. Ensure it is securely seated to prevent leaks and ensure proper filtration.
- 4. Fill the Water Tank: Fill the water tank with fresh, cold water up to the maximum fill line.
- 5. **Prime the System:** Before making coffee, it is recommended to run a few cycles of hot water through the machine without coffee grounds. This helps to flush out any remaining air from the filter and system. Refer to your coffee maker's manual for specific priming instructions.
- 6. **Reinstall Water Tank:** Place the water tank back into the coffee maker, ensuring it is correctly positioned.

Your SENCOR water filter is now installed and ready for use.

Operation

Once installed, the SENCOR water filter operates automatically as water passes through it during the coffee brewing process. The filter continuously works to remove impurities and reduce limescale, ensuring that only filtered water is used for your beverages. No additional user interaction is required during normal operation.

Maintenance and Replacement

To maintain optimal water quality and ensure the longevity of your coffee maker, regular replacement of the water filter is essential. The SENCOR SEX 002 water filter should be replaced every **2 months** for best results.

- 1. **Remove Old Filter:** Access the water tank and carefully remove the old filter. Dispose of it responsibly.
- 2. Clean Water Tank: It is advisable to clean the water tank thoroughly before installing a new filter.
- 3. Install New Filter: Follow the "Setup and Installation" steps above to install a new SENCOR SEX

002 water filter.

4. **Reset Filter Indicator (if applicable):** If your coffee maker has a filter replacement indicator, consult your coffee maker's manual on how to reset it after installing a new filter.

Troubleshooting

If you encounter any issues related to water filtration, consider the following common troubleshooting steps:

Issue	Possible Cause / Solution
Slow Water Flow	The filter might be clogged or nearing the end of its lifespan. Replace the filter. Ensure the filter is correctly seated and not obstructing water flow.
Unusual Taste in Coffee	The filter may need to be replaced, or it was not properly rinsed before first use. Replace the filter and ensure proper priming.
Limescale Buildup Still Occurring	The filter might be expired or incorrectly installed. Ensure the filter is replaced every 2 months. Verify correct installation.

If problems persist, refer to your SENCOR SES 4900SS coffee maker's instruction manual or contact SENCOR customer support.

Technical Specifications

Feature	Detail		
Brand	SENCOR		
Model Number	SEX 002		
Compatibility	SENCOR SES 4900SS Coffee Maker		
Color	White		
Product Dimensions (L x W x H)	7 x 5.7 x 14.2 cm		
Item Weight	84 grams		
Recommended Replacement	Every 2 months		

Warranty and Support

Information regarding the specific warranty for the SENCOR SEX 002 water filter is not available in the provided product details. For warranty claims, technical support, or further assistance, please contact SENCOR customer service directly or refer to the documentation included with your SENCOR SES 4900SS coffee maker.

You may also visit the official SENCOR website for up-to-date support information.

Related Documents - SEX 002

