

BELLA 17645

BELLA Dual Brew Single Serve Coffee Maker Instruction Manual

Model: 17645

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in product damage or personal injury. Keep this manual for future reference.

- Ensure the voltage rating on the appliance matches your local power supply.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.

2. PRODUCT OVERVIEW

The BELLA Dual Brew Single Serve Coffee Maker offers the flexibility to brew with K-Cup® capsules or your preferred ground coffee. It features a 14oz capacity and an auto shut-off function for convenience.





Image: The BELLA Dual Brew Single Serve Coffee Maker in pink, actively brewing coffee into a white mug. This illustrates the product in operation.

3. SETUP AND FIRST USE

3.1 Unpacking

- Carefully remove all packaging materials and labels from the coffee maker.

- Ensure all components are present: coffee maker unit, K-cup adapter, ground coffee basket.

3.2 Initial Cleaning

- Wash the removable parts (K-cup adapter, ground coffee basket, drip tray, and water reservoir lid) in warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth.

3.3 Priming the Unit (First Use)

1. Fill the water reservoir with clean water up to the 14oz MAX fill line.
2. Place an empty mug on the drip tray.
3. Close the lid securely without any K-cup or ground coffee basket inserted.
4. Press the brew button. The unit will cycle water through.
5. Discard the water. The coffee maker is now primed and ready for use.

4. OPERATING INSTRUCTIONS

4.1 Brewing with K-Cup® Capsules

1. Lift the lid of the coffee maker.
2. Insert a K-Cup® capsule into the K-cup adapter, ensuring it is seated correctly.
3. Close the lid firmly until it clicks into place.
4. Fill the water reservoir with fresh water (up to 14oz) for your desired brew size.
5. Place your mug on the adjustable drip tray.
6. Press the brew button. The indicator light will illuminate, and brewing will begin.
7. Once brewing is complete, the unit will automatically shut off. Carefully remove your mug.



Image: A hand demonstrating the placement of a K-Cup capsule into the coffee maker's brewing chamber. This highlights the versatility of the unit.

4.2 Brewing with Ground Coffee

1. Lift the lid of the coffee maker.
2. Place your desired amount of ground coffee into the reusable ground coffee basket. Do not overfill.
3. Insert the filled ground coffee basket into the brewing chamber.
4. Close the lid firmly until it clicks into place.
5. Fill the water reservoir with fresh water (up to 14oz) for your desired brew size.
6. Place your mug on the adjustable drip tray.
7. Press the brew button. The indicator light will illuminate, and brewing will begin.
8. Once brewing is complete, the unit will automatically shut off. Carefully remove your mug.



Fits Your Needs

Adjustable drip tray fits most travel mugs

Image: The BELLA coffee maker showcasing the ground coffee basket and an adjustable drip tray, accommodating various mug sizes.

4.3 Adjustable Drip Tray

The drip tray can be adjusted to accommodate various mug sizes, including most travel mugs. Simply lift or lower the tray as needed before placing your cup.

Delicious Results

Pressurized pump for maximum flavor extraction



Image: The BELLA coffee maker on a kitchen counter, illustrating its compact size and ability to produce beverages with a pressurized pump for flavor extraction.

4.4 Auto Shut-Off

For safety and energy efficiency, the coffee maker will automatically shut off after brewing is complete.



Image: A hand initiating the brewing process by pressing the one-touch brew button on the BELLA coffee maker.

5. CLEANING AND MAINTENANCE

5.1 Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Remove and empty the K-cup adapter or ground coffee basket after each use. Wash with warm, soapy water and rinse.
- Remove and clean the drip tray and silicone cup holder. These can be washed with warm, soapy water.
- Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads.

5.2 Descaling (Mineral Deposit Removal)

Over time, mineral deposits (calcium) can build up in your coffee maker, affecting its performance. Descaling should be performed regularly, depending on water hardness and frequency of use.

1. Fill the water reservoir with a mixture of one part white vinegar and two parts water.

2. Place an empty mug on the drip tray.
3. Run a brew cycle without any coffee.
4. After the cycle, let the unit sit for 15-20 minutes.
5. Run several cycles with fresh, clean water to rinse out any remaining vinegar solution.

6. TROUBLESHOOTING

If you encounter issues with your coffee maker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage.	Ensure the unit is securely plugged into a working outlet. Check circuit breaker.
Water is not dispensing or only partially dispensing.	Water reservoir empty; mineral buildup; clogged needle.	Fill water reservoir. Perform descaling procedure. Check for blockages in the K-cup or ground coffee basket area.
Lid does not close securely or pops open during brewing.	K-cup or ground coffee basket not seated correctly; excessive pressure buildup.	Ensure K-cup or ground coffee basket is properly aligned and inserted. Do not overfill the ground coffee basket. Ensure the lid clicks into place.
Coffee has a plastic taste.	New unit odor; residue from manufacturing.	Run several cycles with plain water, then with a vinegar-water solution, followed by more plain water cycles. Ensure all removable parts are thoroughly cleaned.
Coffee is not hot enough.	Mineral buildup.	Perform descaling procedure to ensure optimal heating element performance.

7. SPECIFICATIONS

- **Brand:** BELLA
- **Model Name:** Dual Brew Single Serve Coffee Maker
- **Model Number:** 17645
- **Product Dimensions:** 5.35"D x 6.45"W x 10.9"H
- **Item Weight:** 1.82 pounds
- **Coffee Input Type:** K-Cups and Ground Coffee
- **Operation Mode:** Fully Automatic
- **Voltage:** 120 Volts (AC)
- **Power:** 600 Watts (estimated from A+ content)
- **Special Feature:** Auto Shut-Off, Adjustable Tray
- **Included Components:** Filter (Ground Coffee Basket)
- **UPC:** 829486176456

8. WARRANTY INFORMATION

This BELLA Dual Brew Single Serve Coffee Maker is covered by a **2-Year Limited Warranty**. Please refer to the warranty card included with your product for specific terms and conditions. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact BELLA customer support. Contact information can typically be found on the manufacturer's website or on the product packaging. You may also visit the official BELLA store for more product information [BELLA Store on Amazon](#)

© 2025 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question