

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [One Fire](#) /

> [One Fire Night Light WH-B23 Instruction Manual](#)

## One Fire WH-B23

# One Fire Night Light WH-B23 Instruction Manual

Model: WH-B23 | Brand: One Fire

## INTRODUCTION

The One Fire Night Light WH-B23 is a versatile and portable lighting solution designed for various environments, including nurseries, kids' rooms, and general household use. It features multiple color options, adjustable brightness levels, and convenient control methods to enhance comfort and safety.

Key features include:

- 80 unique lighting combinations (10 colors x 8 brightness levels).
- Eye-protecting, flicker-free light.
- Easy remote and touch control.
- Auto-off timer (30/60/90 minutes).
- Portable design with an easy-grip handle.
- Durable built-in 1800mAh rechargeable battery with USB Type-C charging.
- Up to 200 hours of soft glow or 10 hours of brighter light on a single charge.

## PACKAGE CONTENTS

Please ensure all items are present in the package:

- One Fire Night Light WH-B23
- Remote Control
- USB Type-C Charging Cable
- Instruction Manual (this document)

## SETUP

### 1. Initial Charge

Before first use, fully charge the night light. Connect the provided USB Type-C cable to the charging port on the device and plug the other end into a compatible USB power adapter (not included). The charging indicator light will show the charging status.

# Memory Feature

Retains Your Last Brightness or Color Setting



Image: The night light showing its USB-C charging port on the top surface.

## 2. Remote Control Battery

The remote control comes with a pre-installed battery. If the remote does not respond, check or replace the battery as needed.

## OPERATING INSTRUCTIONS

## 1. Power On/Off

- **Touch Control:** Press and hold the power button on the top of the night light for 2-3 seconds to turn it on or off.
- **Remote Control:** Press the red power button on the remote control to turn the light on or off.

## 2. Changing Colors

The night light offers 10 different colors, including a warm white and a red night light option.

- **Touch Control:** Short press the power button on the top of the night light to cycle through the available colors.
- **Remote Control:** Use the color cycle button (often depicted as a color wheel) on the remote to change colors.



# 8 Levels of Brightness

Night Light for Baby Nursery

Image: The night light showcasing its 10 RGB color options, including warm white.

### 3. Adjusting Brightness

There are 8 dimmable brightness levels for each color.

- **Touch Control:** Tap the top surface of the night light to adjust brightness levels.
- **Remote Control:** Use the '+' and '-' buttons on the remote to increase or decrease brightness.

# Children's Night Light



Lightweight  
& Portable



10 Colors



8 Brightness  
Levels



Remote  
Control



Touch  
Control



1800mAh



3 Timer



Memory  
Function



Image: The night light and its remote control, highlighting the brightness adjustment buttons.

## 4. Timer Function

The night light includes an auto-off timer function.

- **Remote Control:** Press the 0.5H, 1H, or 1.5H buttons on the remote to set the timer for 30 minutes, 1 hour, or 1.5 hours, respectively. The light will automatically turn off after the set time.

## 5. Memory Function

The night light remembers your last brightness and color setting when turned off and on again, eliminating the need to reset it each time.



Image: A visual representation of the night light's memory function, retaining previous color and brightness settings.

## MAINTENANCE

### 1. Cleaning

Wipe the night light with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

### 2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the device when the light dims or the charging indicator suggests low battery.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Low battery; device is off; faulty power button.	Charge the device fully. Ensure the power button is pressed and held for 2-3 seconds. If the touch button is unresponsive, use the remote control.
Remote control is not working.	Remote battery is dead; obstruction between remote and light.	Replace the remote control battery. Ensure a clear line of sight to the night light.
Light dims unexpectedly.	Low battery.	Recharge the night light.
Cannot change colors or brightness.	Incorrect operation; remote battery low.	Refer to "Operating Instructions" for correct touch and remote control usage. Replace remote battery if necessary.

## SPECIFICATIONS

- **Model Number:** WH-B23
- **Dimensions:** 3.74"D x 3.74"W x 5"H

- **Item Weight:** 8.3 ounces
- **Material:** Acrylonitrile Butadiene Styrene (Plastic)
- **Power Source:** Battery Powered (1800mAh Lithium Ion battery included)
- **Light Source Type:** LED
- **Number of Light Sources:** 80
- **Control Method:** Remote, Touch
- **Color Options:** 10 (Multicolor, including Red)
- **Brightness Levels:** 8 Dimmable Levels
- **Timer Settings:** 0.5H, 1H, 1.5H
- **Water Resistance Level:** Waterproof
- **Finish Type:** Plastic Finish
- **Room Type:** Bathroom, Bedroom, Kids Room, Nursery
- **Recommended Uses:** Camping, Reading

## WARRANTY AND SUPPORT

---

One Fire provides a 3-year quality promise for this product. For any issues or support inquiries, please contact our customer service team via the contact information provided on the product packaging or our official website.

For more information, visit the [One Fire Store on Amazon](#).