

[manuals.plus](#) /

› [HOMCOM](#) /

› [HOMCOM 2100W Electric Grill Instruction Manual, Model IT800-110V900631](#)

HOMCOM IT800-110V900631

HOMCOM 2100W Electric Grill Instruction Manual

Model: IT800-110V900631

1. INTRODUCTION

Thank you for purchasing the HOMCOM 2100W Electric Grill. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: The HOMCOM Electric Grill in its closed position, showcasing its sleek design and control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The HOMCOM Electric Grill is designed for versatile cooking, featuring a powerful 2100W heating element and intelligent design for optimal results.

Key Components:

- **Upper and Lower Grill Plates:** Non-stick and removable for easy cleaning.
- **Adjustable Hinge:** Automatically adapts to food thickness up to 5 cm.
- **Control Panel:** Features power button, cooking program selections, temperature control, and indicator lights.
- **Insulated Handle:** For safe opening and closing.
- **Drip Tray:** Collects excess fat and oils.

PIASTRA MOBILE

Si regola automaticamente
allo spessore del cibo



Image 3.1: The grill's adjustable hinge mechanism, demonstrating its ability to adapt to food thickness up to 5 cm.



Image 3.2: A detailed view of the grill plate and hinge connection, highlighting the robust construction.

4. SETUP

1. **Unpacking:** Carefully remove the grill from its packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Remove the grill plates and wash them with warm, soapy water, then rinse and dry thoroughly. Ensure the drip tray is clean and properly inserted.
3. **Placement:** Place the grill on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance. Do not place it near flammable materials.
4. **Power Connection:** Ensure the voltage of your power outlet matches the specifications of the grill (240V). Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

General Operation:

1. **Preheating:** Close the grill and press the power button. The red indicator light will illuminate. Select your desired cooking program or manual temperature. The grill will begin preheating. The green indicator light will illuminate when the grill has reached the set temperature and is ready for cooking.
2. **Placing Food:** Carefully open the grill using the insulated handle. Place your food evenly on the lower grill plate. Close the upper plate gently. The adjustable hinge will accommodate the food thickness.
3. **Cooking:** Monitor the cooking process. For manual mode, adjust temperature as needed (90°C to 200°C). For automatic programs, the grill will guide you through cooking stages.
4. **Removing Food:** Once cooking is complete, carefully open the grill and remove the food using heat-resistant utensils.
5. **Shutting Down:** Press the power button to turn off the grill and unplug it from the outlet. Allow the appliance to cool completely before cleaning.



Image 5.1: The electric grill open, showcasing its cooking plates and a variety of prepared dishes, including meat and vegetables.

Using the Grill in 95° or 180° Open Position:

The grill can be opened to 95° for standard grilling or fully opened to 180° to function as an open grill, allowing you to cook on both plates simultaneously.

- **95° Position:** Simply lift the handle until the upper plate locks into a 95-degree angle. This is ideal for cooking items that require pressing, like sandwiches or paninis.
- **180° Position:** To open the grill completely flat, lift the handle to the 95° position, then gently push the upper plate further back until it lies flat, creating two separate cooking surfaces. This is suitable for grilling larger quantities or different types of food at once.



Image 5.2: The electric grill fully opened to 180 degrees, demonstrating its versatility as an open grill for cooking on both surfaces.

6. COOKING PROGRAMS

The HOMCOM Electric Grill features 8 automatic cooking programs designed for various food types, ensuring optimal results. The control panel indicates the cooking stages: Pre-heating, Start to Cook, Rare, Medium, and Well Done.

8 IMPOSTAZIONI AUTOMATICHE

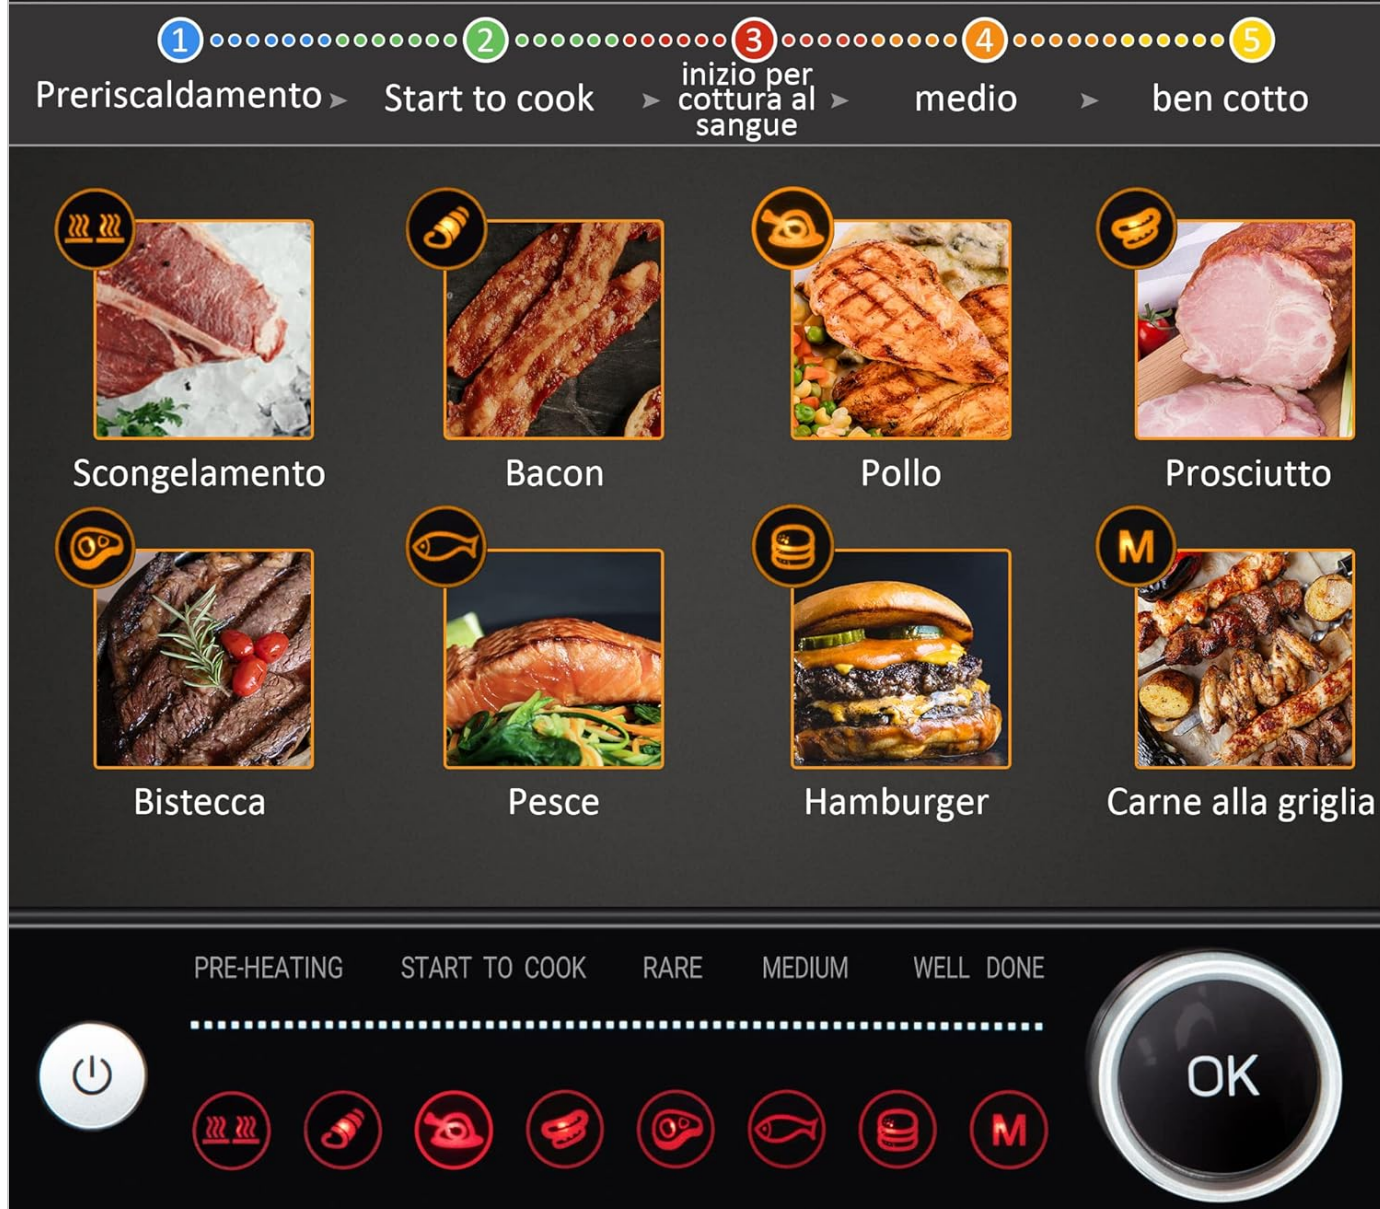


Image 6.1: The grill's control panel displaying the 8 automatic cooking programs, each represented by an icon for different food types.

Available Programs:

- **Defrost:** For thawing frozen items before grilling.
- **Bacon:** Optimized for crispy bacon.
- **Chicken:** For poultry, ensuring thorough cooking.
- **Ham:** Ideal for various ham preparations.
- **Steak:** Offers options for rare, medium, or well-done steak.
- **Fish:** Gentle cooking for delicate fish fillets.
- **Hamburger:** Perfect for juicy burgers.
- **Grilled Meat (Mixed Grill):** For a variety of meats.

To use an automatic program, select the desired program after preheating. The grill will automatically adjust cooking time and temperature based on the program and food thickness.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your grill.

1. **Always Unplug:** Before cleaning, ensure the grill is unplugged from the power outlet and has cooled down completely.
2. **Remove Grill Plates:** The non-stick grill plates are removable. Press the release buttons (if present) and carefully detach them.
3. **Clean Grill Plates:** Wash the plates with warm, soapy water using a soft sponge or cloth. They are also dishwasher safe. Avoid abrasive cleaners or metal scouring pads that could damage the non-stick coating.
4. **Empty Drip Tray:** Remove and empty the drip tray. Wash it with warm, soapy water and rinse thoroughly.
5. **Clean Exterior:** Wipe the exterior of the grill with a damp cloth. Do not immerse the main unit in water or any other liquid.
6. **Reassemble:** Once all parts are clean and dry, reattach the grill plates and insert the drip tray.



Image 7.1: A visual representation of the integrated fat drainage system and the removable non-stick grill plates, emphasizing ease of

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet issue; power button not pressed.	Ensure the grill is securely plugged into a working outlet. Press the power button.
Grill not heating up.	Not preheated; temperature setting too low.	Allow adequate time for preheating until the green indicator light illuminates. Increase the temperature setting if in manual mode.
Food is not cooking evenly.	Uneven food placement; grill not fully preheated.	Ensure food is spread evenly on the plates. Always preheat the grill completely before adding food.
Smoke or unusual odor during use.	Food residue on plates; excessive fat/oil; first-time use (manufacturing residue).	Clean plates thoroughly. Ensure drip tray is empty. A small amount of smoke/odor is normal during first use. If excessive or persistent, unplug and contact support.

9. SPECIFICATIONS

Model: IT800-110V900631

Brand: HOMCOM

Power: 2100W

Voltage: 240V

Temperature Range: 90°C - 200°C

Material: Aluminum plates, Stainless steel casing, ABS

Overall Dimensions: 38 cm (L) x 33 cm (W) x 20 cm (H)

Grill Plate Dimensions: 31.3 cm (L) x 24.5 cm (W)

Max Food Thickness: 5 cm (adjustable hinge)

Weight: 5.25 kg

Special Features: 8 cooking programs, temperature control, adjustable hinge, removable non-stick plates, fat drainage system.



Image 9.1: Diagram illustrating the overall dimensions of the HOMCOM Electric Grill: 38 cm length, 33 cm width, and 20 cm height.

10. WARRANTY AND SUPPORT



For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.


For further assistance, please visit the official HOMCOM website or contact their customer service department.



© 2024 HOMCOM. All rights reserved.

Related Documents - IT800-110V900631

	<p>HOMCOM 800-190V70 Dishwasher Instruction Manual</p> <p>Comprehensive instruction manual for the HOMCOM 800-190V70 tabletop dishwasher, covering installation, user guide, safety precautions, and maintenance.</p>
	<p>HOMCOM 800-122V70/800-122V90 Air Fryer User Manual: Operation, Safety & Troubleshooting</p> <p>Comprehensive user manual for the HOMCOM 800-122V70/800-122V90 Air Fryer. Includes detailed instructions on setup, operation, safety precautions, cleaning, maintenance, and troubleshooting tips for optimal use.</p>

	<p>HOMCOM 700-113V01/700-113V91 Recliner Massage Chair User Manual</p> <p>Official user manual for the HOMCOM 700-113V01 and 700-113V91 recliner massage chair. Includes detailed safety instructions, step-by-step assembly guide, parts and hardware lists, technical specifications, and operating instructions for the massage functions. Ensure proper setup and use for optimal comfort and performance.</p>
	<p>HOMCOM 83A-221V00 Adjustable Bar Stool Assembly Instructions and User Manual</p> <p>This document provides assembly instructions, usage guidelines, safety precautions, and maintenance information for the HOMCOM 83A-221V00 adjustable bar stool. It is designed for domestic use and requires careful reading before assembly and use.</p>
	<p>HOMCOM Children's Tricycle 370-027V00 - User Manual and Assembly Guide</p> <p>Comprehensive guide for the HOMCOM 370-027V00 children's tricycle, covering safety warnings, maintenance, parts identification, and step-by-step assembly instructions.</p>
	<p>HOMCOM 839-902V00 Sofa Bed: Assembly, Use, and Care Guide</p> <p>Comprehensive guide for the HOMCOM 839-902V00 sofa bed, covering assembly instructions, usage guidelines, maintenance tips, and storage conditions. Ensure proper setup and longevity of your furniture.</p>