

TWS 31

Generic TWS 31 Wireless Earphone User Manual

Model: TWS 31

1. INTRODUCTION

Thank you for choosing the Generic TWS 31 Wireless Earphones. This manual provides essential information on how to set up, operate, and maintain your new earphones. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- TWS 31 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Ear Cushions (various sizes)
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your TWS 31 Wireless Earphones.



Image 1: Generic TWS 31 Wireless Earphones. This image displays the two earbuds, likely within their charging case, providing a visual reference for the product.

The TWS 31 earphones consist of two independent earbuds and a portable charging case. Each earbud features a touch-sensitive area for controls and an indicator light. The charging case has a charging port and an LED indicator to show battery status.

4. SETUP

4.1. Charging the Earphones and Case

1. **Initial Charge:** Before first use, fully charge both the earphones and the charging case.
2. **Charging the Case:** Connect the provided USB charging cable to the charging port on the case and to a USB power source (e.g., computer, wall adapter). The LED indicator on the case will show charging status and turn off or change color when fully charged.
3. **Charging the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure they are properly seated. The earbuds will automatically begin charging. Indicator lights on the earbuds will show charging status and turn off when fully charged.

Note: Always use a certified charger and cable to prevent damage.

4.2. Pairing with a Device

1. **Power On:** Open the charging case. The earbuds will automatically power on and enter pairing mode. You may hear a voice prompt indicating "Pairing".
2. **Activate Bluetooth:** On your smartphone, tablet, or laptop, go to the Bluetooth settings and enable Bluetooth.
3. **Select Device:** In the list of available Bluetooth devices, locate and select "TWS 31".

4. **Confirm Connection:** Once connected, you will hear a voice prompt "Connected" from the earphones. The indicator lights on the earbuds may turn off or flash slowly.

Note: The earphones will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

5. OPERATING THE EARPHONES

5.1. Wearing the Earphones

Gently insert each earbud into your ear canal. Adjust the angle for a comfortable and secure fit. You may try different sizes of ear cushions to find the best fit for optimal sound quality and comfort.

5.2. Basic Controls (Touch/Button)

The TWS 31 earphones feature touch controls. The exact functions may vary slightly, but common controls are:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud (e.g., Siri, Google Assistant).
- **Volume Control:** (If supported) Long press on the right earbud to increase volume, long press on the left earbud to decrease volume.

5.3. Power On/Off

- **Power On:** Open the charging case, or press and hold the touch area on both earbuds for approximately 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or press and hold the touch area on both earbuds for approximately 5 seconds.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your earphones.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Cushions:** Remove and clean ear cushions periodically with mild soap and water, then dry thoroughly before reattaching.
- **Storage:** When not in use, store the earphones in their charging case to protect them from dust and damage.
- **Avoid Water:** The earphones are not waterproof. Avoid exposure to water, moisture, or extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues, try the following solutions:

Problem	Solution
---------	----------

Problem	Solution
Earbuds not pairing with device.	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Turn off and on Bluetooth on your device. • Forget "TWS 31" from your device's Bluetooth list and re-pair. • Place earbuds back in case, close lid, wait 5 seconds, then open again to reset.
Only one earbud is working.	<ul style="list-style-type: none"> • Ensure both earbuds are charged. • Place both earbuds back in the charging case, close the lid, and then take them out together. • Perform a factory reset (refer to specific instructions if available, otherwise try forgetting device and re-pairing).
Low volume or poor sound quality.	<ul style="list-style-type: none"> • Adjust volume on both your device and the earbuds. • Ensure earbuds are properly seated in your ears. • Try different sized ear cushions for a better seal. • Clean any debris from the earbud mesh.
Earbuds not charging.	<ul style="list-style-type: none"> • Ensure the charging case is charged. • Check that the earbuds are correctly placed in the charging case. • Clean the charging contacts on both the earbuds and the case. • Try a different USB cable and power adapter.

8. SPECIFICATIONS

Model Name	TWS 31
Brand	Generic
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	None
Wireless Technology Type	Wireless
Product Features	Microphone Included
Compatible Devices	Laptops, Smartphones, Tablets
Control Type	Call Control
Control Method	Remote
Enclosure Material	Plastic

9. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

Manufacturer: Shri Khatu Shyam Mobile Shop Ujjain



© 2023 Generic. All rights reserved.