

## Edison Electric 25L 2000W

# Edison Electric 25L 2000W Cylinder Vacuum Cleaner User Manual

Model: 25L 2000W | Brand: Edison Electric

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the vacuum cleaner from the electrical outlet before cleaning or performing any maintenance.
- Do not use outdoors or on wet surfaces. This appliance is designed for dry indoor use only.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Use extra care when cleaning on stairs.
- Do not use without dust container and/or filters in place.

## 2. PRODUCT OVERVIEW

---

The Edison Electric 25L 2000W Cylinder Vacuum Cleaner is designed for efficient dry cleaning of various surfaces, particularly carpets. Its robust 2000-watt motor provides strong suction, while the 25-liter capacity

dust tank allows for extended cleaning sessions without frequent emptying. Equipped with wheels, it offers easy maneuverability around your home.



*Figure 1: Edison Electric 25L 2000W Cylinder Vacuum Cleaner. This image shows the main unit of the vacuum cleaner, highlighting its compact design and the hose attachment point.*

### 3. ASSEMBLY

---

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Connect the Extension Wands:** Connect the two extension wands together by twisting them until they lock. Then, attach the combined wands to the end of the flexible hose.
3. **Attach the Floor Nozzle:** Securely attach the desired floor nozzle (e.g., carpet brush) to the end of the extension wands.
4. **Install Filters:** Ensure the cartridge filter and any other internal filters are correctly seated inside the dust tank before closing the lid. Refer to the 'Maintenance' section for filter details.

### 4. OPERATION

---

Operating your Edison Electric vacuum cleaner is straightforward:

1. **Power Connection:** Unwind the power cord and plug it into a suitable electrical outlet. Ensure the voltage matches the appliance's requirements (220-240V, 50/60Hz).
2. **Power On/Off:** Press the power switch located on the main unit to turn the vacuum cleaner ON. Press it again to turn it OFF.
3. **Cleaning:** Guide the floor nozzle over the surface to be cleaned. For carpets, use slow, overlapping strokes to ensure thorough cleaning.
4. **Using Attachments:** For specific cleaning tasks, detach the floor nozzle and attach the appropriate accessory (e.g., crevice tool for tight spaces, upholstery brush for furniture).
5. **After Use:** Turn off the vacuum cleaner and unplug it from the power outlet. Wind the power cord neatly for storage.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner:

- **Emptying the Dust Tank:** When the dust tank is full or suction power decreases, empty it. Unclip the lid, remove the dust tank, and dispose of the collected debris. Reattach the tank and lid securely.
- **Cleaning the Cartridge Filter:** The cartridge filter should be cleaned regularly, ideally after every few uses, or when you notice a reduction in suction. Gently tap the filter to dislodge dust. For a more thorough clean, rinse the filter under cold running water. Ensure the filter is completely dry before reinserting it into the vacuum cleaner. Do not use detergents or hot water.
- **Cleaning the Exterior:** Wipe the exterior surfaces of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Checking for Blockages:** Periodically check the hose, wands, and nozzles for any blockages. Remove any debris that may be obstructing airflow.

## 6. TROUBLESHOOTING

---

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply. Plug not inserted correctly.	Check if the plug is securely inserted into the power outlet. Test the outlet with another appliance.
Loss of suction power.	Dust tank is full. Filter is clogged. Hose or nozzle is blocked.	Empty the dust tank. Clean or replace the cartridge filter. Check hose and nozzles for blockages and remove them.
Unusual noise during operation.	Blockage in the hose or nozzle. Motor issue.	Check for and remove any blockages. If the noise persists, discontinue use and contact customer support.

## 7. SPECIFICATIONS

---

**Brand:** Edison Electric

**Model:** 25L 2000W

**Capacity:** 25 Liters

**Power:** 2000 Watts

**Weight:** 6400 grams

**Power Source:** Corded Electric

**Filter Type:** Cartridge

**Special Feature:** Wheels

**Recommended Surface:** Carpet

## 8. WARRANTY AND SUPPORT

---

This Edison Electric 25L 2000W Cylinder Vacuum Cleaner comes with a **3-year warranty** from the date of purchase, covering manufacturing defects under normal household use.

For warranty claims, technical support, or service inquiries, please contact Edison Electric customer service through your retailer or the official brand website. Please have your proof of purchase and product model information ready when contacting support.

For more information, visit the [Edison Electric Store on Amazon](#).