

HADEN Heritage2S

Haden Heritage 4-Slice Toaster Instruction Manual

Model: Heritage2S | Color: Ivory & Copper

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Always ensure bread is fully inserted into the slots.

- Empty crumb trays regularly to prevent fire hazards.

2. PRODUCT OVERVIEW

The Haden Heritage 4-Slice Toaster combines classic design with modern functionality, offering convenient features for your daily toasting needs.

HERITAGE IVORY & COPPER

4-Slice Toaster

HADEN



Convenient cancel, bagel and defrost settings.

Self-centering function keeps bread in the perfect toasting position.

Non-slip rubber feet for stability.

Boasts 1500W of power with a 32" power cord.

Image: Front view of the Haden Heritage 4-Slice Toaster in Ivory and Copper, showcasing its controls and levers.

Key Features:

- **4 Wide Slots:** Accommodates various bread types, including bagels and thick slices.
- **Adjustable Browning Control:** Dial with multiple settings for desired toast shade.
- **Self-Centering Function:** Ensures even toasting by holding bread in the optimal position.
- **Cancel, Bagel, and Defrost Settings:** Dedicated buttons for specialized toasting.
- **Removable Crumb Trays:** For easy cleaning and maintenance.
- **Non-Slip Feet:** Provides stability on countertops.
- **Durable Construction:** Premium coated stainless steel housing.



Image: Overview of the Haden Heritage 4-Slice Toaster highlighting convenient cancel, bagel, and defrost settings, self-centering function, non-slip rubber feet, and 1500W power.

Components:

1. Toasting Slots (4)
2. Toasting Levers (2)
3. Browning Control Dials (2)
4. Cancel Buttons (2)
5. Bagel Buttons (2)
6. Defrost Buttons (2)
7. Removable Crumb Trays (2, located at the bottom)
8. Power Cord

3. SETUP

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the toaster.
3. **Power Connection:** Unwind the power cord and plug it into a standard 120V AC electrical outlet.
4. **Initial Use (Burn-off):** Before first use, operate the toaster without bread on the highest browning setting (6) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Allow the toaster to cool completely.

4. OPERATING INSTRUCTIONS

General Toasting:

1. Insert up to four slices of bread into the toasting slots. The self-centering guides will automatically adjust to hold the bread.
2. Select your desired browning level using the browning control dial (settings 1-6, with 1 being lightest and 6 being darkest).
3. Press down the toasting lever until it locks into place. The toaster will begin toasting.
4. Once the toasting cycle is complete, the toast will automatically pop up.
5. To stop the toasting cycle at any time, press the "CANCEL" button.

HADEN



Image: The Haden Heritage 4-Slice Toaster with bread slices inserted into the wide slots, ready for toasting.

Special Functions:

- **Bagel Function:**

- Insert bagel halves into the toasting slots with the cut side facing inwards.
- Select your desired browning level.
- Press down the toasting lever, then press the "BAGEL" button. The indicator light will illuminate. This function toasts the cut side while gently warming the outer side.

- **Defrost Function:**

- Insert frozen bread into the toasting slots.
- Select your desired browning level.
- Press down the toasting lever, then press the "DEFROST" button. The indicator light will illuminate. This function extends the toasting time to account for frozen bread.

- **Cancel Function:**

- To stop any toasting cycle prematurely, press the "CANCEL" button. The toasting lever will pop

up.

HADEN



Premium coated stainless steel housing.



The browning control dial allows you to select the perfect timing for your bread, bagel or waffle.



Easy to clean with its 2 removable sliding crumb trays.



Extra wide slots to accommodate thick slices of bread.

Image: A close-up view of the toaster's control panel, showing the browning dial, toasting lever, and the Cancel, Bagel, and Defrost buttons with their indicator lights.

Browning Control:

The browning control dial allows you to select from 6 different browning levels. Experiment to find your preferred setting for various types of bread and personal taste.

- **Setting 1-2:** Light toast
- **Setting 3-4:** Medium toast
- **Setting 5-6:** Dark toast



Image: Detailed view of the browning control dial, showing settings from 1 to 6.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always unplug the toaster** from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
3. **Crumb Trays:**
 - Locate the removable crumb trays at the bottom of the toaster.
 - Slide out the trays and discard accumulated crumbs.
 - Wipe the trays clean with a damp cloth and dry thoroughly before reinserting.
 - Ensure the crumb trays are fully pushed back into place before using the toaster.
4. **Interior Cleaning:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully remove it once cooled.



Image: The two removable crumb trays pulled out from the bottom of the toaster, showing accumulated crumbs.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not operate.	Not plugged in; power outage; toasting lever not fully depressed.	Ensure plug is securely in outlet; check household circuit breaker; push lever down until it locks.
Bread is unevenly toasted.	Bread not centered; inconsistent bread thickness.	The toaster has self-centering guides, but very thin or irregular bread may still toast unevenly. Try a different bread type or adjust browning.
Smoke coming from toaster.	Food lodged in slots; crumbs in tray; first use burn-off.	Immediately press CANCEL and unplug. Allow to cool, then remove food. Empty crumb trays. Initial smoke on first use is normal.

Problem	Possible Cause	Solution
Toast is too light/dark.	Browning setting too low/high.	Adjust the browning control dial to a higher or lower setting.

7. SPECIFICATIONS

Brand:	HADEN
Model Number:	Heritage2S
Color:	Ivory & Copper
Material:	Stainless Steel
Product Dimensions:	11.5"D x 7.5"W x 7.5"H
Number of Slices:	4
Wattage:	900 watts
Voltage:	120 Volts
Number of Settings:	6 (Browning Levels)
Special Feature:	Cancel Function, Bagel Function, Defrost Function
Item Weight:	4.4 Pounds

HADEN



Image: Diagram showing the dimensions of the Haden Heritage 4-Slice Toaster: 7.5"H x 13"W x 11.5"D, with toaster slot dimensions L 138mm x W 38mm x H 145mm.

8. PRODUCT VIDEOS

Watch these videos for additional information and demonstrations of the Haden Heritage 4-Slice Toaster.

Haden 4 Slot Toaster Overview

Your browser does not support the video tag.

Video: A brief overview of the Haden 4-slot toaster, demonstrating its features and design.

Reasons to Love This Toaster

Your browser does not support the video tag.

Video: A user shares their positive experience and highlights key aspects of the Haden toaster.

Toaster Quality and Toasting Performance

Your browser does not support the video tag.

Video: A review focusing on the build quality and toasting capabilities of the Haden Heritage toaster.

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official HADEN website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

HADEN Customer Service: Please visit [HADEN's Amazon Store](#) for contact details or further product information.