

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TEEHO](#) /

› [TEEHO TZ001 Keypad Door Lock Instruction Manual](#)

TEEHO TZ001

TEEHO TZ001 Keypad Door Lock Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, programming, operation, and maintenance of your TEEHO TZ001 Keypad Door Lock. Please read thoroughly before installation and use to ensure proper functionality and safety.

KEY FEATURES

- **Passcode Entry:** This keypad lock provides 20 access codes for family use and an available temporary code for single guest entry.
- **One-Time Code:** A one-time door opening PIN Code can be set, and the PIN Code will be automatically deleted after use.
- **Smart-Locking:** 'Automatic door lock' can be set to lock automatically in 10-99 seconds; 'one-touch auto-lock' can press and hold any key on the keypad for 2 seconds to lock the door.
- **Security Deadbolt:** It is a reliable home protection assistant, with a sturdy aluminum alloy, IP54 weather resistance, long-term durability, anti-peeping user code protection, low battery indicator, and a solid lock cylinder.

PACKAGE CONTENTS

- Keypad Deadbolt
- Latch
- User Manual
- Screws

INSTALLATION GUIDE

Follow these steps to properly install your TEEHO TZ001 Keypad Door Lock. For a visual guide, please refer to the installation video below.

Video: Step-by-step guide for installing the TEEHO TZ001 Keypad Door Lock.

1. **Adjustable Latch Length:** Adjust the latch length to fit your door's backset (2-3/8" or 2-3/4").



Image: Adjusting the latch length to match the door's backset.

2. **Install the Latch:** Insert the latch into the door edge and secure it with screws. Ensure the deadbolt is in the unlocked position.



Image: Securing the latch mechanism into the door frame.

3. **Install the Front Lock:** Carefully route the cable through the door hole and align the lock cylinder. Mount the exterior keypad assembly.



Image: Attaching the front keypad unit to the door.

4. **Install the Mounting Plate:** Secure the mounting plate to the door, ensuring the screw of the mounting plate aligns with the screw of the latch.



Image: Fastening the interior mounting plate.

5. **Install the Interior Assembly:** Connect the cable from the front lock to the interior assembly. Mount the interior assembly to the mounting plate and secure it with screws.



Image: Connecting the cable and attaching the interior lock unit.

6. **Insert 4 AA Batteries:** Open the battery cover on the interior assembly and insert four AA batteries, ensuring correct polarity.



Image: Placing four AA batteries into the battery compartment.

7. **Test the Deadbolt:** Close the battery cover. Test the deadbolt's functionality by manually locking and unlocking it from the interior, and then using the keypad from the exterior.



Image: Verifying the deadbolt extends and retracts correctly.

PROGRAMMING INSTRUCTIONS

After installation, program your lock with master and user codes. Refer to the video for resetting the lock.

Video: Instructions on how to reset the TEEHO TZ001 Keypad Door Lock.

Setting Master Code

The master code is used to program other settings and user codes. Follow the detailed steps in your included user manual to set your unique master code (4-10 digits).



Image: Demonstrates the anti-peeping password feature, allowing random digits before and after the actual code.

Adding User Codes

You can set up to 20 unique user codes for family members or regular guests. Each user code can be 4-10 digits long. Refer to the user manual for specific programming steps.

One-Time Codes

Generate temporary one-time codes for single-use access. These codes are automatically deleted after being used once, ideal for deliveries or short-term visitors.



Image: Illustrates the convenience of a one-time password for temporary access.

Auto-Lock Feature

Enable the automatic door lock feature to secure your door after a set period (10-99 seconds) once it's closed.

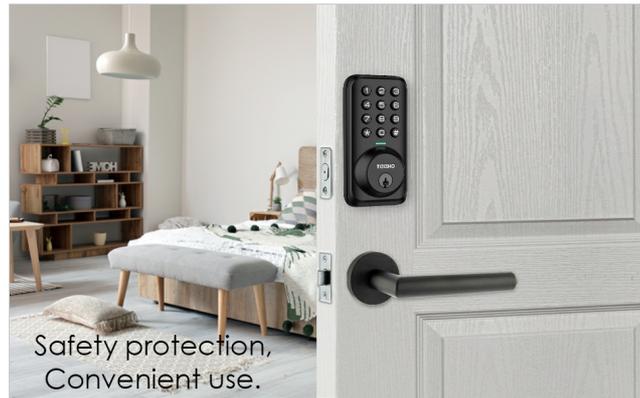


Image: Shows the automatic door lock feature, customizable from 10 to 99 seconds.

One-Touch Auto-Lock

For immediate locking, simply press and hold any key on the keypad for 2 seconds.

OPERATING INSTRUCTIONS

Locking the Door

- **Automatic Lock:** If enabled, the door will lock automatically after the set time delay (10-99 seconds).
- **One-Touch Lock:** Press and hold any key on the keypad for 2 seconds to instantly lock the door.
- **Manual Lock:** From the interior, turn the thumb-turn to the locked position.

Unlocking the Door

- **Keypad Entry:** Enter your valid user code or master code on the keypad, followed by the '#' key.
- **Key Override:** In case of battery depletion or other issues, use the physical key provided to unlock the deadbolt.

Anti-Peeping User Code Protection

To prevent others from guessing your code, you can enter random digits before or after your actual passcode. The lock will still recognize the correct sequence within the longer string of numbers.

MAINTENANCE

Battery Replacement

The lock requires 4 AA batteries. When the battery indicator signals low power, replace all four batteries promptly to ensure continuous operation. Always use new, high-quality alkaline batteries.

Weather Resistance

The TEEHO TZ001 is IP54 rated for weather resistance, making it suitable for various environments. It operates effectively in temperatures ranging from -31°F to 151°F.



Image: The lock is designed to withstand temperatures from -31°F to 151°F, suitable for various climates.

Low Battery Indicator

The lock features a low battery indicator to alert you when batteries need to be replaced. Pay attention to this indicator to avoid being locked out.

TROUBLESHOOTING

- **Lock Not Responding:** Check if the batteries are depleted. Replace with new AA batteries if necessary.
- **Codes Not Working:** Ensure you are entering the correct code and pressing the '#' key. If issues persist, try resetting the lock to factory settings (refer to the programming section or user manual) and reprogramming your codes.
- **Deadbolt Friction:** If the deadbolt is hard to turn or does not extend/retract smoothly, check the alignment of the lock cylinder and mounting plate during installation. Misalignment can cause friction.
- **Always Have Backup:** Keep your physical keys in a safe, accessible location as a backup in case of electronic malfunction or battery failure.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	TEEHO
Model Name	TZ001
Lock Type	Keypad
Material	Metal
Item Dimensions (L x W x H)	2.65 x 1.1 x 5.26 inches
Item Weight	1.83 pounds
Special Features	Battery Indicator, Digital Lock, Keypad Deadbolt
Power Source	4 AA Batteries (not included)
Weather Resistance	IP54, suitable from -31°F to 151°F

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical assistance, please refer to the contact information provided in your product packaging or visit the official TEEHO website. Our support team is available to help with any questions or issues you may encounter.