

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool 7 kg Inverter Fully Automatic Front Load Washing Machine User Manual

Whirlpool FRESH CARE 7112 (I)

Whirlpool 7 kg Inverter Fully Automatic Front Load Washing Machine

Model: Fresh Care 7112 (I)

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Whirlpool 7 kg Inverter Fully Automatic Front Load Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine. This appliance is designed for freestanding installation.

Unpacking and Inspection

Carefully remove all packaging materials. Inspect the appliance for any transit damage. If damage is found, do not install or operate the machine and contact customer service immediately.



Image: Front view of the Whirlpool 7 kg Inverter Fully Automatic Front Load Washing Machine, showing the control panel, detergent dispenser, and drum door.

Location Requirements

- Place the washing machine on a firm, level floor.
- Ensure adequate space around the machine for ventilation and access.
- Avoid direct sunlight or extreme temperatures.



Image: The Whirlpool washing machine positioned in a modern room, demonstrating its freestanding nature and compact design.

Connecting Water and Power

Connect the supplied water inlet pipe to a cold water tap. Ensure the drain hose is properly positioned. Connect the power cord to a grounded 220 Volt AC outlet. The machine operates at 8 Watts, but requires a dedicated circuit for optimal performance, especially when the inbuilt heater is active.

Included components for installation: Water Inlet Pipe, Daily Reference Guide, Health and Safety Installation Guide, and Shipping Cap.

OPERATING INSTRUCTIONS

Your Whirlpool washing machine is equipped with advanced features for efficient and gentle laundry care.

Loading Laundry

This front-load machine has a capacity of 7 kilograms. Do not overload the drum to ensure effective washing and rinsing. Distribute laundry evenly inside the drum.



Image: A close-up view of the washing machine's stainless steel drum, highlighting its textured surface designed for gentle fabric care.

Control Panel Overview

The control panel features push buttons and a knob for program selection and setting adjustments.



Image: Detailed view of the washing machine's control panel, showing the program selection knob, digital display, and various function buttons.

Key Technologies

- **6th Sense SoftMove Technology:** Utilizes 6 distinct drum motions tailored for different fabric types, ensuring optimal care and cleaning.
- **Fresh Care Technology:** Helps prevent odour formation by gently tumbling laundry periodically after the wash cycle, keeping clothes fresh.
- **IntelliSense Inverter:** An energy-efficient inverter motor that ensures quiet operation, durability, and reduced energy consumption.
- **Inbuilt Heater:** Provides hot water wash options for superior cleaning and hygiene.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficient operation of your washing machine.

Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.

Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to clean the drum and internal components.

Filter Cleaning

Check and clean the drain pump filter regularly to remove lint and small objects that may obstruct drainage.

Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a wash program and press start.
Excessive vibration during spin	Machine not level; shipping bolts not removed; uneven load.	Adjust leveling feet; ensure all shipping bolts are removed; redistribute laundry.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Check drain hose for kinks; clean the drain pump filter.

For issues not listed here or if problems persist, please contact Whirlpool customer support.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model	FRESH CARE 7112 (I)
Capacity	7 Kilograms
Installation Type	Freestanding
Part Number	31321
Special Features	6th Sense SoftMove Technology, Fresh Care Technology, IntelliSense Inverter, Inbuilt Heater
Colour	White
Control Console	Push Button, Knob
Access Location	Front Load
Voltage	220 Volts
Wattage	8 Watts
Material	Plastic
Included Components	Water Inlet Pipe, Daily Reference Guide, Health and Safety Installation Guide and Shipping Cap

Feature	Detail
Item Weight	65 kg
Item Dimensions (LxWxH)	57.5 x 59.5 x 84.5 Centimeters
Country of Origin	Slovakia
ASIN	B0B12PL89Q

WARRANTY AND SUPPORT

For warranty information, service requests, or technical assistance, please contact Whirlpool customer support.

- **Manufacturer:** Whirlpool
- **Importer:** Whirlpool of India Ltd. Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India
- **Email:** helpdeskindia@whirlpool.com
- **Toll Free:** 1800 208 1800

Please have your model number (FRESH CARE 7112 (I)) and serial number ready when contacting support.