

[Manuals.plus](#) /

> [Crux](#) /

> CRUX 17633 Rotating Belgian Waffle Maker Instruction Manual

Crux 17633

CRUX 17633 Rotating Belgian Waffle Maker Instruction Manual

Model: 17633

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The CRUX Rotating Belgian Waffle Maker is designed to create delicious, thick Belgian waffles with ease. It features deep nonstick PFOA-free plates, a digital LCD display with browning control, and a convenient cord storage system.

CRUX DIGITAL ROTATING WAFFLE MAKER



Image: The CRUX Rotating Belgian Waffle Maker, showing its compact design and dimensions (14.56"D x 10.07"W x 5.31"H).

SETUP

Unpacking

Carefully remove the waffle maker and all packaging materials. Ensure all components, including the drip tray, are present. Retain packaging for future storage or transport.

First Use & Cleaning

1. Before first use, wipe the nonstick cooking plates with a damp cloth or sponge.
2. Dry thoroughly.
3. Lightly coat the cooking plates with cooking oil or spray.
4. Close the waffle maker and plug it in. Allow it to preheat until the 'Ready' indicator light illuminates.
5. Unplug and let it cool completely. Wipe off any excess oil. The appliance is now ready for use.

Placement

Place the waffle maker on a stable, heat-resistant surface. Ensure there is adequate space around the appliance for ventilation and safe operation, especially when rotating.


OPERATING INSTRUCTIONS

Preheating

1. Plug the waffle maker into a 120V AC electrical outlet.
2. Set the browning control dial to your desired setting (1-6).
3. The 'Power' indicator light will illuminate. Allow the unit to preheat until the 'Ready' indicator light illuminates and the unit beeps, signaling it has reached the optimal cooking temperature.

Making Waffles

1. Once preheated, open the waffle maker.
2. Pour approximately 3/4 to 1 cup of waffle batter onto the center of the bottom cooking plate. Do not overfill.
3. Close the waffle maker.
4. Immediately rotate the waffle maker 180 degrees using the handle. This ensures even distribution of batter and consistent cooking on both sides.
5. The digital LCD display will show a countdown timer, indicating the remaining cooking time based on your selected browning setting. An alarm will sound when the waffle is ready.

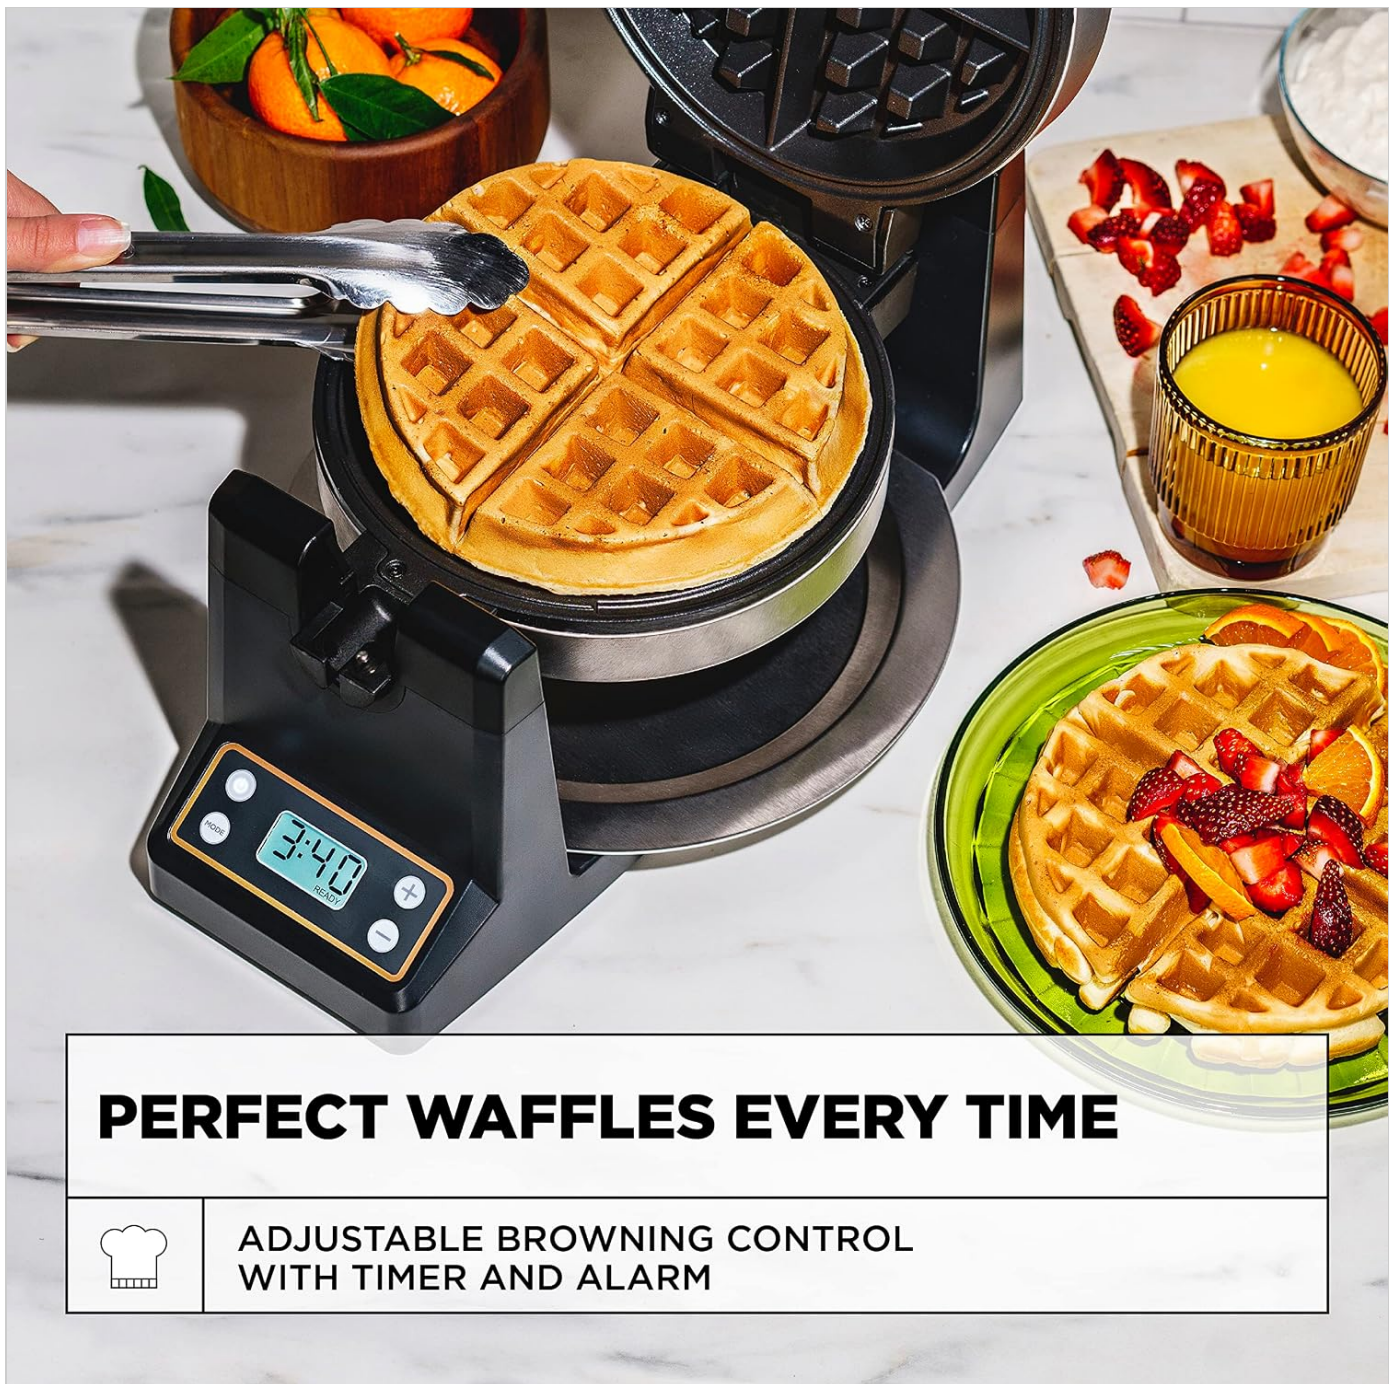

PERFECT WAFFLES EVERY TIME



ADJUSTABLE BROWNING CONTROL
WITH TIMER AND ALARM

Image: A CRUX waffle maker in use, with batter being poured into one side and a perfectly cooked waffle on a plate, demonstrating the adjustable browning control and timer.

SMART LCD DISPLAY



SHOWS REAL-TIME STATUS OF YOUR WAFFLES



Image: Close-up of the CRUX Waffle Maker's smart LCD display, showing the real-time status of the waffles and the digital countdown timer.

Removing Waffles

When the timer sounds and the 'Ready' light illuminates, rotate the waffle maker back to its upright position and open it. Use heat-resistant, non-metallic utensils (e.g., plastic or silicone tongs) to carefully remove the cooked waffle. Avoid using metal utensils, as they can damage the nonstick coating.

GET MORE OUT OF YOUR MACHINE



MAKES 1.4" EXTRA THICK WAFFLES



Image: A thick, golden-brown Belgian waffle being removed from the waffle maker, highlighting its 1.4-inch depth.

Official Product Video: Operation Overview

Your browser does not support the video tag.

Video: An official product video demonstrating the CRUX Rotating Waffle Maker in action, showcasing its nonstick coating, rotation for even cooking, LCD countdown timer, and the resulting thick waffles.

MAINTENANCE

Cleaning

1. Always unplug the waffle maker and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth. Do not immerse the unit in water or any other liquid.
3. The nonstick cooking plates can be wiped clean with a damp cloth or sponge. For stubborn residue, a small amount of cooking oil can be applied to soften it before wiping.

4. The removable drip tray is dishwasher-safe for easy cleaning.

Storage

Once completely cool and clean, the waffle maker can be stored upright to save counter space. The power cord can be wrapped around the base for tidy storage.

TROUBLESHOOTING

- **Waffles sticking:** Ensure the cooking plates were properly seasoned with cooking oil or spray before use. Re-season if necessary. Avoid using excessive batter, which can cause overflow and sticking.
- **Uneven browning:** Ensure the waffle maker is rotated 180 degrees immediately after closing to allow for even batter distribution and cooking on both sides. Check that the browning control setting is appropriate for your desired crispness.
- **Waffle maker not heating:** Verify that the unit is securely plugged into a working electrical outlet. Check the power switch is in the 'ON' position. If the unit still does not heat, contact customer support.
- **Power button issues:** If the power button becomes stuck or unresponsive, discontinue use and contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	17633
Brand	Crux
Style	Single Rotating
Color	Stainless Steel
Material	Stainless Steel
Product Dimensions	14.56"D x 10.07"W x 5.31"H
Wattage	1000 watts
Voltage	120 Volts
Special Feature	Manual, Digital LCD Display, Browning Control, Cord Storage, Non-stick PFOA Free Plates
Item Weight	6.1 pounds

WARRANTY & SUPPORT

This CRUX appliance comes with a Limited Warranty. For detailed warranty information, please refer to the documentation included with your product or visit the official Crux website.

For customer support, product inquiries, or service requests, please contact Crux customer service through their official channels. Have your model number (17633) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B136SWZJ>

More documents and user manuals: <https://manuals.plus/>