

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [CLEANmaxx](#) /

› CLEANmaxx Cordless Upholstery and Carpet Cleaner Instruction Manual

CLEANmaxx Kabellos

CLEANmaxx Cordless Upholstery and Carpet Cleaner

Model: Kabellos

Brand: CLEANmaxx

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using the CLEANmaxx Cordless Upholstery and Carpet Cleaner. Keep these instructions for future reference.

- Always ensure the device is switched off and unplugged from the charger before cleaning or performing maintenance.
- Do not immerse the device, charger, or battery in water or other liquids.
- This appliance is for household use only. Do not use it for commercial or industrial purposes.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Use only the original power adapter supplied with the device for charging.
- Do not use the device to pick up flammable or combustible liquids, or hot ashes.
- Ensure the fresh water tank is filled with appropriate cleaning solution and water. Do not use harsh chemicals.

2. PRODUCT OVERVIEW

The CLEANmaxx Cordless Upholstery and Carpet Cleaner is a versatile, portable device designed for effective spot cleaning of various surfaces.



Image: The CLEANmaxx Cordless Upholstery and Carpet Cleaner, featuring a dark grey body with translucent green water tanks and a handle.

Key Components:

- **Fresh Water Tank:** For clean water and cleaning solution (500 ml capacity).
- **Dirty Water Tank:** Collects soiled water (600 ml capacity).
- **Spray Nozzle:** Dispenses cleaning solution.
- **Integrated Cleaning Brush:** For scrubbing stains.
- **Suction Nozzle:** For vacuuming up liquid and dirt.
- **Power Button:** To turn the device on/off.
- **Spray Button:** To activate the spray function.
- **Charging Port:** For connecting the power adapter.



500 ML
FRISCHWASSERTANK



600 ML
SCHMUTZBEHÄLTER

Image: A split image showing the 500 ml fresh water tank being inserted into the device on the left, and the 600 ml dirty water tank being removed from the front of the device on the right.



REINIGUNGSBÜRSTE auf der Unterseite - perfekt zum Einmassieren von Teppichshampoo

Image: A close-up view of the underside of the CLEANmaxx cleaner, highlighting the integrated white cleaning brush designed for scrubbing surfaces.

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the device's integrated 2200 mAh Li-ion battery. A full charge provides up to 15 minutes of continuous operation.

1. Locate the charging port on the device.
2. Connect the supplied power adapter to the charging port.
3. Plug the power adapter into a suitable wall outlet.
4. The charging indicator light (if present) will show the charging status. Unplug once fully charged.

3.2 Filling the Fresh Water Tank

1. Remove the fresh water tank from the device.

2. Open the tank cap.
3. Fill the tank with clean water (up to 500 ml). For enhanced cleaning, add a suitable, low-foaming carpet or upholstery cleaning solution according to the solution manufacturer's instructions. Do not overfill.
4. Securely close the tank cap and reinsert the fresh water tank into the device until it clicks into place.

4. OPERATING INSTRUCTIONS

The CLEANmaxx cleaner is designed for quick and uncomplicated removal of stains from various surfaces.

4.1 General Operation

1. Ensure the fresh water tank is filled and the dirty water tank is empty and properly installed.
2. Press the power button to turn on the device.
3. Position the cleaning head over the stained area.
4. Press the spray button to apply cleaning solution to the stain.
5. Gently scrub the stain with the integrated brush.
6. Release the spray button and move the device slowly over the treated area to vacuum up the soiled liquid.
7. Repeat the process if necessary until the stain is removed.
8. Turn off the device by pressing the power button when finished.

4.2 Application Areas

This versatile cleaner is suitable for:

- **Upholstered Furniture:** Sofas, armchairs, and other upholstered items.
- **Carpets and Rugs:** Spot cleaning of spills and stains.
- **Mattresses:** Refreshing and cleaning mattress surfaces.
- **Car Seats:** Ideal for cleaning spills and dirt in vehicle interiors.



Geeignet
FÜR POLSTERMÖBEL, ...



... AUTOSITZE, ...



... MATRATZEN, ...



... TEPPICHBÖDEN u.v.m.

Image: A collage demonstrating the CLEANmaxx cleaner's versatility, showing it being used on upholstered furniture, car seats, mattresses, and carpets.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your device.

5.1 Emptying and Cleaning the Dirty Water Tank

The dirty water tank has a 600 ml capacity and should be emptied after each use or when full.

1. Switch off the device.
2. Remove the dirty water tank from the front of the device.
3. Carefully open the tank and dispose of the dirty water.
4. Rinse the dirty water tank thoroughly with clean water.
5. Allow the tank to air dry completely before reassembling.

5.2 Cleaning the Fresh Water Tank and Brush

- Rinse the fresh water tank with clean water after each use, especially if cleaning solution was used.
- Clean the integrated brush with a damp cloth or rinse under running water to remove any debris or residue.
- Wipe the exterior of the device with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.3 Storage

Store the CLEANmaxx cleaner in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure both water tanks are empty and dry before storage.

6. TROUBLESHOOTING

If you encounter issues with your CLEANmaxx cleaner, refer to the following table:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is not charged.	Charge the battery fully.
No spray from nozzle.	Fresh water tank is empty or not properly installed. Nozzle is clogged.	Refill fresh water tank and ensure it's correctly seated. Clean the spray nozzle.
Weak suction.	Dirty water tank is full. Suction nozzle is clogged.	Empty the dirty water tank. Clean the suction nozzle and ensure no blockages.
Short operating time.	Battery not fully charged or battery degradation.	Ensure battery is fully charged before use. If issue persists, battery may need replacement (contact support).

7. SPECIFICATIONS



Image: A side view of the CLEANmaxx cleaner with dimensions indicated: approximately 34 cm in length and 23 cm in height.

Feature	Detail
Brand	CLEANmaxx
Model Name	Polster- & Teppichreiniger kabellos 3in1
Model Number	Kabellos
Color	Anthracite/Green
Dimensions (approx.)	40 x 25 x 17 cm (Package)
Weight (approx.)	2.1 kg
Fresh Water Tank Capacity	500 ml
Dirty Water Tank Capacity	600 ml
Power Source	Battery
Battery Type	2200 mAh Li-ion
Max. Continuous Use	Up to 15 minutes
Manufacturer	ds Produkte GmbH
First Available Date	May 11, 2022

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact the retailer. If you require technical support or have questions not covered in this manual, please contact the manufacturer or your point of purchase.

Manufacturer: ds Produkte GmbH