



[Manuals.plus](#) /

› [TentandTable](#) /

› TentandTable 20' x 20' High Peak Frame Tent Top Instruction Manual

TentandTable BT-FH22WTT

TentandTable 20' x 20' High Peak Frame Tent Top

INSTRUCTION MANUAL

Model: BT-FH22WTT

PRODUCT OVERVIEW

This manual provides essential information for the proper setup, use, and maintenance of your TentandTable 20' x 20' Replacement Tent Top. This product is designed for use with TentandTable commercial grade High Peak Frame Tents. Please note that this listing is for the tent top only; the frame is not included.

The tent top is constructed from heavy-duty 16 oz block-out PVC vinyl, ensuring durability and longevity. It features 1-inch heat-sealed overlapping seams for maximum strength. The material is 100% waterproof, resistant to tears, flame, and has been coated for resistance to UV light, making it a reliable choice for various outdoor events.



Image 1: Front view of the TentandTable 20' x 20' High Peak Frame Tent Top.



Image 2: Angled view of the TentandTable 20' x 20' High Peak Frame Tent Top.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before installing or using the tent top. Failure to

follow these instructions may result in property damage or injury.

- Always follow the included instructions and care manual for proper setup, use, and maintenance of your tent and tent top.
- Remove accumulated water or snow from the tent top immediately to prevent damage or collapse.
- Do not use the tent top in temperatures below 40 degrees Fahrenheit (4 degrees Celsius), as this can lead to wind whip or wind crack damage to the vinyl.
- This product may expose you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

SETUP INSTRUCTIONS

This tent top is designed as a replacement for existing TentandTable High Peak Frame Tents. Ensure your frame is properly assembled and secured according to its own instruction manual before attempting to install the tent top.

1. **Prepare the Frame:** Ensure your High Peak Frame Tent structure is fully assembled, stable, and securely anchored to the ground. All poles and fittings should be correctly connected.
2. **Unpack the Tent Top:** Carefully remove the tent top from its storage bag. Lay it out on a clean, flat surface near the tent frame, avoiding sharp objects that could puncture the vinyl.
3. **Identify Top and Bottom:** Orient the tent top correctly. The peak of the tent top should align with the center mast of your High Peak Frame.
4. **Lift and Position:** With adequate personnel, carefully lift the tent top onto the frame. Ensure the corners and edges align with the frame's perimeter.
5. **Secure the Tent Top:** Attach the tent top to the frame using the integrated straps, ropes, or fasteners provided with your frame tent. Ensure all connection points are taut and secure to prevent flapping in the wind.
6. **Check for Tightness:** Once secured, inspect the tent top for any loose areas or sagging. Adjust tension as needed to ensure a smooth, tight fit across the entire frame.

For detailed frame assembly instructions, please refer to the manual provided with your TentandTable High Peak Frame Tent.

OPERATING GUIDELINES

Once installed, your TentandTable High Peak Frame Tent Top provides excellent protection from the elements. To ensure optimal performance and longevity, consider the following:

- **Weather Conditions:** While the tent top is waterproof and UV resistant, it is not designed for extreme weather conditions such as heavy snow loads, strong winds, or severe thunderstorms. Always monitor weather forecasts and dismantle the tent if adverse conditions are expected.
- **Ventilation:** Ensure adequate ventilation under the tent, especially in warm weather, to prevent heat buildup.
- **Fire Safety:** Keep all heat sources, open flames, and flammable materials away from the tent top. The material is flame resistant but not fireproof.

MAINTENANCE AND CARE

Proper maintenance will extend the life of your tent top and keep it looking its best.

- **Cleaning:** Clean the vinyl tent top regularly with mild soap and water. Use a soft brush or cloth to gently scrub away dirt and grime. Rinse thoroughly with clean water. Do not use harsh chemicals, abrasive cleaners, or pressure washers, as these can damage the vinyl coating.
- **Drying:** Ensure the tent top is completely dry before folding and storing. Storing a damp tent top can lead to mildew and degradation of the material.
- **Snow and Water Removal:** Immediately remove any accumulated water or snow from the tent top to prevent pooling and potential damage to the fabric or frame.
- **Storage:** When not in use, fold the tent top neatly and store it in its original storage bag. Keep it in a cool, dry place away from direct sunlight, extreme temperatures, and pests.
- **Inspections:** Periodically inspect the tent top for any signs of wear, tears, or damage to the seams. Address minor issues promptly to prevent them from worsening.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

| Problem | Possible Cause | Solution |
|------------------------------------|---|---|
| Water pooling on tent top | Insufficient tension; improper frame setup; heavy rain/snow. | Adjust frame tension; ensure frame is level; immediately remove accumulated water/snow. |
| Vinyl cracking or becoming brittle | Usage in temperatures below 40°F; prolonged exposure to extreme cold. | Avoid using the tent top in temperatures below 40°F. Store properly in cold weather. |
| Tears or holes in vinyl | Contact with sharp objects; excessive tension; wind damage. | Inspect surrounding area before setup; ensure proper tension; repair small tears with vinyl repair kit. |
| Mildew or mold growth | Storing while damp; high humidity. | Ensure tent top is completely dry before storage. Clean with mild bleach solution if mildew occurs. |

SPECIFICATIONS

| Feature | Detail |
|--------------------|---------------------------|
| Model Number | BT-FH22WTT |
| Dimensions (L x W) | 240"L x 240"W (20' x 20') |

| Feature | Detail |
|------------------------|----------------------------|
| Material | 16 oz Block-Out PVC Vinyl |
| Color | White |
| Item Weight | 88 Pounds |
| Water Resistance Level | Waterproof |
| UV Light Protection | Yes |
| Flame Resistance | Yes |
| Seams | 1-inch Heat Sealed Overlap |
| UPC | 754972358439 |
| Country of Origin | China |

WARRANTY INFORMATION

TentandTable vinyl canopy tents, vinyl tops, and vinyl sidewalls come with a **1-Year Warranty** against manufacturer's defects from the date of purchase.

Please note that this warranty **does not cover**:

- Improper installation or misuse of the product.
- Damage caused by wind whip or wind crack from the usage of the tent top in temperatures below 40 degrees Fahrenheit (4 degrees Celsius).
- Damage due to acts of nature, accidents, or normal wear and tear.

For warranty claims, please retain your proof of purchase and contact customer support.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your TentandTable product, please contact our customer support team.

- **Brand:** TentandTable
- **Online Store:** Visit the [TentandTable Store on Amazon](#) for more products and information.

