

[Manuals.plus](#) /

> [onerbl](#) /

> onerbl AC/DC Adapter for Crosley CR8005A Turntable Instruction Manual

onerbl AC/DC Adapter for Crosley CR8005A

onerbl AC/DC Adapter for Crosley CR8005A Turntables

Instruction Manual

INTRODUCTION

Thank you for choosing the onerbl AC/DC Adapter. This adapter is specifically designed to provide reliable power to your Crosley CR8005A, CR8005A-BK, CR8005A-BL, CR8005A-GR, CR8005A-OR, CR8005A-PI, and CR Cruiser Deluxe Portable 3-Speed Turntables. Please read this manual carefully before use to ensure proper operation and safety.

IMPORTANT SAFETY INFORMATION

- Ensure the adapter is compatible with your device's power requirements before connecting.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or repair the adapter. Refer servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

PRODUCT FEATURES

- High-quality replacement AC wall power charger adapter.
- Wide input voltage range: AC 100-240V 50/60Hz (Worldwide compatible).
- Built-in safety protections: Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, Over-Current Protection.
- Durable design with copper wire and PVC jacket.
- Portable and travel-friendly design.

SMART CHIP



Guard Your Electricity Safety



short-circuit
protection



over-voltage
protection




over-current
protection



Multiple Protection

This graphic highlights the built-in safety features of the adapter, including short-circuit protection, over-voltage protection, and over-current protection.

QUALITY CONTROL

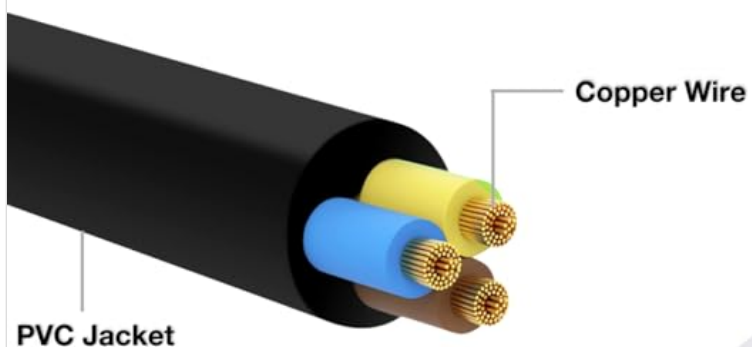

DURABLE DESIGN


This image shows the internal structure of the adapter's cable, featuring copper wire conductors and a durable PVC jacket for enhanced longevity.

SETUP AND CONNECTION

1. **Verify Compatibility:** Ensure your Crosley turntable model (CR8005A series) requires a 5V DC power input.
2. **Connect to Turntable:** Insert the DC output plug of the onerbl adapter into the power input jack on your Crosley turntable.
3. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard wall power outlet (AC 100-240V).
4. **Power On:** Once connected, your turntable should be ready to power on according to its own operating instructions.



This image displays the front and side profiles of the onerbl AC/DC adapter, showing its compact design and two-prong plug.

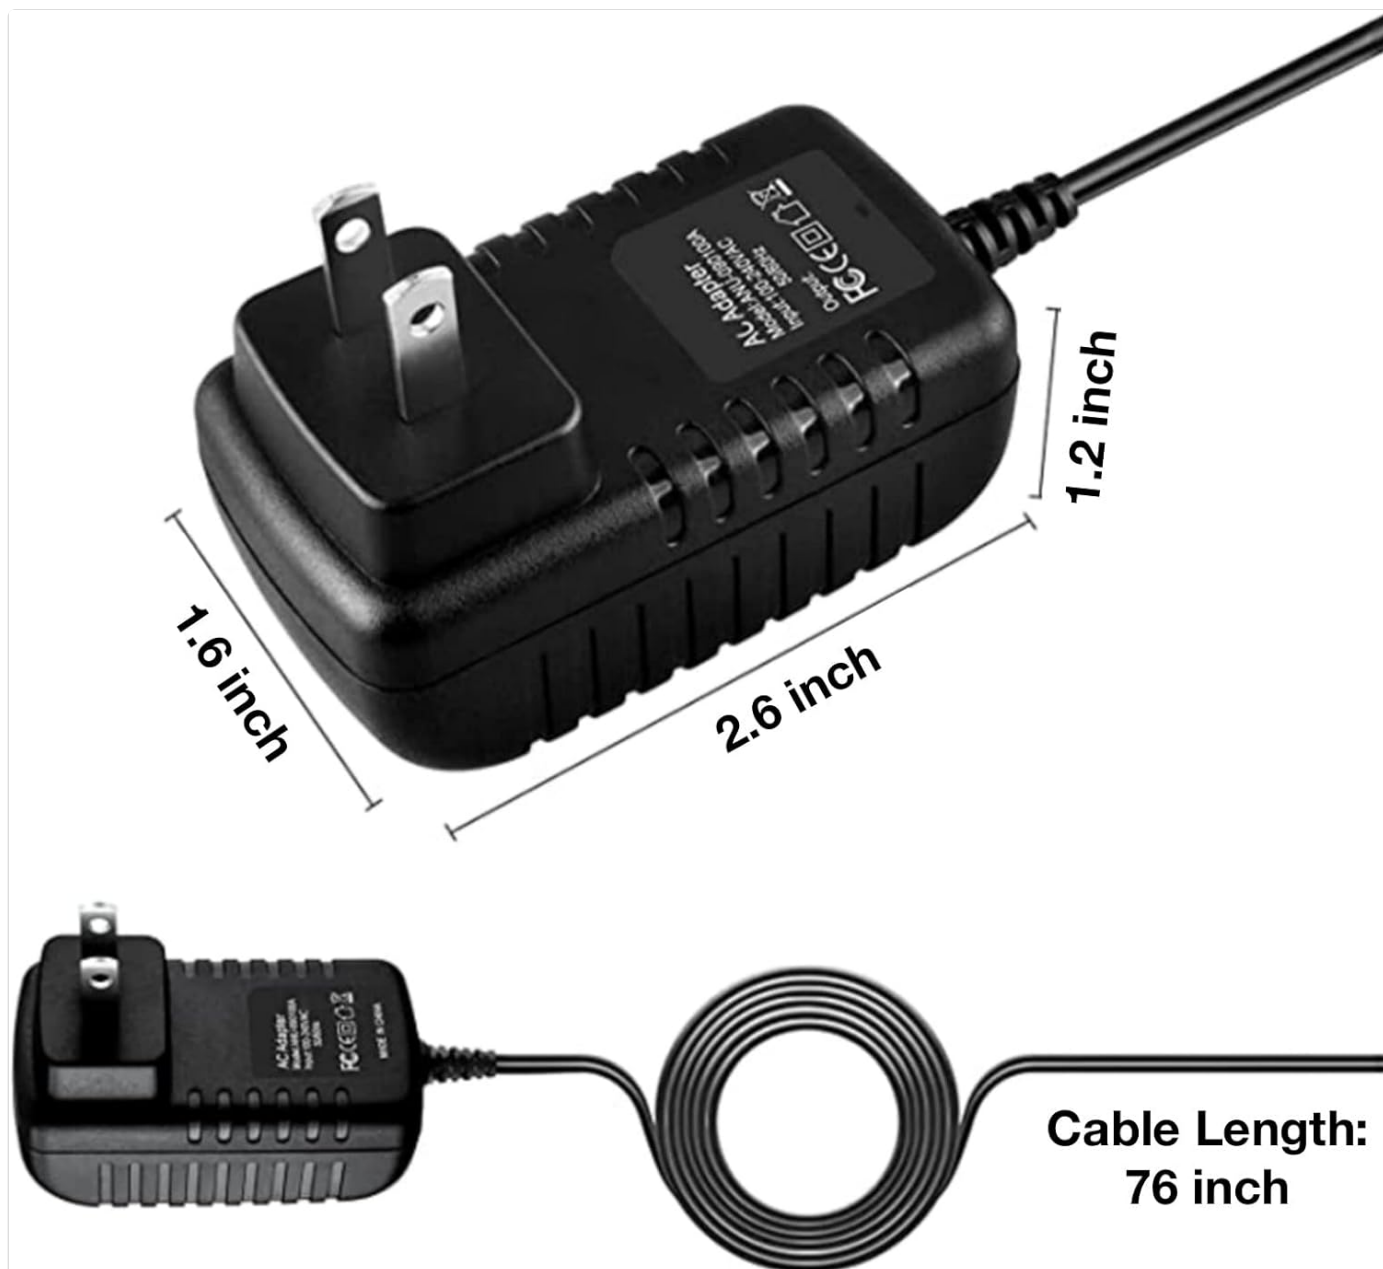

This image illustrates the physical dimensions of the adapter (1.6 inches width, 2.6 inches length, 1.2 inches height) and its cable length (76 inches).



This image demonstrates the practical length of the adapter's 6.6-foot (approximately 79 inches) power cord, allowing for flexible placement.

OPERATION

The onerbl AC/DC Adapter functions as a direct power source for your compatible Crosley turntable. Once properly connected to both the turntable and a power outlet, the adapter continuously supplies the necessary power. There are no additional controls on the adapter itself. Refer to your turntable's manual for specific power-on and operation procedures.

CARE AND MAINTENANCE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and excessive heat when not in use. Avoid tightly coiling the cable to prevent damage.

- **Inspection:** Periodically inspect the adapter and cable for any signs of damage, such as frayed wires or cracked casing. Discontinue use if damage is observed.

TROUBLESHOOTING

Turntable Not Powering On:

- **Check Connections:** Ensure the adapter is securely plugged into both the wall outlet and the turntable.
- **Verify Power Outlet:** Test the wall outlet with another device to confirm it is supplying power.
- **Adapter Condition:** Inspect the adapter and cable for any visible damage. If damaged, discontinue use.
- **Turntable Issue:** If the adapter appears functional, the issue might be with the turntable itself. Refer to your turntable's manual.

SPECIFICATIONS

Brand	onerbl
Input Voltage	AC 100-240V, 50/60Hz
Wattage	5 watts
Cable Length	6.5 feet (approximately 79 inches / 2 meters)
Main Power Connector Type	2 Pin (US Standard)
Item Weight	8 Ounces
Mounting Type	Wall Mount
Special Features	Portable, Travel, Over Voltage Protection, Over Heat Protection
Manufacturer	Shenzhen Waweis Technology Co., Ltd

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your purchase receipt as proof of purchase.

© 2026 onerbl. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question