

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOMELON](#) /

› [VOMELON Rechargeable Milk Frother User Manual](#)

VOMELON B0B1537RFR

VOMELON Rechargeable Milk Frother User Manual

Model: B0B1537RFR

PRODUCT OVERVIEW

The VOMELON Handheld Milk Frother is designed to create smooth, creamy froth for various beverages, including coffee, lattes, cappuccinos, and hot chocolate. Its versatile design also allows for mixing egg whites, smoothies, and milkshakes. This portable device is powered by a rechargeable battery, offering convenience for both home and travel use.



Image: The VOMELON Milk Frother in Rube Red, displayed with its two whisk heads, USB charging cable, storage tube, and various frothed beverages like latte and matcha.

KEY FEATURES

- **Powerful Motor:** Equipped with a highly efficient motor, spinning food-grade 304 stainless steel whisks at 20,000 RPM for quick frothing.
- **Versatile Use:** Ideal for frothing milk for coffee, bulletproof coffee, Keto drinks, lattes, and cappuccinos. Also suitable for mixing flavored milks, soups, mixed drinks, sauces, and as an egg whisk.
- **Portable Design:** Battery-operated and comes with a convenient storage tube, making it suitable for travel, office, camping, and road trips.
- **Superior Quality:** Constructed with durable food-grade 304 stainless steel whisks and an ergonomically designed handle made of rust-resistant ABS plastic with a frosted surface for a secure grip.
- **Easy to Clean:** Detachable whisk heads are easy to clean under warm water with soap or in a dishwasher. The frother can stand upright on a countertop for easy storage.

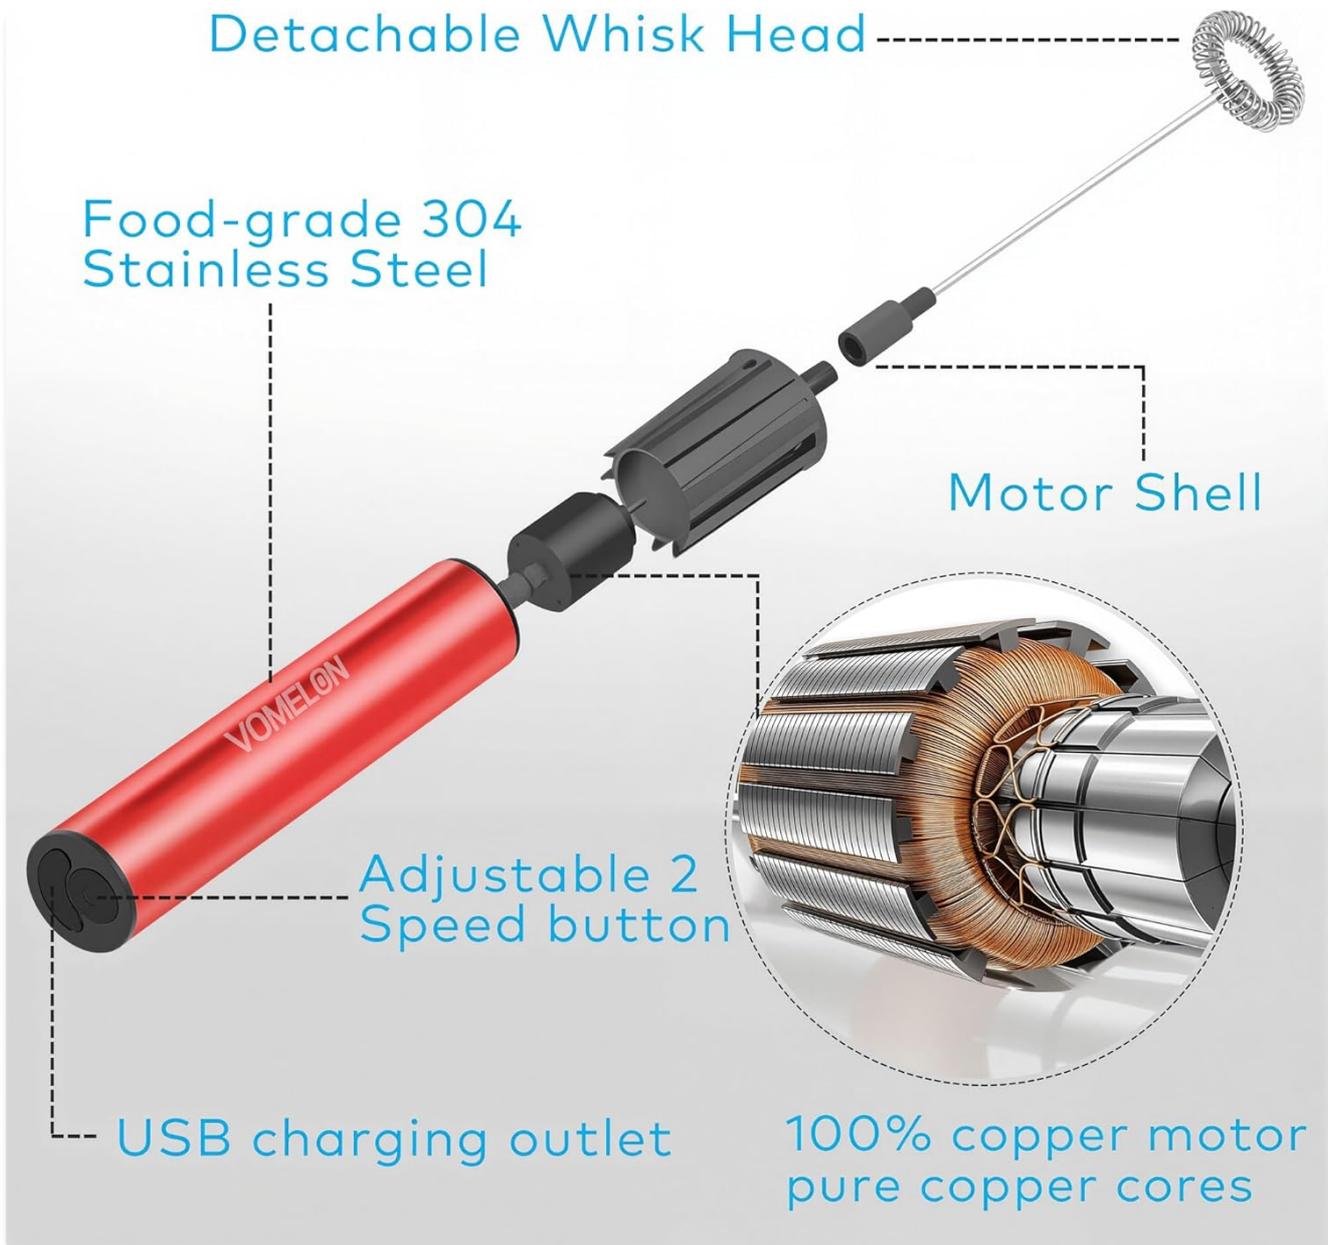


Image: An exploded diagram illustrating the components of the VOMELON Milk Frother, including the detachable whisk head, food-grade 304 stainless steel parts, motor shell, adjustable 2-speed button, USB charging outlet, and 100% copper motor cores.

PACKAGE CONTENTS

Before first use, please ensure all items listed below are present in the package:

- 2 x Whisks
- 1 x Warranty Card
- 3 x AAA Batteries
- 1 x Milk Frother Unit
- 1 x Stainless Steel Storage Tube
- 1 x User Manual (This document)



Package includes :

- 2 x whisk
- 1 x warranty card
- 1 x user manual
- 1 x milk frother
- 1 x USB cable
- 1 x stainless steel storage tube

Image: A visual representation of the package contents, including the frother unit, two whisk heads, a USB cable, a warranty card, and the user manual.

SETUP AND CHARGING

- Battery Installation:** If your model uses AAA batteries, insert 3 AAA batteries into the battery compartment following the polarity indicators.
- Charging (Rechargeable Model):** Connect the USB charging cable to the frother's USB charging outlet (located at the bottom of the handle). Plug the other end into a compatible USB power source (e.g., computer, wall adapter, power bank). The indicator light will show charging status.
- Attach Whisk Head:** Select the desired whisk head (e.g., single coil for frothing, double coil for thicker mixes) and firmly attach it to the frother's motor shaft.

BUIL-IN RECHARGEABLE LITHIUM-ION BATTERY

No need to replace AAA batteries now



Image: Illustrations demonstrating how to charge the VOMELON Milk Frother using a USB-C cable connected to a laptop, a wall adapter, or a power strip.

OPERATING INSTRUCTIONS

1. **Prepare Liquid:** Pour the liquid you wish to froth or mix into a cup or container. For best frothing results, use cold milk and fill the container no more than one-third full to allow for expansion.
2. **Immerse Whisk:** Submerge the whisk head into the liquid, ensuring it is fully immersed to prevent splashing.
3. **Activate Frother:** Press the power button located on the top of the frother handle. The frother typically has two speeds. Press once for low speed, press again for high speed, and a third time to turn off.
4. **Froth/Mix:** Move the frother up and down gently in the liquid for 15-30 seconds, or until the desired consistency is achieved. For frothing, keep the whisk just below the surface to incorporate air.
5. **Turn Off:** Once done, turn off the frother before removing the whisk from the liquid to avoid splashing.



Image: The VOMELON Milk Frother being used to froth milk in a pitcher, with smaller images showing its application for mixing eggs, matcha, milk, and hot chocolate.

Work Perfectly for Various Beverage



Image: The VOMELON Milk Frother positioned between several cups of different beverages, including lattes, coffee, and a mixed drink, demonstrating its versatility.

MAINTENANCE AND CLEANING

1. **Detach Whisk:** After each use, carefully detach the whisk head from the frother handle.
2. **Rinse Whisk:** Rinse the whisk head immediately under warm running water. Use a mild dish soap if necessary. The whisk heads are dishwasher safe.
3. **Clean Handle:** Wipe the frother handle with a damp cloth. **Do not submerge the handle in water**, as it contains electronic components.
4. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing. Store the frother and whisk heads in the provided stainless steel storage tube to protect them from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery or no power.	Ensure batteries are correctly installed (if applicable) or fully charge the frother (if rechargeable).
Weak frothing/mixing.	Low battery, whisk not properly attached, or liquid volume too high.	Charge/replace batteries. Re-attach whisk securely. Reduce liquid volume in the container.
Excessive splashing.	Whisk not fully immersed or frother turned on before immersion.	Ensure whisk is fully submerged before activating. Turn off before removing from liquid.

If you encounter issues not listed here, please contact VOMELON customer service for assistance.

SPECIFICATIONS

Brand: VOMELON

Model: B0B1537RFR

Color: Rube Red

Material: 304 Stainless Steel, ABS Plastic

Speed: Up to 20,000 RPM

Power Source: Rechargeable Battery (or 3 AAA Batteries, depending on model/packaging)

Item Weight: 0.19 Kilograms (approx. 6.7 ounces)

Product Dimensions: 8.9 x 4.53 x 1.73 inches (Package Dimensions)

Special Features: Ergonomic Handle, Lightweight, Rechargeable (or Battery Operated)

Care Instructions: Detachable whisk heads are dishwasher safe. Wipe main unit with damp cloth.

WARRANTY AND SUPPORT

VOMELON attaches great importance to customer experience. If you are not 100% satisfied with your product, please feel free to contact our customer service. We are committed to providing the best solution within 24 hours.

Please refer to the included warranty card for specific warranty terms and conditions. For support, visit the official VOMELON website or contact customer service via the details provided on the warranty card.

