

TOBBI 0967-04

TOBBI 12V Kids Electric Dirt Bike Instruction Manual

Model: 0967-04

Brand: TOBBI

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your TOBBI 12V Kids Electric Dirt Bike. Please read all instructions carefully before use to ensure the safety of the rider and the longevity of the product. Retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

2.1 General Safety Rules

- **Adult Supervision:** Always ensure an adult supervises the child during operation of the electric dirt bike.
- **Protective Gear:** The rider must wear appropriate safety gear, including a helmet and knee/elbow pads, at all times.
- **Weight Limit:** Do not exceed the maximum weight capacity of 66 lbs (30 kg).
- **Age Range:** This product is suitable for children aged 3 to 8 years.
- **Operating Environment:** Use the dirt bike on flat, dry surfaces away from traffic, swimming pools, or other hazards. Avoid steep inclines.
- **Foot Placement:** Ensure the child's feet are always on the non-slip footrests during operation.

2.2 Battery Safety

- Only use the charger provided with the product.
- Do not attempt to open or modify the battery.
- Keep the battery away from heat sources and direct sunlight.
- Do not charge the battery for more than 10-12 hours.

3. PRODUCT FEATURES

The TOBBI 12V Kids Electric Dirt Bike is designed for an engaging and safe riding experience. Key features include:

- **Sturdy and Durable Construction:** Crafted from kid-friendly PP material and a robust metal frame, ensuring durability and stability. Includes 2 auxiliary wheels for balance, which can be removed as the child gains confidence.
- **Safe & Smooth Ride:** Equipped with soft start technology for gentle acceleration and shock-absorbing spring suspension for a comfortable ride. The wide curved seat is ergonomically designed for child comfort.
- **Well-Built Wheels:** Features large front and rear wheels with EVA rubber rings, providing non-slip, wear-proof, and strong grip suitable for various surfaces including wooden floors, lawns, rubber runways, and asphalt roads.
- **High Performance:** Powered by a 12V 7AH large-capacity battery, offering 40-60 minutes of playtime on a full charge. Dual 35W motors allow for safe and smooth operation at speeds between 1.5-5 mph, controlled by a switch and one-click start button on the right handlebar.



Figure 1: Product dimensions and a child riding the TOBBI Kids Electric Dirt Bike.

Safe & Smooth Ride



Figure 2: Close-up of the shock absorbers and wear-resistant wheels for a safe and smooth ride.

Your browser does not support the video tag.

Video 1: An overview of the 12V Electric Motorcycle Ride on Toy, showcasing its features and a child riding it.

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your TOBBI Kids Electric Dirt Bike. It is recommended to watch the assembly video for visual guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list (not provided in this manual, refer to product packaging).
2. **Install Front Fork and Wheel:** Attach the front fork assembly to the main body of the motorcycle. Secure the front wheel to the fork using the provided axle and fasteners.
3. **Attach Handlebars:** Connect the handlebars to the steering column, ensuring all wires are properly routed and connections are secure. Tighten the handlebar clamps.
4. **Install Training Wheels:** If desired, attach the training wheels to the rear wheel assembly. These can be removed later as the child's balance improves.
5. **Connect Battery:** Locate the battery compartment (usually under the seat) and connect the battery terminals. Ensure a secure connection.

6. **Final Checks:** Before first use, ensure all screws, bolts, and connections are tight and secure.

Your browser does not support the video tag.

Video 2: Detailed assembly instructions for the TOBBI Ride On Motorcycle.

5. OPERATING INSTRUCTIONS

5.1 Controls Overview



Figure 3: Control panel layout with key functions labeled.

- **Power Button:** Located on the control panel, press to turn the motorcycle ON/OFF.
- **Thumb Throttle:** Located on the right handlebar, press to accelerate. Release to brake.
- **High/Low Speed Buttons:** Located on the control panel, select desired speed mode.
- **Power Indicator:** Displays the current battery level.

5.2 Starting and Stopping

1. Press the **Power Button** to turn on the motorcycle. The power indicator lights will illuminate.
2. To move forward, press the **Thumb Throttle** on the right handlebar. The motorcycle will accelerate smoothly due to the soft start technology.

- To stop, release the **Thumb Throttle**. The motorcycle will automatically brake.

5.3 Speed Selection

Use the **High Speed** and **Low Speed** buttons on the control panel to switch between the two available speed settings (1.5 mph and 5 mph). It is recommended to start with the low speed setting for younger or less experienced riders.

Your browser does not support the video tag.

Video 3: A demonstration of the TOBBI Kids Motorcycle in operation, showing a child riding it.

6. CHARGING THE BATTERY

To charge the battery:

- Ensure the motorcycle is turned OFF.
- Locate the charging port (refer to the assembly video or product diagram for exact location, typically near the battery compartment).
- Insert the charger plug into the charging port.
- Plug the charger into a standard wall outlet.
- The charging indicator on the charger will show the charging status.
- Charge the battery for 8-12 hours for a full charge. Do not overcharge.
- Disconnect the charger once charging is complete.

7. MAINTENANCE

7.1 Cleaning

- Wipe the motorcycle with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.

7.2 Storage

- Store the motorcycle in a dry, cool place away from direct sunlight.
- If storing for an extended period, charge the battery fully every 30 days to prolong its lifespan.

7.3 Battery Care

- Always fully charge the battery before first use.
- Do not allow the battery to completely drain before recharging.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motorcycle does not start.	Battery is low or not connected.	Check battery connection and charge the battery.
Motorcycle moves slowly.	Low battery, heavy load, or operating on uneven terrain.	Charge battery, reduce load, or move to a smoother surface. Ensure high-speed mode is selected if desired.

Problem	Possible Cause	Solution
Motorcycle stops suddenly.	Overload protection activated or loose connection.	Reduce load, check all electrical connections. Allow motor to cool if overheated.
Charging indicator not working.	Charger not properly connected or faulty.	Ensure charger is securely plugged into both the motorcycle and the wall outlet. Try a different outlet.

9. SPECIFICATIONS

Feature	Detail
Brand	TOBBI
Model Number	0967-04
Dimensions (L x W x H)	42" x 20.25" x 26.75"
Item Weight	28 Pounds
Weight Capacity Maximum	66 Pounds
Recommended Age	3-8 Years Old
Battery	12V 7AH
Motors	Dual 35W Motors
Speed	1.5-5 mph (2 speeds)
Material	Iron, Polypropylene
Assembly Required	Yes

10. WARRANTY AND SUPPORT

For any questions regarding product assembly, operation, or troubleshooting, please contact TOBBI customer support. Information regarding specific warranty terms and available protection plans can be found on the product's purchase page or by contacting the seller directly. Please retain your proof of purchase for any warranty claims.