

[Manuals.plus](#) /

> [YAOHUI MI](#) /

> Replacement Remote Control for Mitsubishi Electric AC Air Conditioner Remote Control SG20A E2230N426 MSZ-FS06NA MSZ-FS09NA MSZ-FS12NA MSZ-FS15NA MSZ-FS18NA

YAOHUI MI 42022051209

User Manual for YAOHUI MI Replacement Remote Control

Model: 42022051209

PRODUCT OVERVIEW

This YAOHUI MI replacement remote control is designed for various Mitsubishi Electric AC Air Conditioner units. It provides full functionality for controlling your air conditioner, including temperature adjustment, mode selection, fan speed, and timer settings. The remote features a green backlight for easy operation in low-light conditions and can display temperatures in both Fahrenheit and Celsius.





Figure 1: Front view of the remote control, highlighting the backlit display and primary buttons.

COMPATIBILITY

This remote control is compatible with a wide range of Mitsubishi Electric AC Air Conditioner models. Please verify your unit's model number against the list below to ensure compatibility.

Compatible Models:

- SG20A, E2230N426
- MSZ-FS06NA, MSZ-FS09NA, MSZ-FS12NA, MSZ-FS15NA, MSZ-FS18NA
- T2WEDW426, SG162
- MFZ-KJ09NA-U1, MFZ-KJ12NA-U1, MFZ-KJ15NA-U1, MFZ-KJ18NA-U1

- MFZ-KJ09NA, MFZ-KJ12NA, MFZ-KJ15NA, MFZ-KJ18NA
- SG176, T2WEF0426
- MLZ-KP09NA-U1, MLZ-KP12NA-U1, MLZ-KP18NA-U1
- MLZ-KP09NA, MLZ-KP12NA, MLZ-KP18NA
- NTXUKS09A112AA, NTXUKS12A112AA, NTXUKS18A112AA
- NAXUKS09A112A, NAXUKS12A112A, NAXUKS18A112A

Compatible with following models:

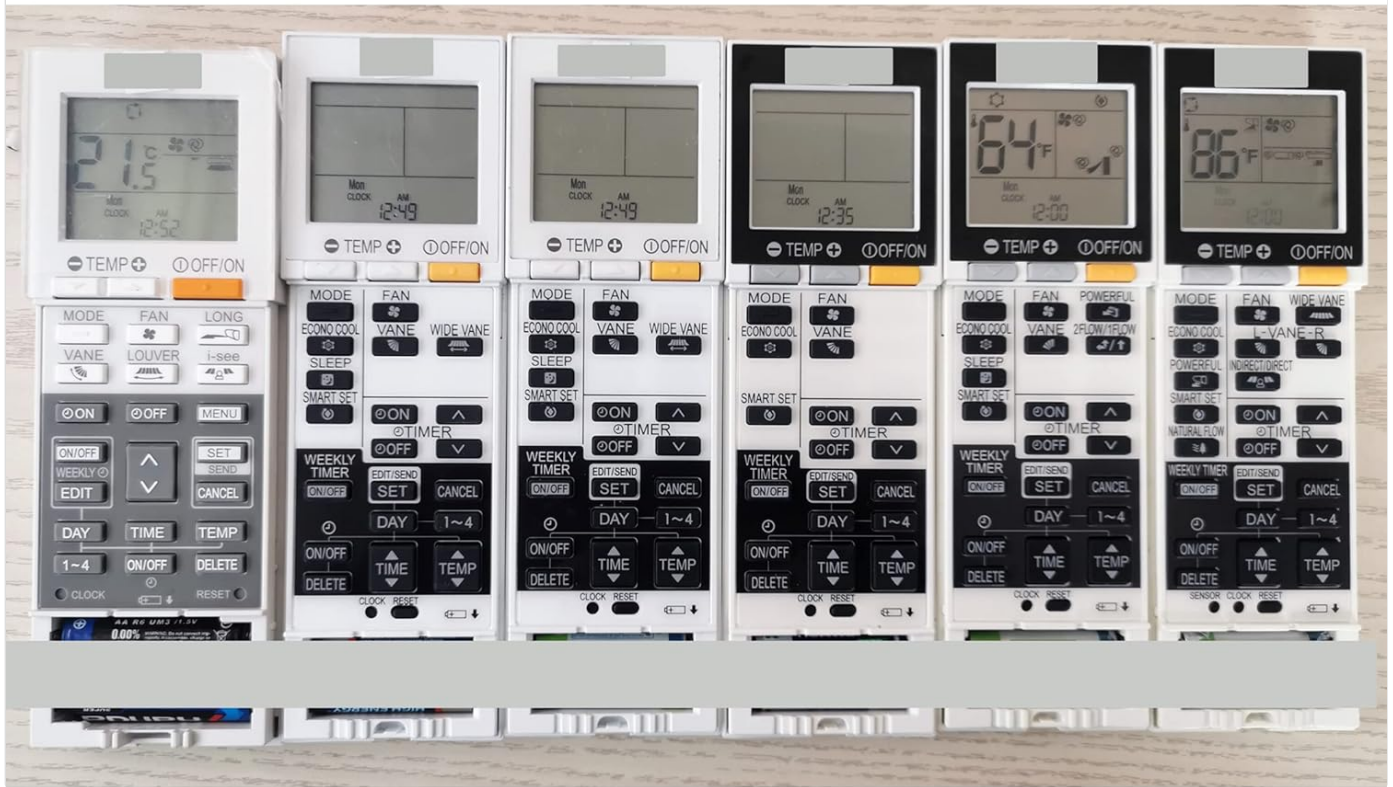


Figure 2: Various compatible remote control models, illustrating the design consistency.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require programming for most compatible Mitsubishi Electric AC units. It functions as a direct replacement.

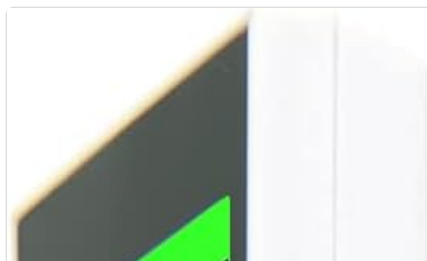






Figure 3: Side view showing the battery compartment ready for battery insertion.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your air conditioner.

Key Functions:

- **OFF/ON Button:** Powers the air conditioner on or off.
- **TEMP + / - Buttons:** Adjust the desired temperature setting. The display supports both Fahrenheit and Celsius.
- **MODE Button:** Cycles through operating modes such as Cool, Heat, Dry, Fan, and Auto.
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **WIDE VANE / L-VANE-R Buttons:** Controls the horizontal airflow direction.
- **ECONO COOL Button:** Activates energy-saving cooling mode.
- **POWERFUL Button:** Initiates rapid cooling or heating for a short period.
- **INDIRECT/DIRECT Button:** Adjusts airflow to be indirect (away from occupants) or direct (towards occupants).
- **SLEEP Button:** Activates sleep mode, which adjusts temperature gradually for comfortable sleep.
- **SMART SET Button:** Recalls preferred settings.
- **NATURAL FLOW Button:** Simulates natural breeze airflow.
- **ON / OFF Timer Buttons:** Sets the timer for automatic power on or off.
- **WEEKLY TIMER (ON/OFF, EDIT/SEND, SET, CANCEL, DAY, TIME, TEMP):** Allows for programming weekly operation schedules.
- **CLOCK / RESET Button:** Sets the current time and can be used to reset settings.
- **Green Backlight:** The display features a green backlight for improved visibility in dark environments. This backlight activates automatically when buttons are pressed.



Figure 4: Remote control with the lower panel open, showing advanced timer and setting controls.

MAINTENANCE

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

Battery Replacement:

Replace batteries when the display becomes dim or the remote's range decreases. Always replace both batteries at the same time with new AAA alkaline batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Limited range or intermittent operation.	Weak batteries; Obstruction between remote and AC unit; Infrared sensor on AC unit is blocked.	Replace batteries. Ensure a clear line of sight to the AC unit. Clear any obstructions from the AC unit's sensor.
Display is dim or blank.	Low battery power.	Replace batteries.
Remote functions but AC unit does not respond.	Remote not compatible with the specific AC unit model; AC unit power issue.	Verify compatibility with your AC unit model. Check if the AC unit is powered on and functioning correctly.

SPECIFICATIONS

- **Model Number:** 42022051209
- **Brand:** YAOHUI MI
- **Compatible Devices:** Mitsubishi Electric AC Air Conditioners (SG20A, E2230N426, MSZ-FS06NA, MSZ-FS09NA, MSZ-FS12NA, MSZ-FS15NA, MSZ-FS18NA, T2WEDW426, SG162, MFZ-KJ series, MLZ-KP series, NTXUKS series, NAXUKS series)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Display:** Green Backlit LCD
- **Temperature Display:** Fahrenheit (°F) and Celsius (°C)
- **Dimensions:** Approximately 9.33 x 3.46 x 1.42 inches (Package Dimensions)
- **Item Weight:** Approximately 4.6 ounces
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1

SUPPORT

For further assistance or inquiries regarding your YAOHUIIMI replacement remote control, please contact the manufacturer or your point of purchase. Ensure you have your product model number (42022051209) available when seeking support.

