

[Manuals.plus](#) /

› [Vango](#) /

› Vango Omega 350 Tent User Manual

Vango Omega 350

Vango Omega 350 Tent User Manual

Model: Omega 350 | Brand: Vango

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Vango Omega 350 tent. The Vango Omega 350 is a spacious and lightweight tunnel tent designed for 3 people, suitable for 4-season use, and features a waterproof construction.

Please read this manual thoroughly before attempting to pitch or use your tent to ensure proper handling and longevity of the product.

INCLUDED COMPONENTS

Your Vango Omega 350 tent package should contain the following items:

- Tent Flysheet and Inner Tent (pre-attached for easy pitching)
- Tent Poles (Vango PowerLite 7001-T6 Alloy Poles)
- Tent Pegs
- Guy Ropes (Orange reflective guylines)
- Tent Bag
- Repair Kit (minor repairs)

SETUP INSTRUCTIONS

Follow these steps to correctly pitch your Vango Omega 350 tent. The tent features a flysheet and inner tent that pitch together for quick and easy setup.

Step 1: Site Selection and Unpacking

Choose a flat, clear area for pitching, free from sharp objects. Unpack the tent from its bag and lay out the flysheet and inner tent flat on the ground.



Image: The Vango Omega 350 tent laid flat on the ground, ready for pole insertion.

Step 2: Assemble and Insert Poles

Assemble the Vango PowerLite 7001-T6 Alloy Poles. These poles are color-coded for intuitive pitching. Slide the assembled poles through the corresponding sleeves on the flysheet. Ensure the poles are fully seated in the pole pockets.

Step 3: Raise and Secure the Tent

Once all poles are inserted, begin to raise the tent. Secure the tent corners with pegs. Work your way around the tent, pegging down all attachment points firmly into the ground. Ensure the tent is taut but not over-stressed.



Image: The Vango Omega 350 tent fully pitched and secured in an outdoor setting.

Step 4: Attach and Tension Guy Ropes

Attach the orange reflective guylines to their designated points on the flysheet. Extend them outwards and peg them down securely. Use the Line-Lok guyline runners to adjust tension, ensuring the tent is stable and resistant to wind. Multiple reflective points on pegging points enhance visibility in low light.



Image: A diagram highlighting key external features such as reflective guylines and clear windows.

The TBS®II Tension Band System ensures the tent performs in adverse conditions, especially in strong, changeable winds. Adjust these internal bands for optimal stability.

OPERATING YOUR TENT

The Vango Omega 350 is designed for user convenience and comfort.

- **Access:** The inner tent features D-shaped inner doors, designed for easy opening with one hand.
- **Ventilation:** Ensure proper airflow to minimize condensation. Utilize any vents or mesh panels provided.
- **Storage:** The tent includes an extra large porch space, which, with an extra pole (not included), offers great space for storage of gear and footwear. Inner pockets are conveniently positioned for organizing essential items.
- **Visibility:** Diamond clear windows maximize light and visibility, providing a bright and airy internal environment.



Image: A diagram highlighting key internal features such as D-shaped doors and inner pockets.

MAINTENANCE AND CARE

Proper care will extend the life of your tent.

- **Cleaning:** Clean your tent with a soft sponge and lukewarm water. Do not use detergents, bleach, or harsh chemicals, as these can damage the fabric's waterproof coating.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew and fabric degradation.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Pole Care:** Inspect poles for damage before and after each use. Clean any dirt from pole sections and ferrules.
- **Groundsheet:** The 70D 6000MM HH Polyester Groundsheet is waterproof, durable, reliable, and easy to clean. Wipe clean as needed.

PACKING AND STORAGE

To pack your tent efficiently:

1. Ensure the tent is clean and completely dry.
2. Remove all poles and pegs. Fold the poles neatly and bundle them.
3. Fold the flysheet and inner tent to match the length of the pole bag.
4. Place the pole bag and peg bag on one end of the folded tent.
5. Roll the tent tightly, expelling as much air as possible.
6. Place the rolled tent into the tent bag.

The packed size of the Vango Omega 350 is approximately 49 x 20cm.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Condensation inside tent	Lack of ventilation, high humidity, body heat.	Increase ventilation by opening vents or doors (if weather permits). Ensure tent is pitched in a well-drained area.
Water leaking through fabric	Damaged waterproof coating, seam failure.	Inspect for tears or worn areas. Apply seam sealer to seams. Use a fabric re-proofer if coating is compromised.
Poles difficult to assemble/disassemble	Dirt in ferrules, bent sections.	Clean pole sections. If bent, attempt to straighten carefully or replace the section.
Tent unstable in wind	Improper pegging, loose guy ropes, incorrect tensioning of TBS®II system.	Re-peg all points firmly. Tension guy ropes using Line-Lok runners. Adjust TBS®II Tension Band System for maximum stability.

PRODUCT SPECIFICATIONS

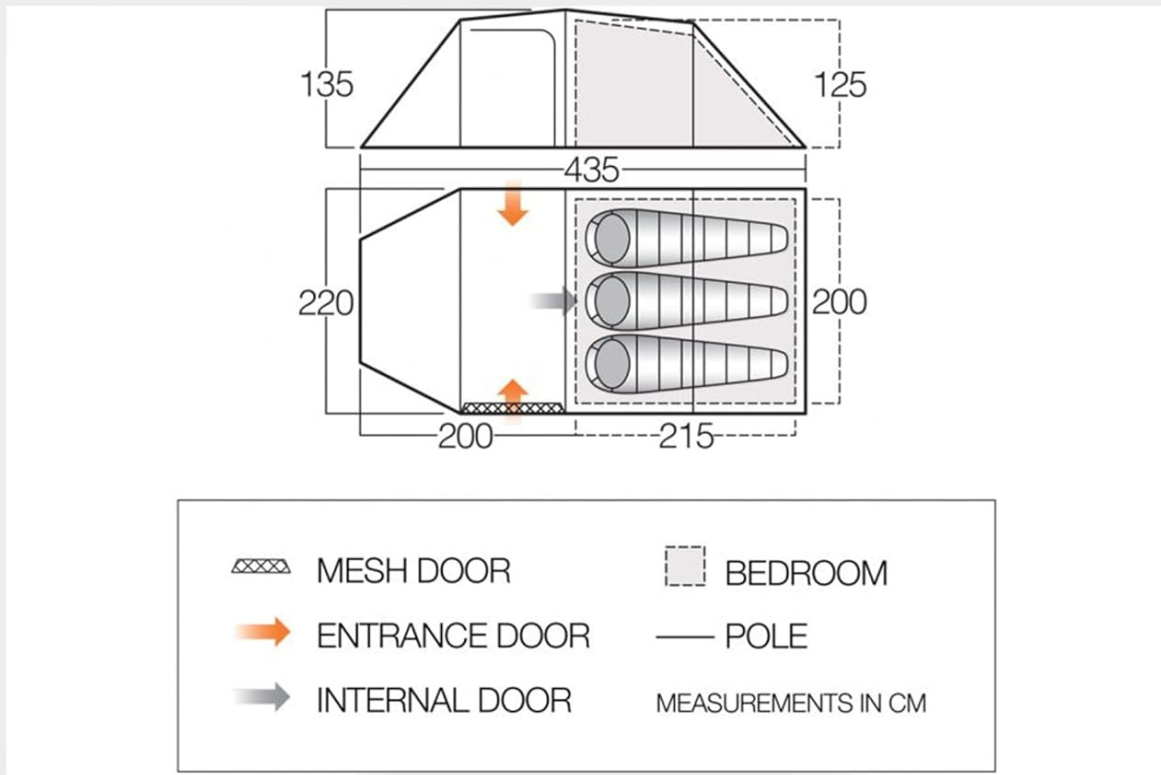


Image: Technical diagram illustrating the dimensions and layout of the Vango Omega 350 tent.

Brand	Vango
Model	Omega 350
Occupancy	3 people
Style	Tunnel Tent
Seasons	4 Season
Main Material	Polyester
Water Resistance Technology	1500 mm (Flysheet), 6000 mm (Groundsheet)
Product Dimensions (L x W x H)	435 x 220 x 135 cm
Item Weight	5 Kilograms

Floor Width	215 Centimeters
Pitch Time	12 minutes
Packed Size	49 x 20 cm
Manufacturer Reference	TESOMEGA0000001

WARRANTY AND SUPPORT

Vango products are manufactured to high standards. For specific warranty details regarding your Vango Omega 350 tent, please refer to the warranty card included with your purchase or visit the official Vango website.

For technical support, spare parts, or warranty claims, please contact Vango customer service directly through their official website or the retailer from whom you purchased the tent. Please have your model number (Omega 350) and manufacturer reference (TESOMEGA0000001) ready when contacting support.

© 2025 Vango. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question