

Usmooth UDRYER-E

Usmooth Professional Evolution Dryer User Manual

Model: UDRYER-E

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the usmooth Professional Evolution Dryer. Keep this manual for future reference.

- **Water Hazard:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. If the appliance falls into water, unplug it immediately. Do not reach into the water.
- **Electrical Safety:** Always unplug the dryer immediately after use and before cleaning. Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- **Ventilation:** Ensure air openings are free of lint, hair, and other debris. Blocked air vents can cause overheating.
- **Heat Warning:** Do not direct hot air towards eyes or other heat-sensitive areas. The dryer is hot when in use. Allow it to cool before storing.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Storage:** Store the appliance in a cool, dry place. Do not wrap the cord around the appliance.

2. PRODUCT OVERVIEW

The usmooth Professional Evolution Dryer is designed for efficient and versatile hair styling. It features Ceramic Infrared Technology and Positive Ion Technology for optimal hair health and styling results. The dryer includes multiple modes and settings, along with interchangeable magnetic attachments.



Figure 2.1: Usmooth Professional Evolution Dryer and its included attachments.

Key Features:

- **Ceramic Infrared Technology:** Dries hair from the inside out, reducing damage to the cuticle.
- **Positive Ion Technology:** Helps to smooth hair and reduce frizz.
- **Travel Friendly Design:** Features a folding handle for easy transport and storage.
- **Multiple Modes & Settings:** 4 distinct modes and 8 settings for customized drying.
- **Magnetic Attachments:** Includes a Wide Concentrator Nozzle, Narrow Concentrator Nozzle, and Diffuser Attachment.
- **Cool Shot Button:** Locks in your style with a burst of cool air.

Included Magnetic Attachments:

Includes 3 Magnetic Attachments:

- **Wide Concentrator Nozzle**

- Adds volume to the direct root of hair.

- **Narrow Concentrator Nozzle**

- More targeted drying, that makes blowouts possible

- **Diffuser Attachment**

- Makes for a quick and frizz-free drying experience, as curl shape is left intact during the drying process



Figure 2.2: The three magnetic attachments included with your dryer.

- **Wide Concentrator Nozzle:** Adds volume by directing airflow to the root of the hair.
- **Narrow Concentrator Nozzle:** Provides more targeted drying, ideal for precise styling and blowouts.
- **Diffuser Attachment:** Makes for a quick and frizz-free drying experience, helping to maintain natural curl shape.

3. SETUP

1. **Unpacking:** Carefully remove the dryer and all accessories from the packaging. Inspect for any signs of damage.
2. **Handle Adjustment:** The dryer features a folding handle for compact storage. To unfold for use, gently pull the handle away from the main body until it clicks securely into place. To fold for storage, locate the "OPEN" / "CLOSE" indicator on the handle and twist the handle in the direction of "CLOSE" until it folds.



Figure 3.1: The dryer's handle can be folded for travel and storage.

- 3. Attaching Accessories:** Select the desired magnetic attachment (Wide Concentrator, Narrow Concentrator, or Diffuser). Align the attachment with the front nozzle of the dryer and it will snap into place magnetically. Ensure it is securely attached before use.



Figure 3.2: Attaching a concentrator nozzle to the dryer.

4. **Power Connection:** Plug the 8-foot power cord into a standard electrical outlet. Ensure the voltage matches your local power supply.

4. OPERATING INSTRUCTIONS

The usmooth Professional Evolution Dryer offers intuitive controls for various styling needs.

Powering On/Off:

- Locate the ON/OFF switch on the handle. Slide the switch to the "ON" position to power on the dryer. Slide to "OFF" to power off.

Modes and Settings:

The dryer features 4 distinct modes, each with multiple settings for precise control over airflow and temperature. The mode buttons are located on the top of the dryer body.



Figure 4.1: Control panel with mode buttons (HIGH, VOLUME, SMOOTH, DUO) and indicator lights.

- **HIGH Mode:** Provides high speed and high temperature for quick drying.
- **VOLUME Mode:** Offers medium speed with either medium or high temperature, ideal for adding volume.
- **SMOOTH Mode:** Utilizes low speed with low or medium temperature for smoothing and reducing frizz.
- **DUO Mode:** Combines different speeds and temperatures for specific hair types, including fine/fragile and healthy hair with resistant texture.

Refer to the "Evolution Dryer Settings Chart" below for detailed recommendations based on hair type.

Evolution Dryer Settings Chart

HIGH	SETTING 1 High Speed/High Temp	Medium - Coarse Hair
VOLUME	SETTING 1 Medium Speed/Medium Temp	Medium Hair
	SETTING 2 Medium Speed/High Temp	Medium - Coarse Hair
SMOOTH	SETTING 1 Low Speed/Low Temp	Fine, Fragile, and Chemically-Treated Hair
	SETTING 2 Low Speed/Medium Temp	Medium - Coarse Hair
DUO	SETTING 1 Low Speed/Low Temp	Fine/Fragile Hair
	SETTING 2 Medium Speed/Medium Temp	Healthy Fine Hair with Resistant Texture
	SETTING 3 High Speed/High Temp	Healthy Medium Hair with Resistant Texture

*High heat setting should be avoided if the hair has previous heat and/or chemical damage.

*Resistant/Coarse hair may need High setting 1 to effectively smooth/straighten hair.

Figure 4.2: Evolution Dryer Settings Chart for optimal use.

Note: High heat setting should be avoided if the hair has previous heat and/or chemical damage. Resistant/Coarse hair may need High setting 1 to effectively smooth/straighten hair.

Cool Shot Button:

- Press and hold the Cool Shot button (located on the handle) to instantly switch to cool air. This helps to set your style and add shine. Release the button to return to the previously selected heat setting.

Official Product Video:

Your browser does not support the video tag.

Video 4.1: An official product video demonstrating the usmooth Professional Evolution Dryer's features and usage. This video highlights the dryer's design, modes, and attachments.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your usmooth Professional Evolution Dryer.

- **Cleaning the Air Filter:** Regularly check and clean the rear air filter to prevent lint and dust buildup, which can restrict airflow and cause overheating.
 - a. Ensure the dryer is unplugged and completely cool.
 - b. Gently twist or pull off the rear filter cover (refer to product diagram if available).
 - c. Use a soft brush or a dry cloth to remove any accumulated lint or dust. Do not use water.
 - d. Replace the filter cover securely.
- **General Cleaning:** Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the dryer in a cool, dry place. The folding handle allows for compact storage. Do not wrap the power cord tightly around the dryer, as this can damage the cord.

6. TROUBLESHOOTING

If you encounter issues with your usmooth Professional Evolution Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	No power supply; ON/OFF switch is off; internal circuit breaker tripped.	Check if the plug is securely in the outlet. Ensure the ON/OFF switch is in the "ON" position. Unplug the dryer, wait a few minutes, and plug it back in to reset. If the issue persists, contact customer support.
Low airflow or weak drying.	Blocked air intake filter; motor obstruction.	Unplug the dryer and clean the rear air filter as described in the Maintenance section. Ensure nothing is blocking the air intake or outlet.
Dryer overheats and shuts off.	Blocked air filter; prolonged use; internal thermal protection activated.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Clean the air filter. Reduce usage time if it consistently overheats.
Attachments do not stay on.	Improper attachment; debris on magnetic surface.	Ensure the attachment is correctly aligned with the nozzle. Clean the magnetic surfaces on both the dryer and the attachment to ensure a strong connection.

If the problem persists after attempting these solutions, please contact Usmooth customer support.

7. SPECIFICATIONS

Brand: Usmooth

Model Number: UDRYER-E

ASIN: B0B17FDJKZ

UPC/GTIN: 850036531005

Product Dimensions: 8.5 x 8 x 1.75 inches

Weight: 3.25 Pounds

Color: Black

Material: Ceramic

Power Source: Corded Electric

Special Feature: Ionic Technology

Manufacturer: Smooth Ink LLC DBA Usmooth

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support for your usmooth Professional Evolution Dryer, please contact Usmooth directly.

You can typically find contact information on the manufacturer's official website or through the retailer where the product was purchased.

For general inquiries or to explore other Usmooth products, visit the official Usmooth store on Amazon: [Usmooth Amazon Store](#).