

Ankbit E500Pro

Ankbit E500Pro Hybrid Active Noise Cancelling Headphones Instruction Manual


Model: E500Pro

1. PRODUCT OVERVIEW


The Ankbit E500Pro headphones feature Hybrid Active Noise Cancellation (ANC) technology, designed to reduce up to 95% of mid- and low-frequency ambient sound. They offer superior Hi-Fi stereo sound with deep bass, powered by dual 40mm dynamic drivers. With up to 60 hours of playtime (ANC off) and 40 hours (ANC on), these headphones are built for extended use. They include 5 ANC microphones with advanced ENC and Sound call noise reduction for crystal-clear calls, and support Bluetooth 5.0 for stable dual connections. The lightweight design, adjustable headband, ultra-soft protein leather earcups, and foldable structure ensure comfort and portability.

2. WHAT'S IN THE BOX


- 1x Ankbit E500Pro Active Noise Cancelling Headphones
- 1x Type-C Charging Cable
- 1x USB C to 3.5mm Audio Cable
- 1x Carrying Bag

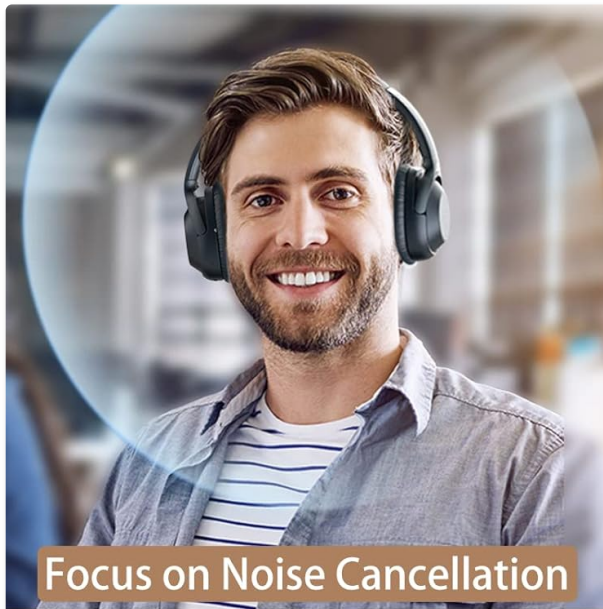


Focus on Noise Cancellation

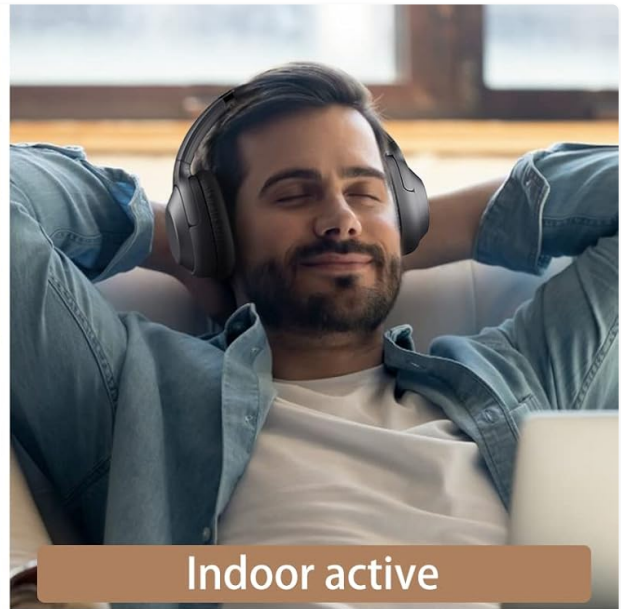

Indoor active

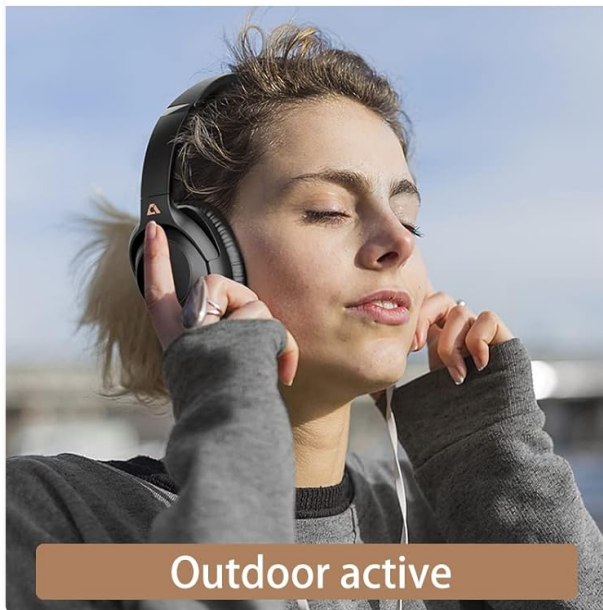

Outdoor active

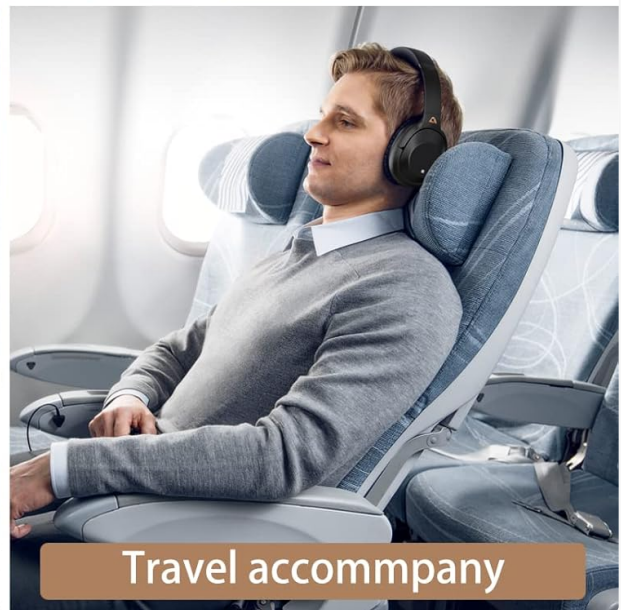 

Travel accompnny

Image: The Ankbit E500Pro package contents laid out, showing the headphones, USB-C charging cable, 3.5mm audio cable, and a soft carrying bag.

Your browser does not support the video tag.

Video: An unboxing demonstration of the Ankbit E500Pro headphones, showcasing all included accessories and the product itself.

3. PRODUCT LAYOUT AND CONTROLS

The Ankbit E500Pro headphones feature intuitive controls located on the right earcup for easy access to power, volume, track control, and ANC modes.



Immersed sound quality

Qualcomm® aptX™ Low Latency Qualcomm® aptX™ HD

Up to 90 hours of battery life

Bluetooth 5.0 NFC fast pairing

The image shows a detailed view of the right earcup of the Ankbit E500Pro headphones. The earcup is black with a textured surface. A transparent section reveals the internal drivers and the ANC system, which is highlighted with blue lightning bolts. A battery icon with a green level indicator is shown next to the text 'Up to 90 hours of battery life'. The Bluetooth 5.0 and NFC fast pairing logos are also present.

Image: A detailed view of the right earcup of the Ankbit E500Pro headphones, highlighting the power/pairing button, volume up/next track, volume down/previous track, ANC switch, and Type-C charging port.

- **Power/Pairing Button:** Short press for pause/play, double tap for voice assistant, long press for power on/off or Bluetooth pairing.
- **Volume + / Next Track:** Short press for volume up, long press for next song.
- **Volume - / Previous Track:** Short press for volume down, long press for previous song.
- **ANC Switch:** Toggles between ANC On, Transparency Mode, and ANC Off.
- **Type-C Charging Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection (located on the left earcup, not visible in this specific image but part of the design).



Image: A visual diagram illustrating the functions of each button on the Anker E500Pro headphones, including power, volume, track control, and ANC modes.

4. SETUP

4.1 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power/Pairing button until the indicator light flashes red and blue, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), activate Bluetooth and search for "E500Pro" in the list of available devices.
4. Select "E500Pro" to connect. The indicator light will turn solid blue upon successful pairing.

Your browser does not support the video tag.

Video: A demonstration of how to pair the Anker E500Pro headphones with a mobile phone via Bluetooth.

4.2 Dual Device Connection

The E500Pro headphones support simultaneous connection to two Bluetooth devices.

1. Pair the headphones with the first device (e.g., Phone 1) as described in section 4.1.
2. Deactivate Bluetooth on Phone 1. The headphones will re-enter pairing mode.
3. Activate Bluetooth on the second device (e.g., Phone 2) and pair with "E500Pro".
4. Reactivate Bluetooth on Phone 1. The headphones will automatically reconnect to both devices.

Your browser does not support the video tag.

Video: A step-by-step guide on connecting the Anker E500Pro headphones to two devices simultaneously.

4.3 Wired Connection

Use the included USB C to 3.5mm audio cable for a wired connection to devices without Bluetooth or when the battery is depleted.

1. Plug the USB-C end of the audio cable into the headphone's Type-C port.
2. Plug the 3.5mm jack into your audio source (computer, phone, etc.).
3. The headphones will automatically switch to wired mode.

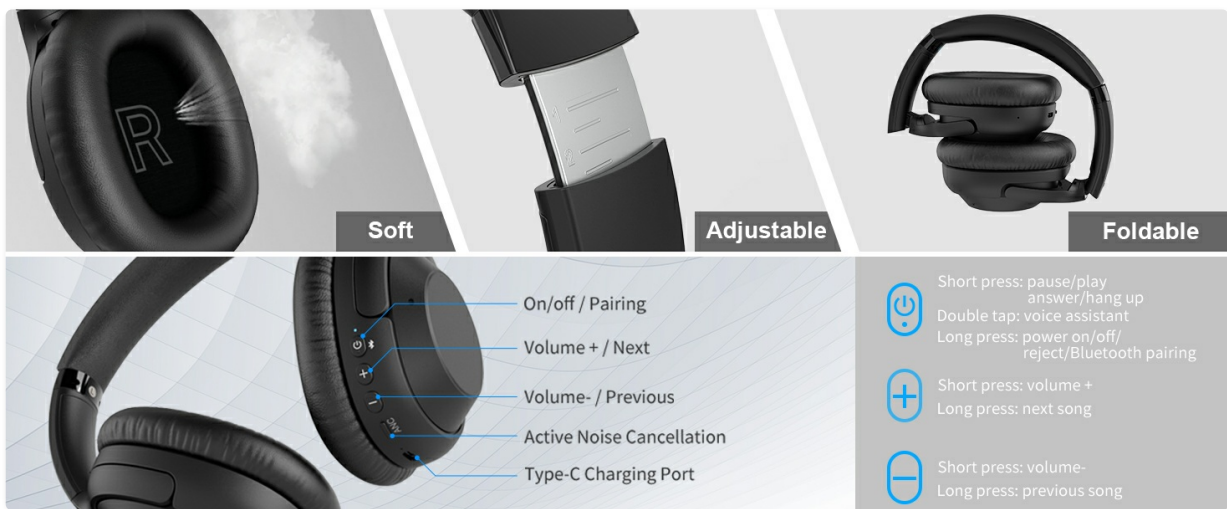 


Image: The Ankbit E500Pro headphones connected to a laptop via the included USB-C to 3.5mm audio cable, demonstrating wired usage.

5. OPERATING INSTRUCTIONS

5.1 Active Noise Cancellation (ANC) & Transparency Mode

The ANC feature reduces external noise, while Transparency Mode allows you to hear your surroundings without removing the headphones.

1. Locate the ANC switch on the right earcup.
2. Slide the switch to activate ANC On, Transparency Mode, or ANC Off.

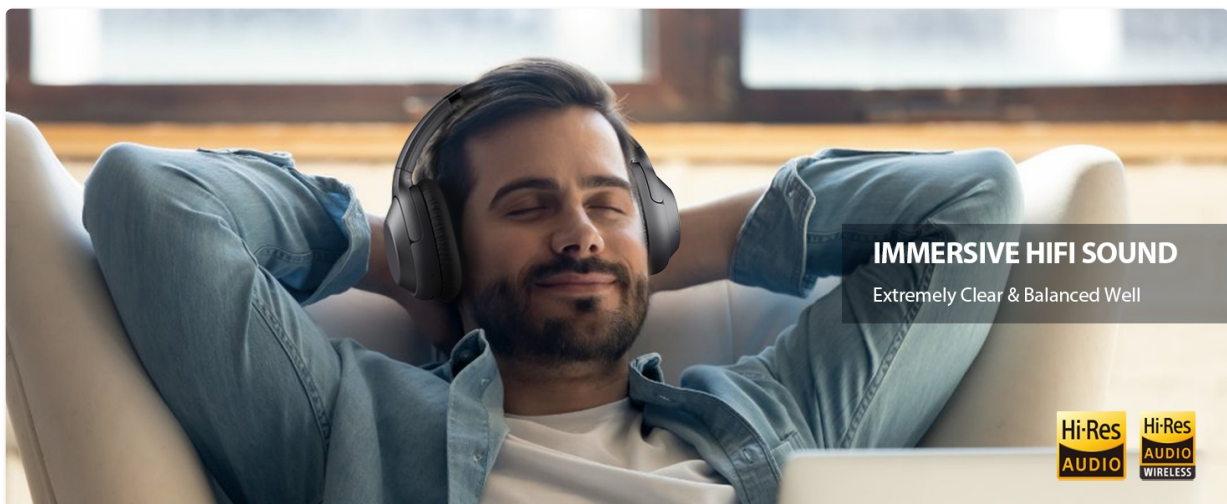


Image: The Ankbit E500Pro headphones illustrating the noise cancellation feature, showing sound waves being reduced around the earcup.

Your browser does not support the video tag.

Video: A short preview demonstrating the Active Noise Cancellation (ANC) and Transparency modes of the Ankbit E500Pro headphones.

5.2 Gaming Mode

Activate Gaming Mode for ultra-low latency during gameplay or video playback.

1. Press the Power/Pairing button three times quickly to switch between Game Mode and Music Mode.

5.3 One-Button Mute

During calls, you can mute the microphone with a quick action.

1. Press the ANC button three times to mute the microphone.
2. Press the ANC button three times again to unmute the microphone.

6. MAINTENANCE

6.1 Charging

Charge your headphones using the provided Type-C charging cable.

- A full charge takes approximately 1.5 hours.
- A 10-minute quick charge provides up to 4 hours of playtime.
- The battery indicator light will show charging status.



Image: The Ankbit E500Pro headphones connected to a charging cable, with a visual representation of the battery life indicating up to 90 hours of playtime.

6.2 Cleaning

Wipe the headphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.

7. TROUBLESHOOTING

7.1 Resetting the Headphones

If you experience connectivity issues or unexpected behavior, you can reset the headphones to factory settings.

1. Ensure the headphones are powered on.
2. Press and hold the Volume "+" and Volume "-" buttons simultaneously for 5 seconds.
3. The indicator light will flash white 3 times, confirming the reset is complete.

Your browser does not support the video tag.

Video: A short video demonstrating the process of resetting the Ankbit E500Pro headphones.

8. SPECIFICATIONS

Feature	Detail
Model Name	E500Pro
Noise Control	Hybrid Active Noise Cancellation
Connectivity Technology	Bluetooth, Wired, Wireless (NFC)
Bluetooth Version	5.0
Bluetooth Range	65 Feet (20m)
Battery Life	Up to 60 Hours (ANC off), 40 Hours (ANC on)
Charging Time	1.5 Hours
Audio Driver Type	Dynamic Driver (40mm)
Microphones	5 ANC Microphones with ENC and Sound Call Noise Reduction
Headphones Jack	3.5 mm Jack (USB-C to 3.5mm cable included)
Ear Placement	Over Ear
Item Weight	9 ounces (0.56 Pounds)
Material	Plastic

9. WARRANTY & SUPPORT

Ankbit products are designed for reliability and performance. For warranty information, please refer to the documentation included in your product packaging or visit the official Ankbit website. If you encounter any issues or require technical assistance, please contact Ankbit customer support through their official channels. Keep your purchase receipt for warranty claims.

For further assistance, please visit the [Ankbit Store on Amazon](#).