

[Manuals.plus](#) /

> [Ufree](#) /

> Ufree Electric Shaver User Manual

Ufree U-1717

Ufree Electric Shaver User Manual

Model: U-1717

PRODUCT OVERVIEW

The Ufree Electric Shaver (Model U-1717) is a portable, IPX7 waterproof electric razor designed for men. It features an adjustable precision dial with 2 guide combs offering 20 length settings (1-20mm) for versatile beard grooming. Equipped with a powerful motor and self-sharpening carbon steel blades, it provides a close and safe shave. The device is cordless, powered by a high-capacity 500mAh battery that charges quickly via USB.



Image: Ufree Electric Shaver, showing the device, its packaging, and included accessories like guide combs.

SETUP AND INITIAL USE

Charging the Device

Before first use, fully charge your Ufree Electric Shaver. Connect the provided USB charging cable to the shaver and a compatible USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate. A full charge

takes approximately 2 hours and provides up to 80 minutes of cordless operation.



Image: The Ufree shaver connected to its USB charging cable, with the green indicator light showing it is charging.

Attaching and Removing Guide Combs

The shaver comes with two guide combs for different length settings. To attach a comb, align it with the shaver head and slide it into the groove until it clicks securely into place. To remove, gently push the cutting head in the direction of the arrow and slide the comb off.

0.5-20MM

ADJUSTABLE PRECISION LENGTH

1 Install Comb

3 Lock Comb

2 Adjust Dial



Image: Step-by-step visual guide for installing the comb, adjusting the dial, and locking the comb for precise length settings.



Image: Visual instructions on removing the cutting head, installing the comb attachment, and locking the limit guide comb.

OPERATING INSTRUCTIONS

Adjusting Trimming Length

Once a guide comb is attached, use the precision dial to select your desired trimming length from 1mm to 20mm. Ensure the dial is locked into position to maintain consistent length during use.



Image: A close-up view of the precision dial, indicating the various length settings available for trimming.

Trimming Your Beard

Turn on the shaver by pressing the power button. Hold the shaver against your skin and move it slowly against the direction of hair growth. The self-sharpening carbon steel blades ensure a smooth and efficient trim without pulling hair. The precise gap design enhances safety, allowing for a close shave without harming the skin.

2 LENGTHS OF LIMIT COMB FOR DIFFERENT LENGTHS OF BEARD



Image: A man demonstrating the use of the Ufree shaver to trim his beard, highlighting its ergonomic design.

Wet and Dry Use

The Ufree Electric Shaver is IPX7 waterproof, allowing for both wet and dry use. You can use it in the shower or with shaving foam/gel for a comfortable experience. Always ensure the charging port cover is securely closed when using in wet conditions.

Your browser does not support the video tag.

Video: This official product video from Ufree Inc. demonstrates the features and usage of the Precision Dial Adjustable Beard Trimmer, including attaching combs, adjusting settings, and general operation.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. The detachable blade can be easily removed and rinsed under running tap water. Use the incidental cleaning brush to remove any residual hair from the blade and the shaver.

body.



Image: A hand holding the shaver head under running water, illustrating the ease of cleaning the detachable blade.

TROUBLESHOOTING

- **Shaver not turning on:**

- Ensure the battery is charged. Connect the shaver to the USB charging cable and allow it to charge for at least 15-30 minutes before attempting to turn it on.
- Verify the power button is fully pressed.

- **Poor trimming performance or pulling hair:**

- Clean the blades and remove any accumulated hair.
- Ensure the guide comb is correctly attached and locked into place.
- The battery might be low. Recharge the shaver fully.

- **Shaver not charging:**

- Check if the USB cable is securely connected to both the shaver and the power source.
- Try a different USB port or power adapter.
- Ensure the charging port on the shaver is clean and free of debris.

- **Excessive noise or vibration:**

- Clean the shaver head and blades thoroughly.
- Ensure all components are correctly assembled.

SPECIFICATIONS

Model Number	U-1717
Brand	Ufree
Power Source	Battery Powered
Battery Capacity	500mAh
Charging Time	Approx. 2 hours
Operating Time	Up to 80 minutes
Waterproof Rating	IPX7

Adjustable Length Settings	1-20mm (20 precision settings)
Blade Material	Carbon Steel
Package Dimensions	7.01 x 3.98 x 2.01 inches
Item Weight	5.29 ounces

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Ufree user manual provided with your product or visit the [Ufree Brand Store on Amazon](#). You can also download the User Manual (PDF) directly from [this link](#).

