

[Manuals.plus](#) /

› [METER STAR](#) /

› METER STAR 11.25 inch Microwave Replacement Turntable Plate (Model MZP001)

METER STAR MZP001 (11-1/4 inch / 28.6cm)

METER STAR 11.25 inch Microwave Replacement Turntable Plate Instruction Manual

Model: MZP001 (11-1/4 inch / 28.6cm)

INTRODUCTION

This manual provides detailed instructions for the METER STAR 11.25 inch microwave replacement glass turntable plate. Designed for durability and ease of use, this plate is a suitable replacement for various microwave oven models. Please read this manual thoroughly to ensure proper installation and maintenance.

PRODUCT FEATURES

- **Durable Glass Construction:** Made from thickened, heat-resistant glass for long-lasting use.
- **Smooth Rotation:** Engineered to spin smoothly and quietly within the microwave.
- **Textured Surface:** Helps prevent dishes from sliding during microwave operation.
- **Easy to Clean:** The smooth surface allows for simple cleaning and maintenance.
- **Y-Bottom Design:** Features a Y-shaped base with three notches for secure fitting onto the microwave's bushing coupler.



Image: The METER STAR microwave turntable plate showcasing its Y-bottom design for secure placement and easy cleaning.

COMPATIBILITY

This 11.25 inch (11-1/4 inch / 28.6cm) replacement glass turntable plate is compatible with a wide range of microwave oven models from brands such as Samsung and G.E. It replaces part numbers including WB49X10097, WB39X0078, WB39X78, WB49X10034, PS651544, and AP3188581.

Key compatibility check:

1. Ensure your microwave's bushing coupler (the centerpiece that turns the plate) has three notches. These notches should align with the center of the replacement plate.
2. Measure the interior of your microwave to confirm it can accommodate an 11-1/4 inch (28.6cm) plate.

Partial list of compatible models: JEM25BF001, JEM25BF002, JEM25BF01, JEM25BF02, JEM25DM1BB, JEM25DM1WW, JEM25DM2BB, JEM25DM2WW, JEM25DM3BB, JEM25DM3WW, JEM25WF001, JEM25WF002, JEM25WF01, JEM25WF02, JEM31BF001, JEM31CF001, JEM31SF001, JEM31SF002, JEM31SF01, JEM31SF02, JEM31WF001, JES1136WL01, JES1136WL02, JES1139BL01, JES1139BL02, JES1139BL03, JES1139WL01, JES1139WL02, JES1139WL03, JES831WF001, JES838SH001, PEM1050DM1BB, PEM1050DM1CC, PEM1050SM1SS, PEM31DM1BB, PEM31DM1CC, PEM31DM1WW, PEM31DM2BB, PEM31DM2CC, PEM31DM2WW, PEM31DM3BB, PEM31DM3CC, PEM31DM3WW, PEM31SM1SS, PEM31SM2SS, PEM31SM3SS, PEM31SM4SS, REM25SJ01, REM25SJ02, REM25SJ03, WES1130DM1BB, WES1130DM2BB, ZEM200BF001, ZEM200BF01, ZEM200BF02, ZEM200BF03, ZEM200BF04, ZEM200BF05, ZEM200SF001, ZEM200SF01, ZEM200SF02, ZEM200SF03, ZEM200SF04, ZEM200SF05, ZEM200WF001.

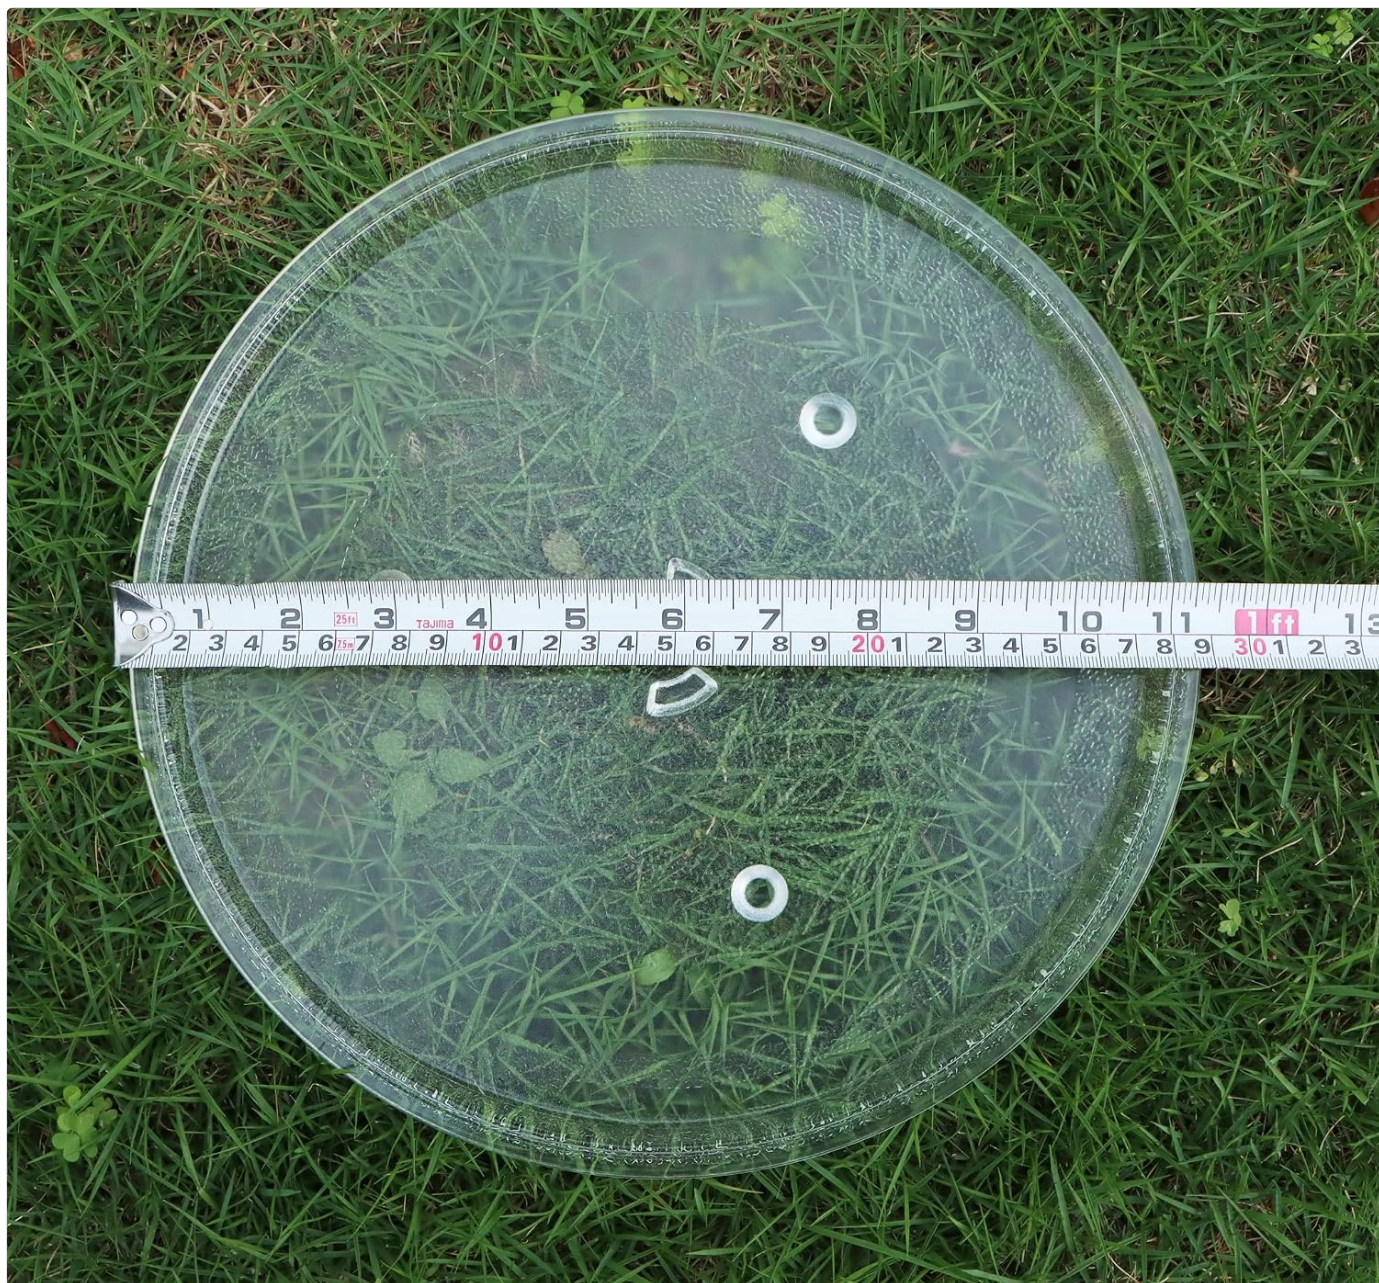


Image: A measuring tape indicating the diameter of the microwave turntable plate, confirming its size.

SETUP AND INSTALLATION

Installing your new METER STAR microwave turntable plate is a straightforward process:

1. Ensure your microwave oven is unplugged and cool.
2. Carefully remove any existing turntable plate or support ring.
3. Place the new METER STAR turntable plate onto the microwave's central bushing coupler. Ensure the three notches on the bottom of the plate align correctly with the coupler.
4. Gently rotate the plate to confirm it sits securely and can spin freely.
5. Plug in your microwave oven.

Your browser does not support the video tag.

Video: This video demonstrates the measurement and placement of various METER STAR microwave oven glass turntables, including the 11.25 inch model, highlighting the secure fit and different sizes available.

OPERATING INSTRUCTIONS

Once installed, the turntable plate operates automatically with your microwave oven. Place food items centrally on the plate for even heating. The plate will rotate during cooking cycles, ensuring consistent microwave exposure to all sides of your food.

MAINTENANCE AND CLEANING

To maintain the cleanliness and longevity of your turntable plate:

- **Regular Cleaning:** Clean the plate regularly to remove food spills and residue.
- **Washing:** The glass plate can be washed by hand with warm, soapy water or placed in a dishwasher. The textured side helps prevent slippage during cleaning.
- **Drying:** Ensure the plate is completely dry before placing it back into the microwave.
- **Avoid Harsh Abrasives:** Do not use abrasive cleaners or scouring pads that could scratch the glass surface.



Image: A visual representation of the microwave turntable plate being cleaned, demonstrating its smooth, easy-to-maintain surface.

TROUBLESHOOTING

If you encounter issues with your replacement turntable plate, consider the following:

- **Plate Not Spinning:** Check if the plate is correctly seated on the bushing coupler. Ensure the three notches are aligned. Verify that the coupler itself is functioning correctly.
- **Plate Wobbles:** Ensure the plate is flat and not damaged. Confirm that the support ring (if applicable) and coupler are properly positioned and undamaged.
- **Incorrect Size:** Double-check the diameter of your microwave's interior and the original plate against the specifications of this replacement plate.

SPECIFICATIONS

Attribute	Detail
Manufacturer	MADE IN METER STAR
Part Number	MZP001
Item Weight	2.42 pounds
Package Dimensions	12.84 x 12.81 x 1.93 inches
Size	11-1/4" (28.6cm)
Batteries Included?	No
Batteries Required?	No
ASIN	B0B17S2QT6
Date First Available	May 13, 2022

WARRANTY AND SUPPORT

For specific warranty information or customer support regarding your METER STAR microwave replacement turntable plate, please refer to the product packaging or contact the seller directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

