



[Manuals.plus](#) /

> [Gdrasuya10](#) /

> Gdrasuya10 8-Channel Digital Kitchen Timer (Model OT-MLLCR-3384-US-1) Instruction Manual

Gdrasuya10 OT-MLLCR-3384-US-1

Gdrasuya10 8-Channel Digital Kitchen Timer Instruction Manual

Model: OT-MLLCR-3384-US-1

INTRODUCTION

The Gdrasuya10 8-Channel Digital Kitchen Timer is designed for precise time management in busy kitchen environments, both commercial and home. This device allows for simultaneous tracking of up to eight different cooking tasks, ensuring optimal results and improved efficiency. Its robust stainless steel construction and user-friendly interface make it a reliable tool for any culinary setting.



Image: The Gdrasuya10 8-Channel Digital Kitchen Timer, highlighting its 110V compatibility and multi-channel display.

SETUP

Unboxing and Initial Inspection

Upon receiving your Gdrasuya10 8-Channel Digital Kitchen Timer, carefully unpack all components. The package should include:

- 1 x 8-Channel Digital Timer Unit
- 1 x Instruction Manual (this document)
- 2 x Timer Fixing Iron Pieces (for mounting)
- 1 x Power Cord (AC110V 60Hz)

Inspect the unit for any signs of damage during transit. If any components are missing or damaged, please contact customer support.

Powering On

Connect the provided power cord to the timer unit and then plug it into a standard AC110V 60Hz power outlet. The timer will emit an initial sound, and the display will illuminate.

Placement and Mounting Options

The timer can be placed on a countertop using its integrated stand or mounted to a wall using the included fixing iron pieces. The stand allows for adjustable viewing angles.



Image: Rear view of the timer showing the power input and mounting points.



Image: The two included metal fixing iron pieces for secure mounting.

Video: An overview of the 8-channel kitchen timer, demonstrating its features and setup options.

OPERATING INSTRUCTIONS

The Gdrasuya10 timer features a user-friendly interface with dedicated buttons for each function.



Image: Detailed view of the timer's display and control buttons.

Setting a Countdown Timer

1. Press the corresponding channel button (1-8) to select the desired timer. The display for that channel will begin to flash.
2. Use the **INCREASE** (▲) and **DECREASE** (▼) buttons to set the desired time. Hold the buttons for faster adjustment.
3. Press the selected channel button again to confirm the time and start the countdown.
4. To pause or stop a timer, press its corresponding channel button.

Adjusting Alarm Volume

The timer features an adjustable alarm volume. Use the dedicated volume control knob, typically located on the side of the unit, to increase or decrease the sound level. The alarm is designed to be loud enough for busy environments.

Switching Time Modes (Minute:Second or Hour:Minute)

To switch between Minute:Second (M:S) and Hour:Minute (H:M) display modes, first press the **ON/OFF** button. Then, long-press the **TIME** button until the display mode changes. Press the **DECREASE** button to save the setting.

Video: A short preview demonstrating how to adjust the volume and set a countdown on the timer.

Setting Multiple Reminders (3-Stage)

Each channel includes a 3-stage reminder function. This is useful for tasks requiring intermediate steps, such as turning fried food or adjusting temperature during cooking. While a timer is running, press the **REMINDER** button to set a reminder. The timer will beep at preset intervals before the main countdown ends.

Video: Demonstration of setting multiple timers and reminders on the BIZOEPRO 8-Channel Commercial Kitchen Cooking Timer.

Using Custom Labels

The timer may come with customizable labels (e.g., 'Fried Chicken', 'Pork Chops', 'Shrimp') that can be affixed next to each channel. This helps in quickly identifying which timer corresponds to which cooking task, especially when managing multiple items simultaneously.

MAINTENANCE

Cleaning

The timer features a stainless steel body and waterproof button design, making it easy to clean. Use a soft, damp cloth to wipe down the surface. Avoid abrasive cleaners or harsh chemicals that could damage the finish or electronic components. Ensure the unit is unplugged before cleaning.

Video: A short preview demonstrating the timer's water resistance and ease of cleaning.

TROUBLESHOOTING

- **No Power/Display Off:** Ensure the power cord is securely plugged into both the timer and a working electrical outlet. Check the power source.
- **Alarm Too Quiet/Loud:** Adjust the volume using the dedicated control knob on the side of the unit.
- **Timer Not Starting:** Verify that the time has been set for the desired channel and that the channel button has been pressed to initiate the countdown.
- **Inaccurate Timing:** If you suspect timing inaccuracies, ensure the unit is operating within its specified voltage and frequency. If issues persist, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Size	30 x 10 x 3.5 cm (11.81 x 3.94 x 1.38 inches)
Weight	700 g (1.54 lbs)
Color	Black+Silver
Material	Stainless Steel Frame
Input Voltage	AC110V 60Hz
Power Consumption	2~10W
Number of Channels	8 Independent Channels
Alarm Features	High decibel buzzer, adjustable volume, 3-stage reminder
Time Modes	Hours/Minutes mode or Minutes/Seconds mode



Image: The timer with its physical dimensions clearly indicated.

WARRANTY AND SUPPORT

For technical assistance, troubleshooting, or inquiries regarding product warranty, please contact Gdrasuya10 customer service through the retailer where the product was purchased. Please have your model number (OT-MLLCR-3384-US-1) and purchase date available when contacting support.